

STEERING COLUMN ASSY

COMPONENTS

5005A–01

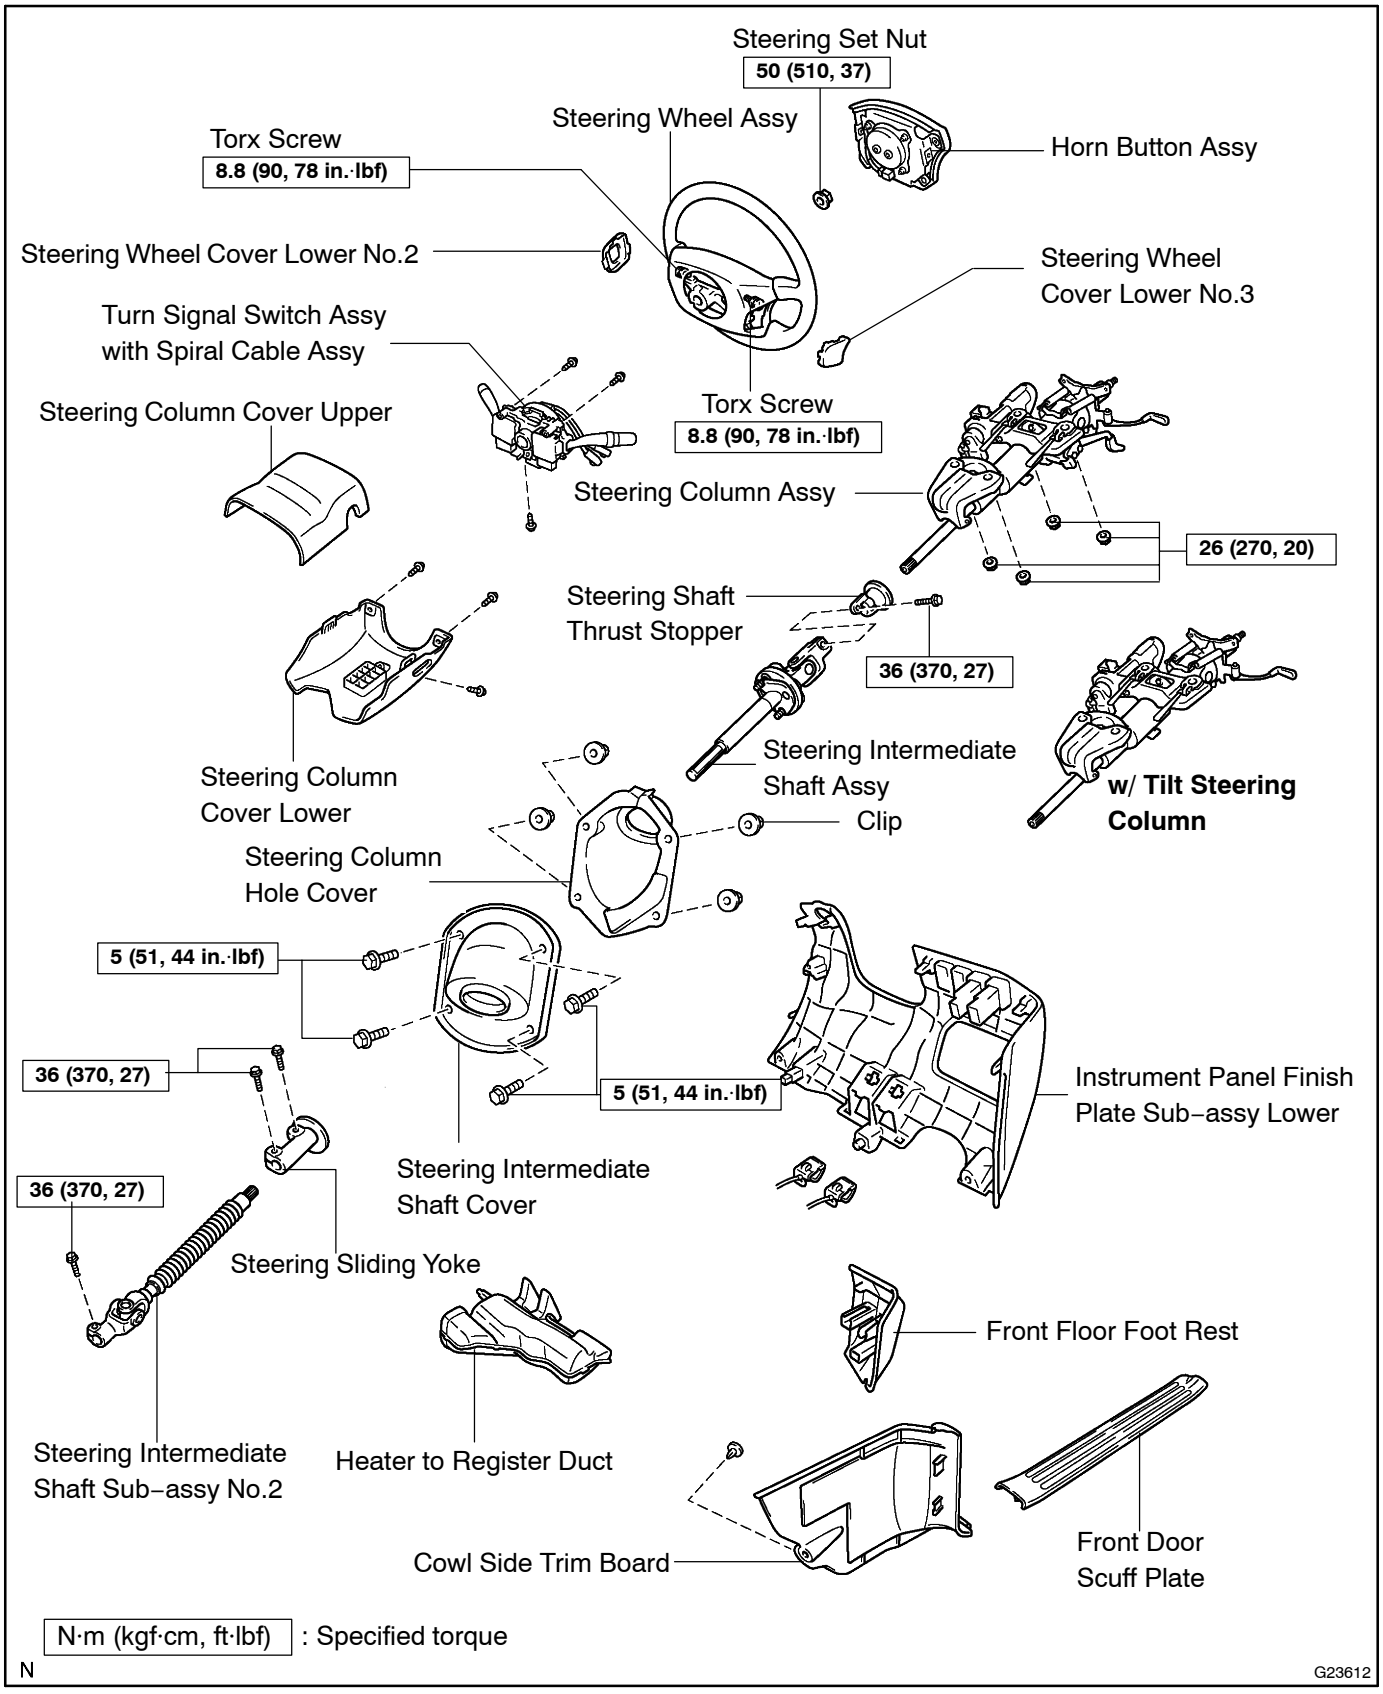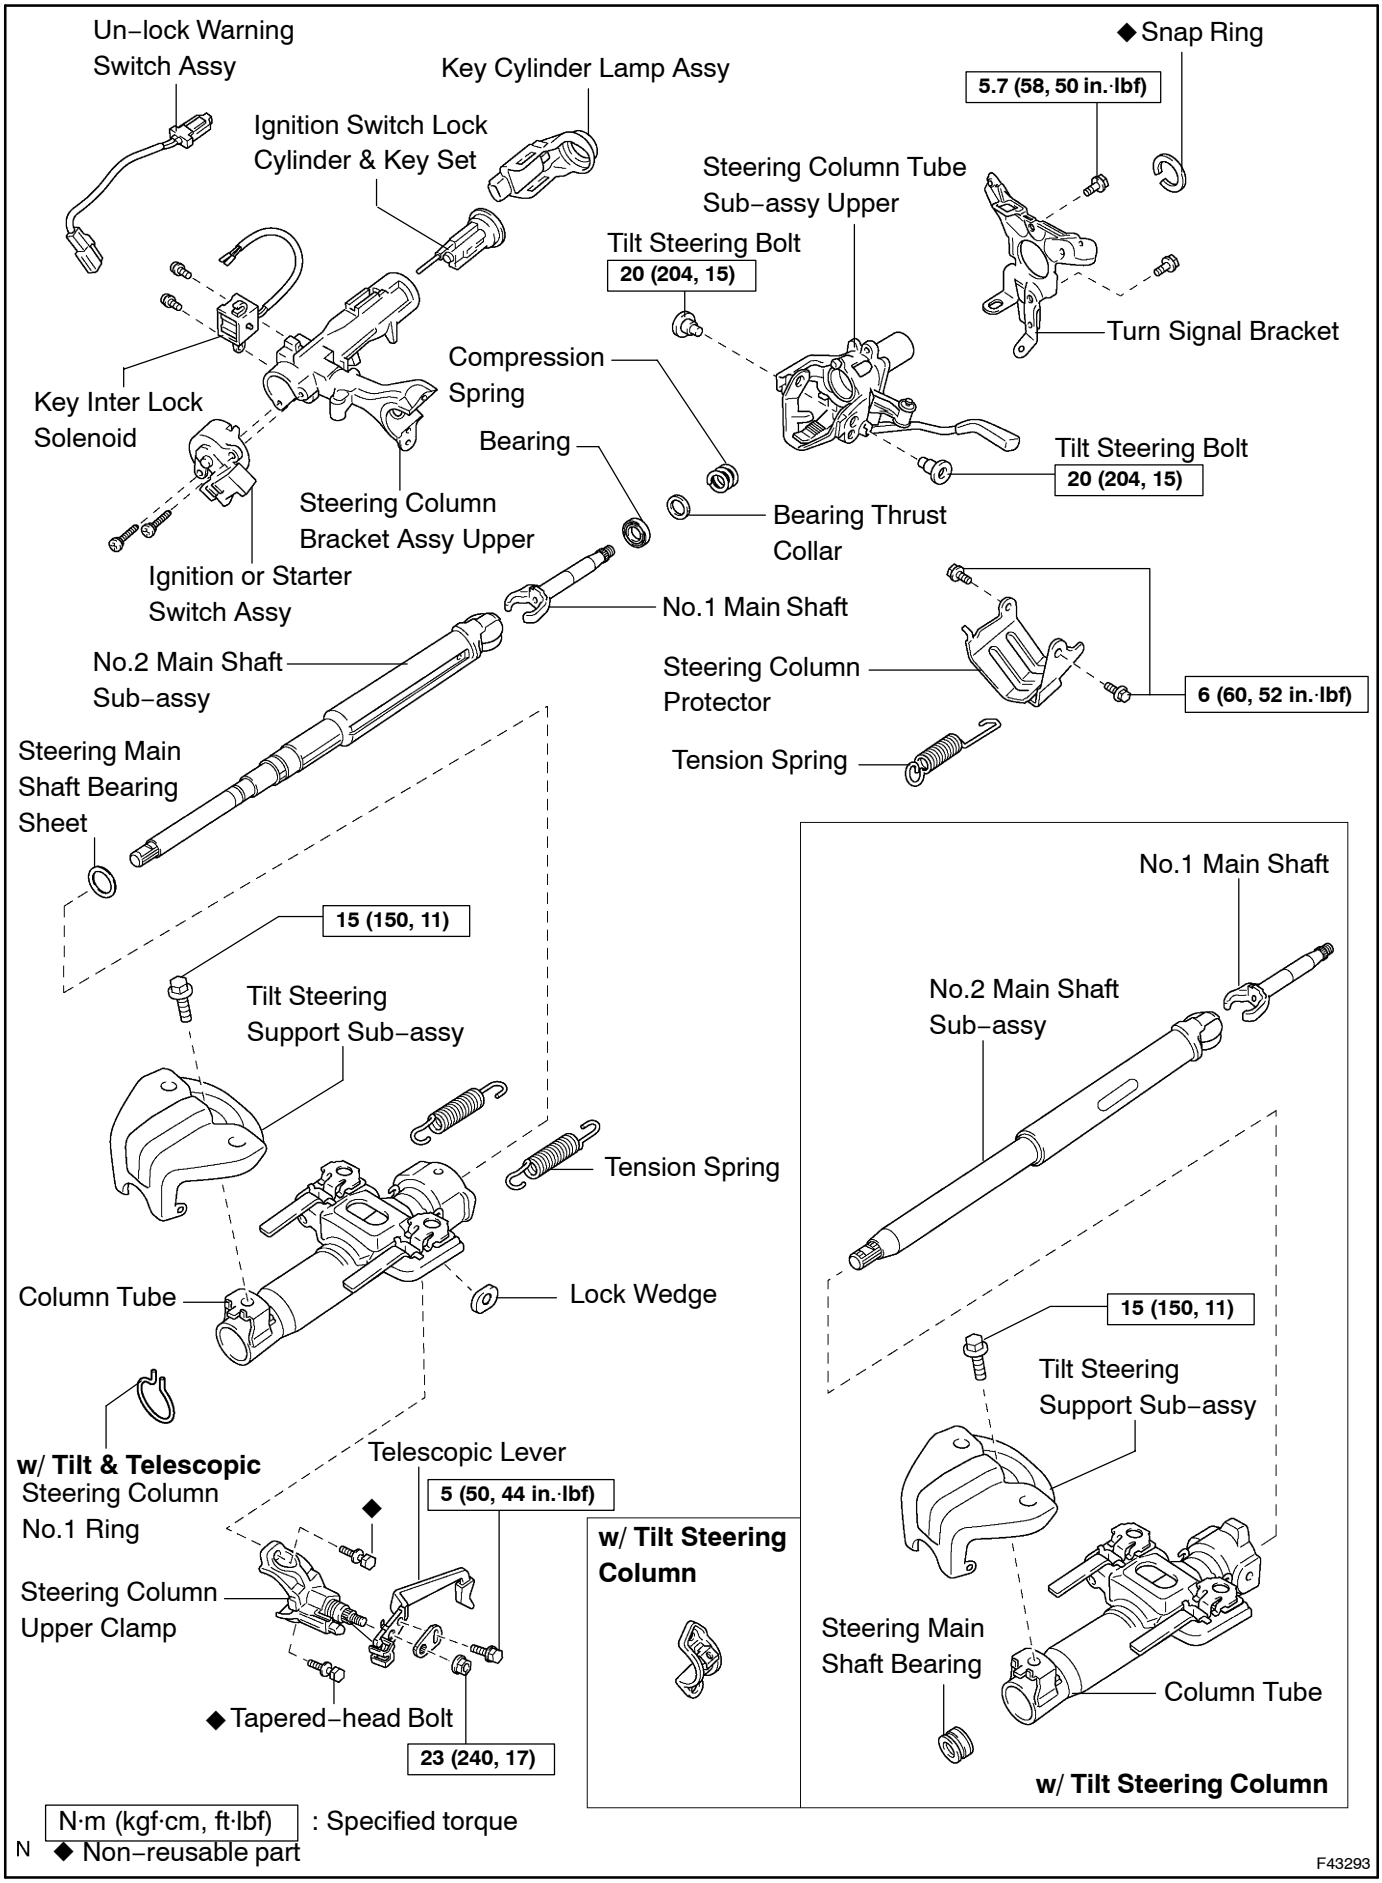


Un–lock Warning Switch Assy
Key Cylinder Lamp Assy
Ignition Switch Lock Cylinder & Key Set
◆ Snap Ring
5.7 (58, 50 in.·lbf)
Steering Column Tube Sub–assy Upper
Tilt Steering Bolt
20 (204, 15)
Turn Signal Bracket
Compression Spring
Key Inter Lock Solenoid
Bearing
Tilt Steering Bolt
20 (204, 15)
Steering Column Bracket Assy Upper
Bearing Thrust Collar
Ignition or Starter Switch Assy
No.1 Main Shaft
No.2 Main Shaft Sub–assy
Steering Column Protector
6 (60, 52 in.·lbf)
Tension Spring
Steering Main Shaft Bearing Sheet
15 (150, 11)
Tilt Steering Support Sub–assy
Tension Spring
Column Tube
Lock Wedge
w/ Tilt & Telescopic
Steering Column No.1 Ring
Telescopic Lever
5 (50, 44 in.·lbf)
Steering Column Upper Clamp
◆ Tapered–head Bolt
23 (240, 17)
w/ Tilt Steering Column
No.1 Main Shaft
No.2 Main Shaft Sub–assy
15 (150, 11)
Tilt Steering Support Sub–assy
Steering Main Shaft Bearing
Column Tube
w/ Tilt Steering Column
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
F43293