


POWER STEERING LINK ASSY

COMPONENTS

510B3–01

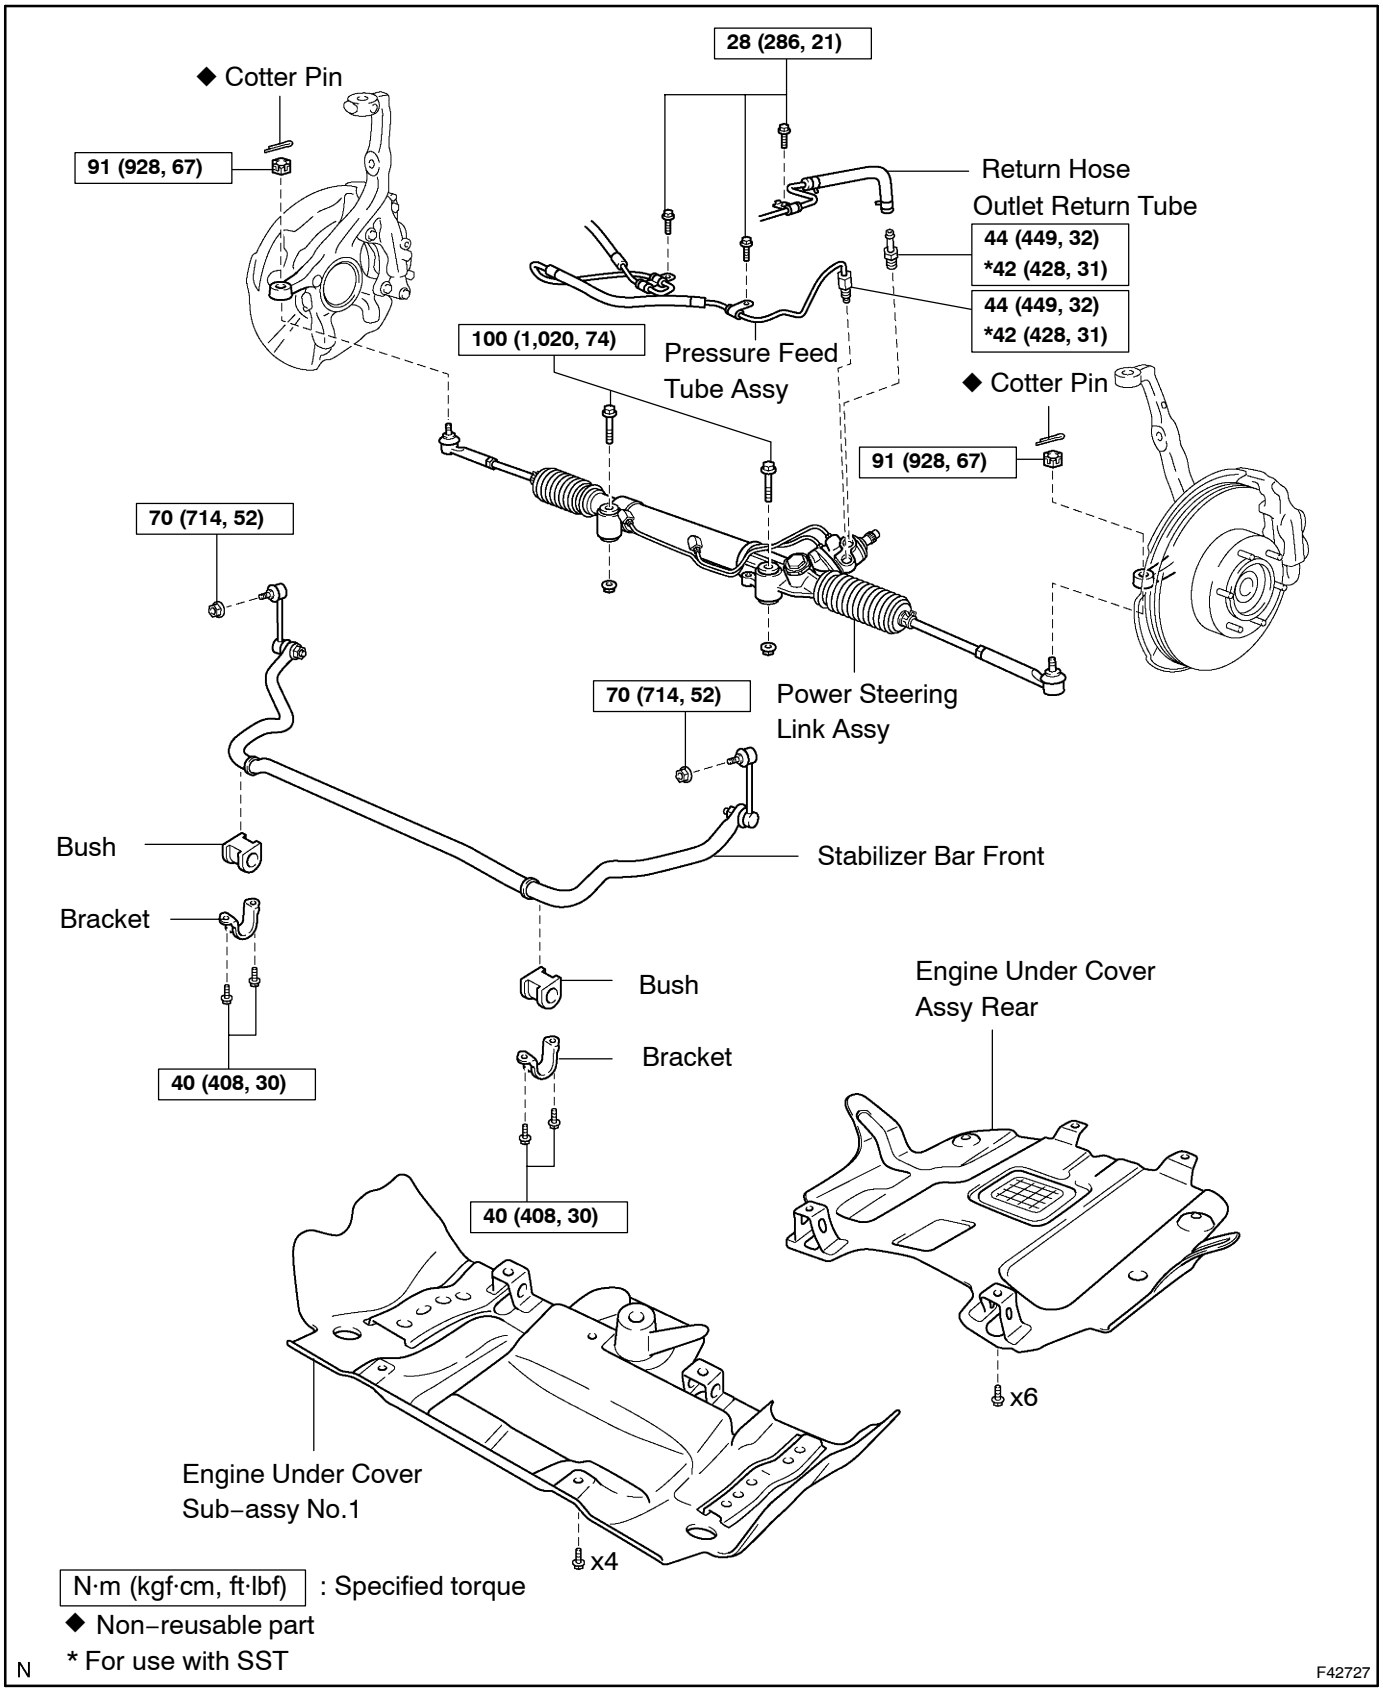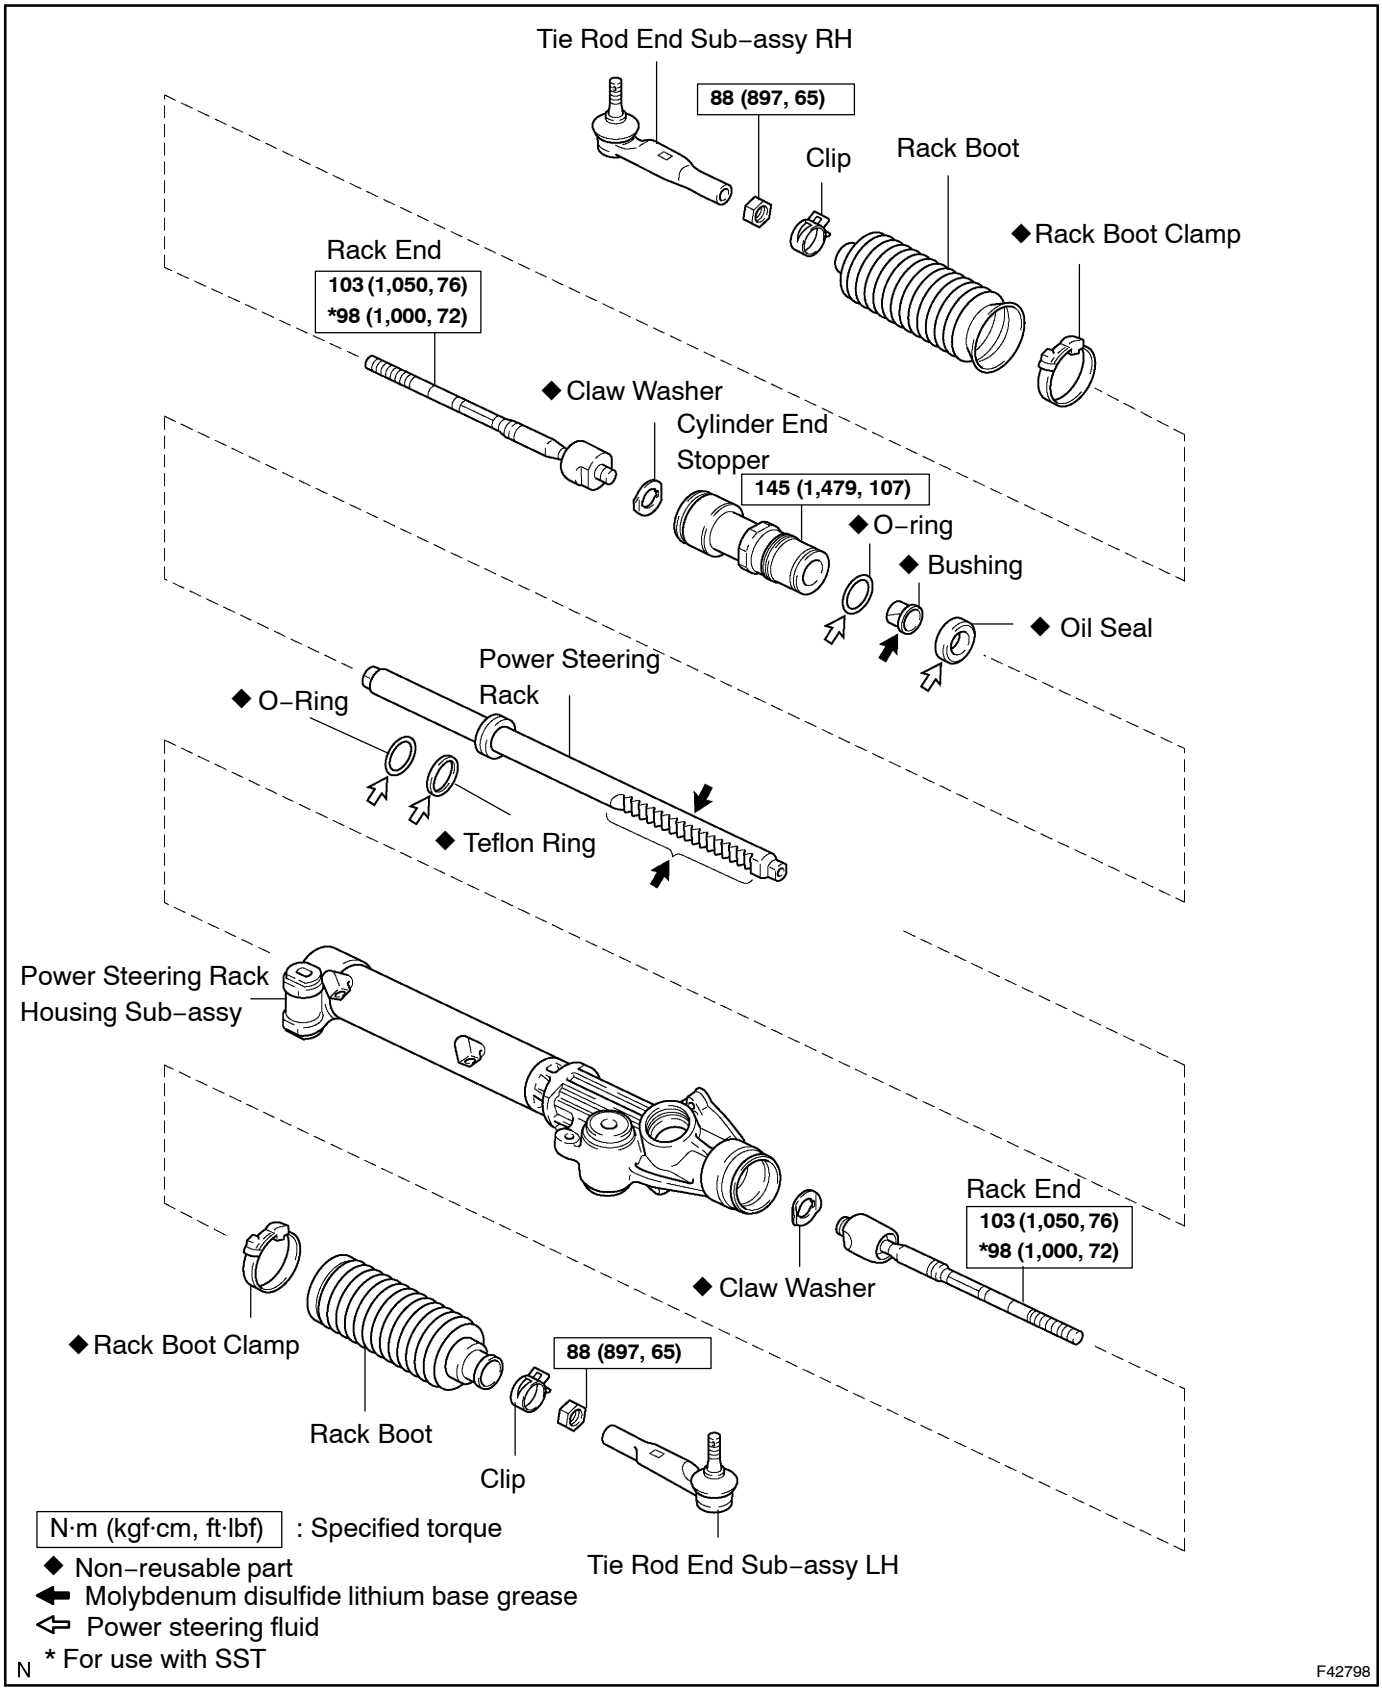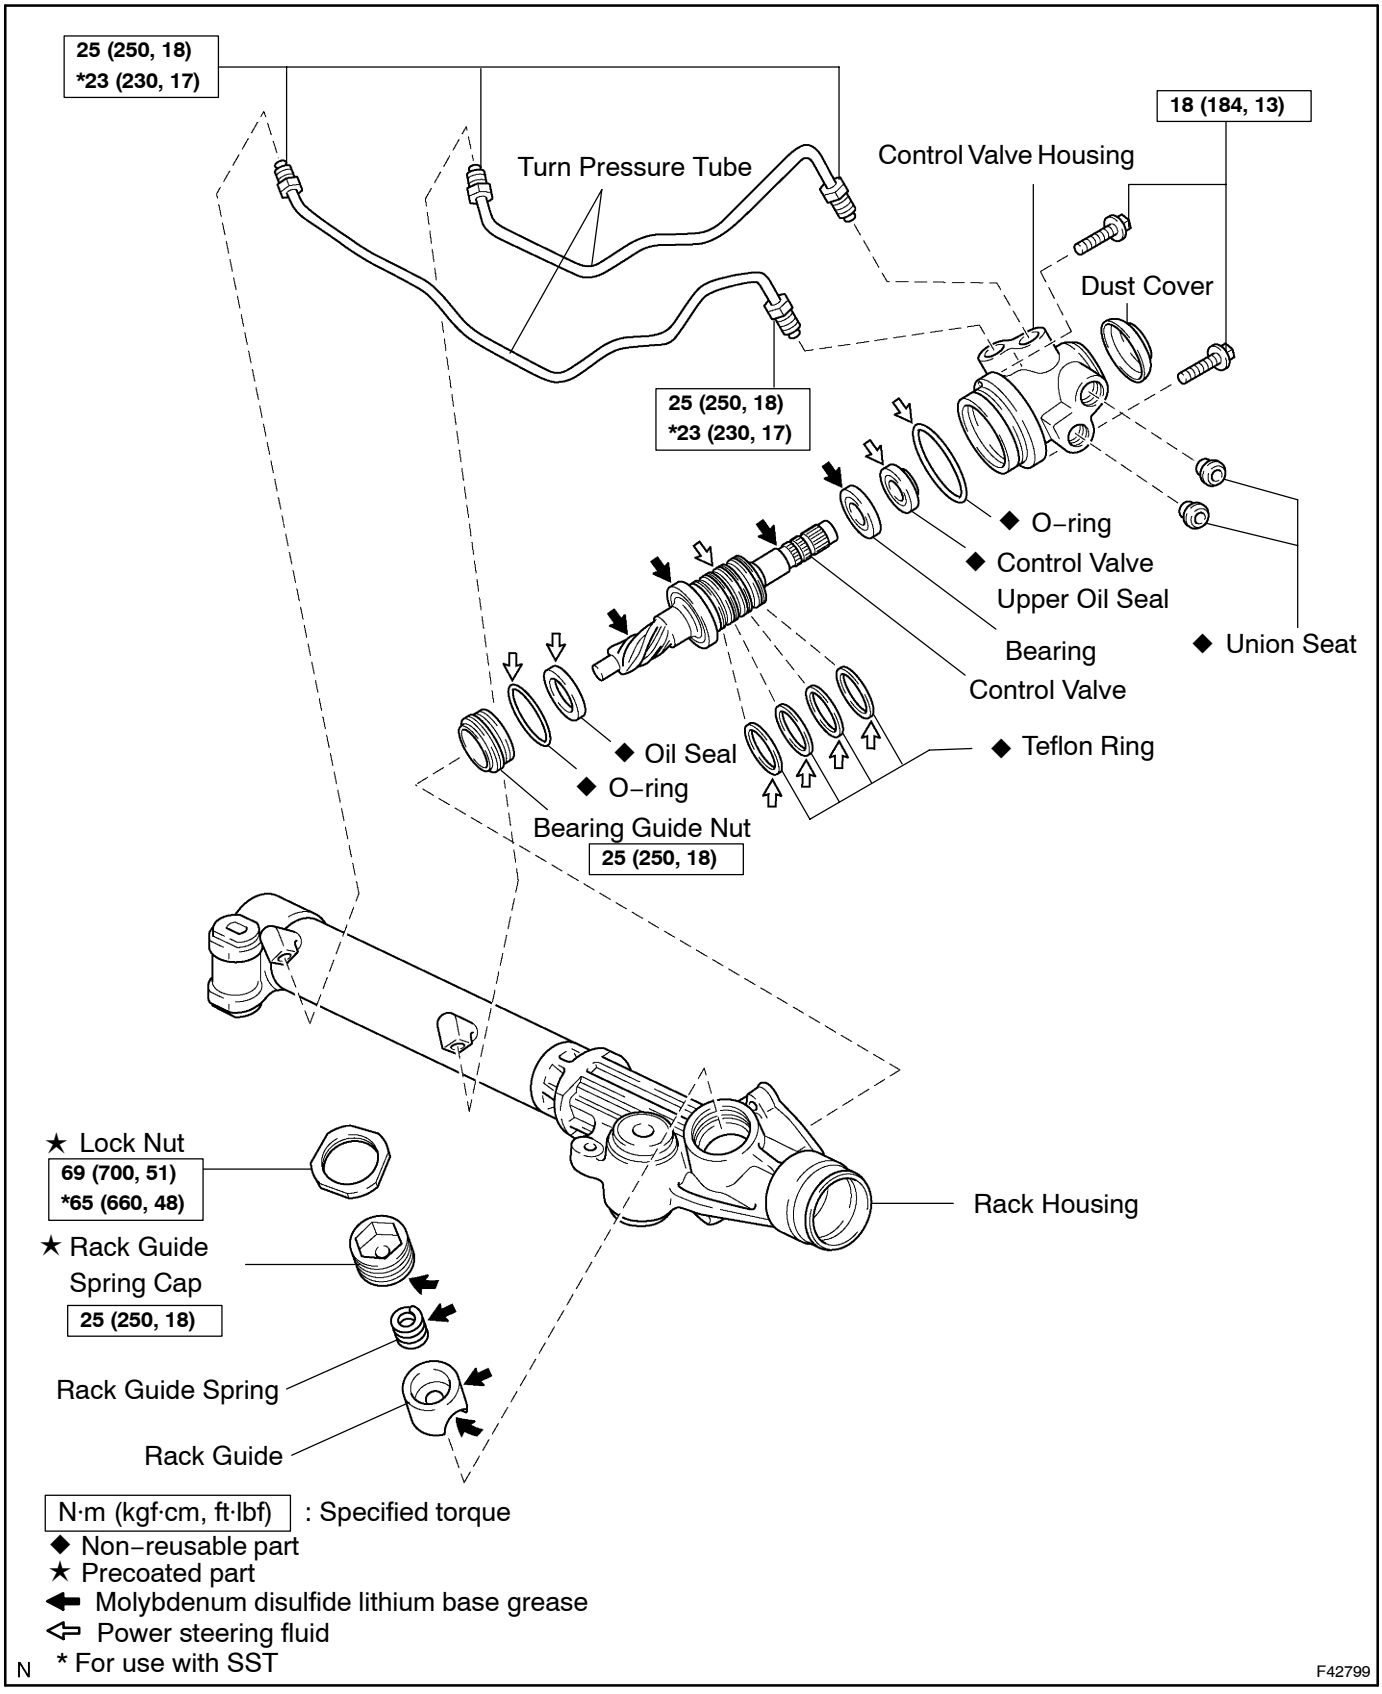


Tie Rod End Sub–assy RH
88 (897, 65)
Clip
Rack Boot
◆Rack Boot Clamp
Rack End
103 (1,050, 76)
*98 (1,000, 72)
◆Claw Washer
Cylinder End
Stopper
145 (1,479, 107)
◆O–ring
◆Bushing
◆Oil Seal
Power Steering
Rack
◆O–Ring
◆Teflon Ring
Power Steering Rack
Housing Sub–assy
Rack End
103 (1,050, 76)
*98 (1,000, 72)
◆Claw Washer
◆Rack Boot Clamp
88 (897, 65)
Rack Boot
Clip
Tie Rod End Sub–assy LH
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
N
F42798


25 (250, 18)
*23 (230, 17)
Turn Pressure Tube
18 (184, 13)
Control Valve Housing
Dust Cover
25 (250, 18)
*23 (230, 17)
◆ O–ring
◆ Control Valve Upper Oil Seal
Bearing
Control Valve
◆ Union Seat
◆ Oil Seal
◆ O–ring
Bearing Guide Nut
25 (250, 18)
◆ Teflon Ring
★ Lock Nut
69 (700, 51)
*65 (660, 48)
Rack Housing
★ Rack Guide Spring Cap
25 (250, 18)
Rack Guide Spring
Rack Guide
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
Molybdenum disulfide lithium base grease
Power steering fluid
* For use with SST
N
F42799