

AIR CONDITIONING RADIATOR ASSY


COMPONENTS

550SM–01

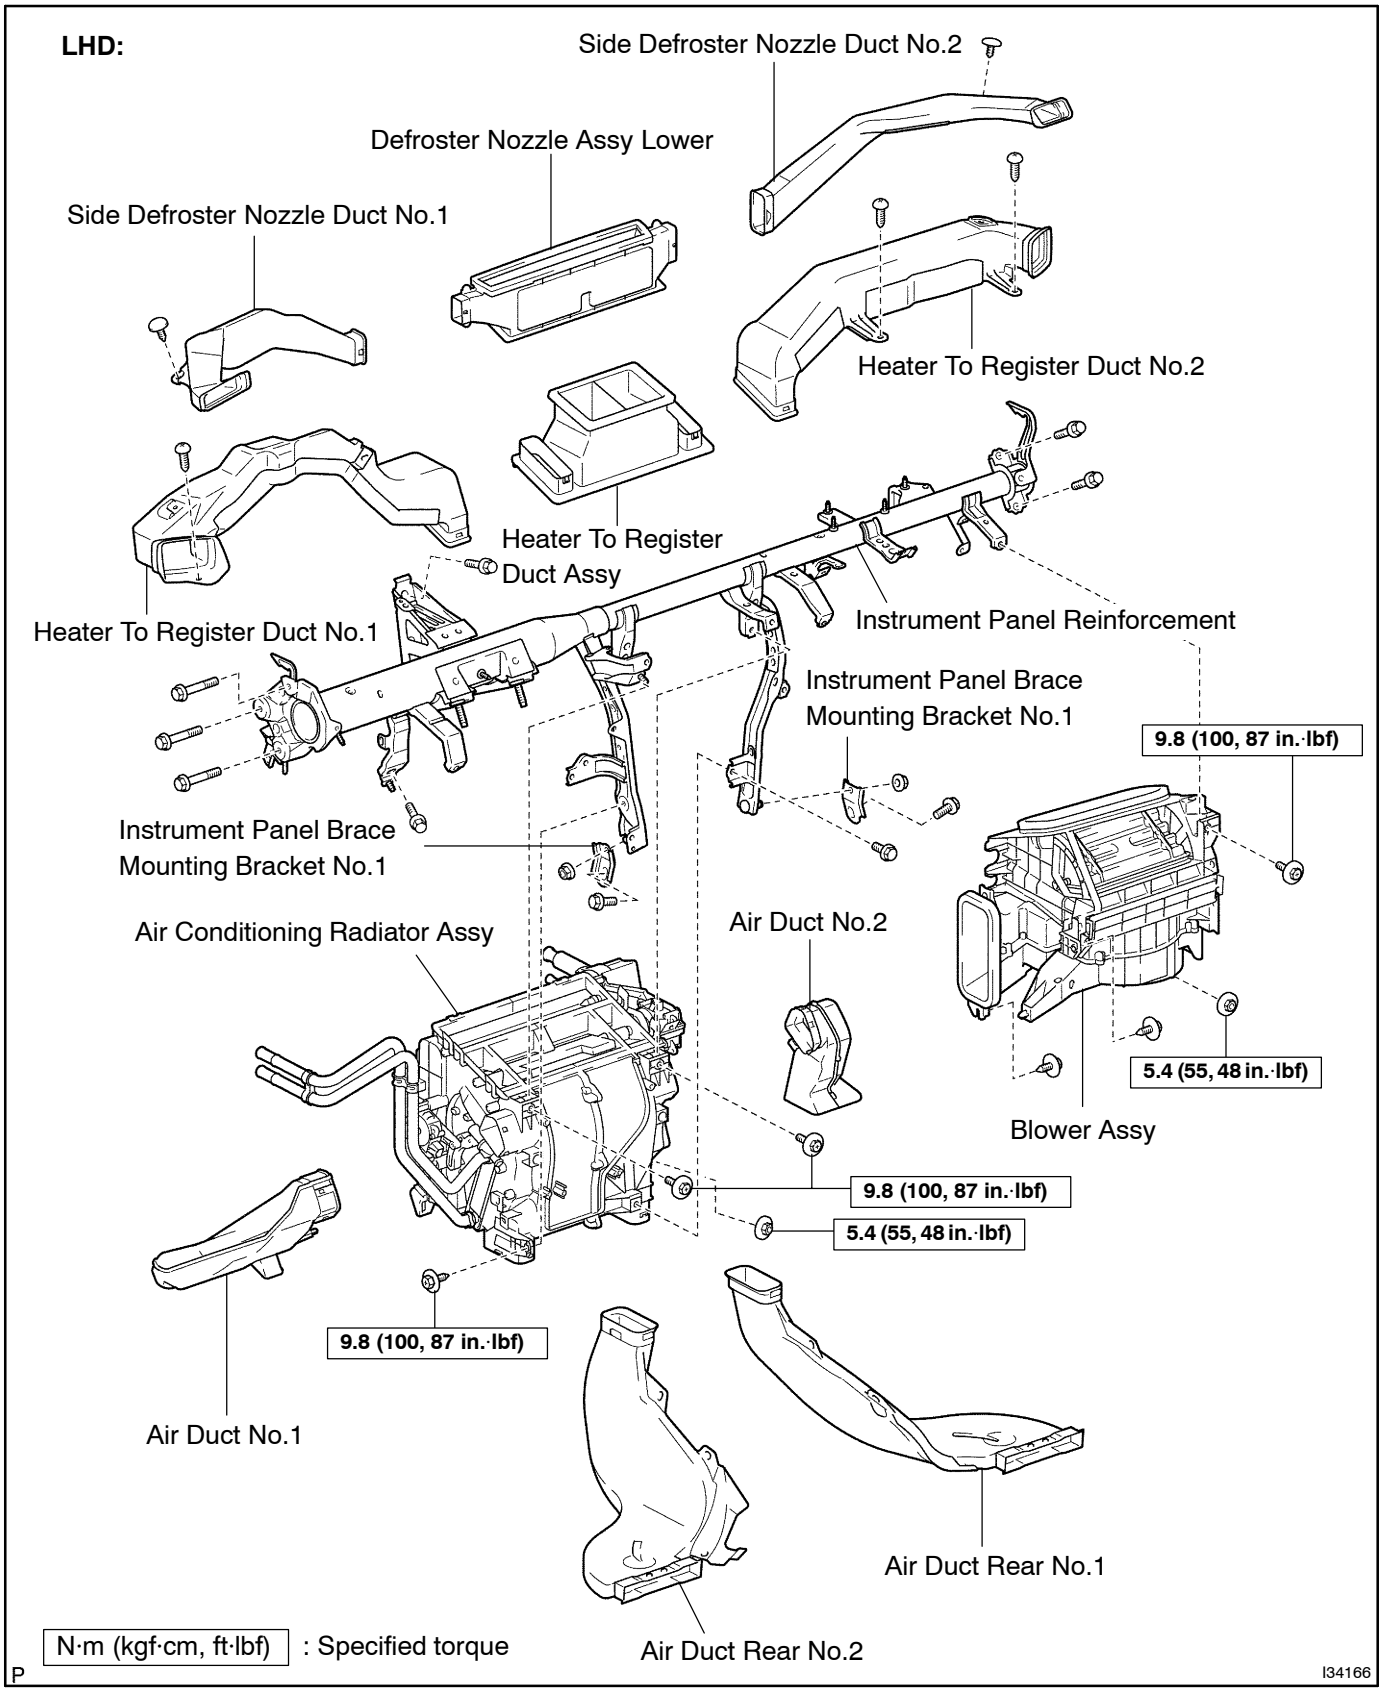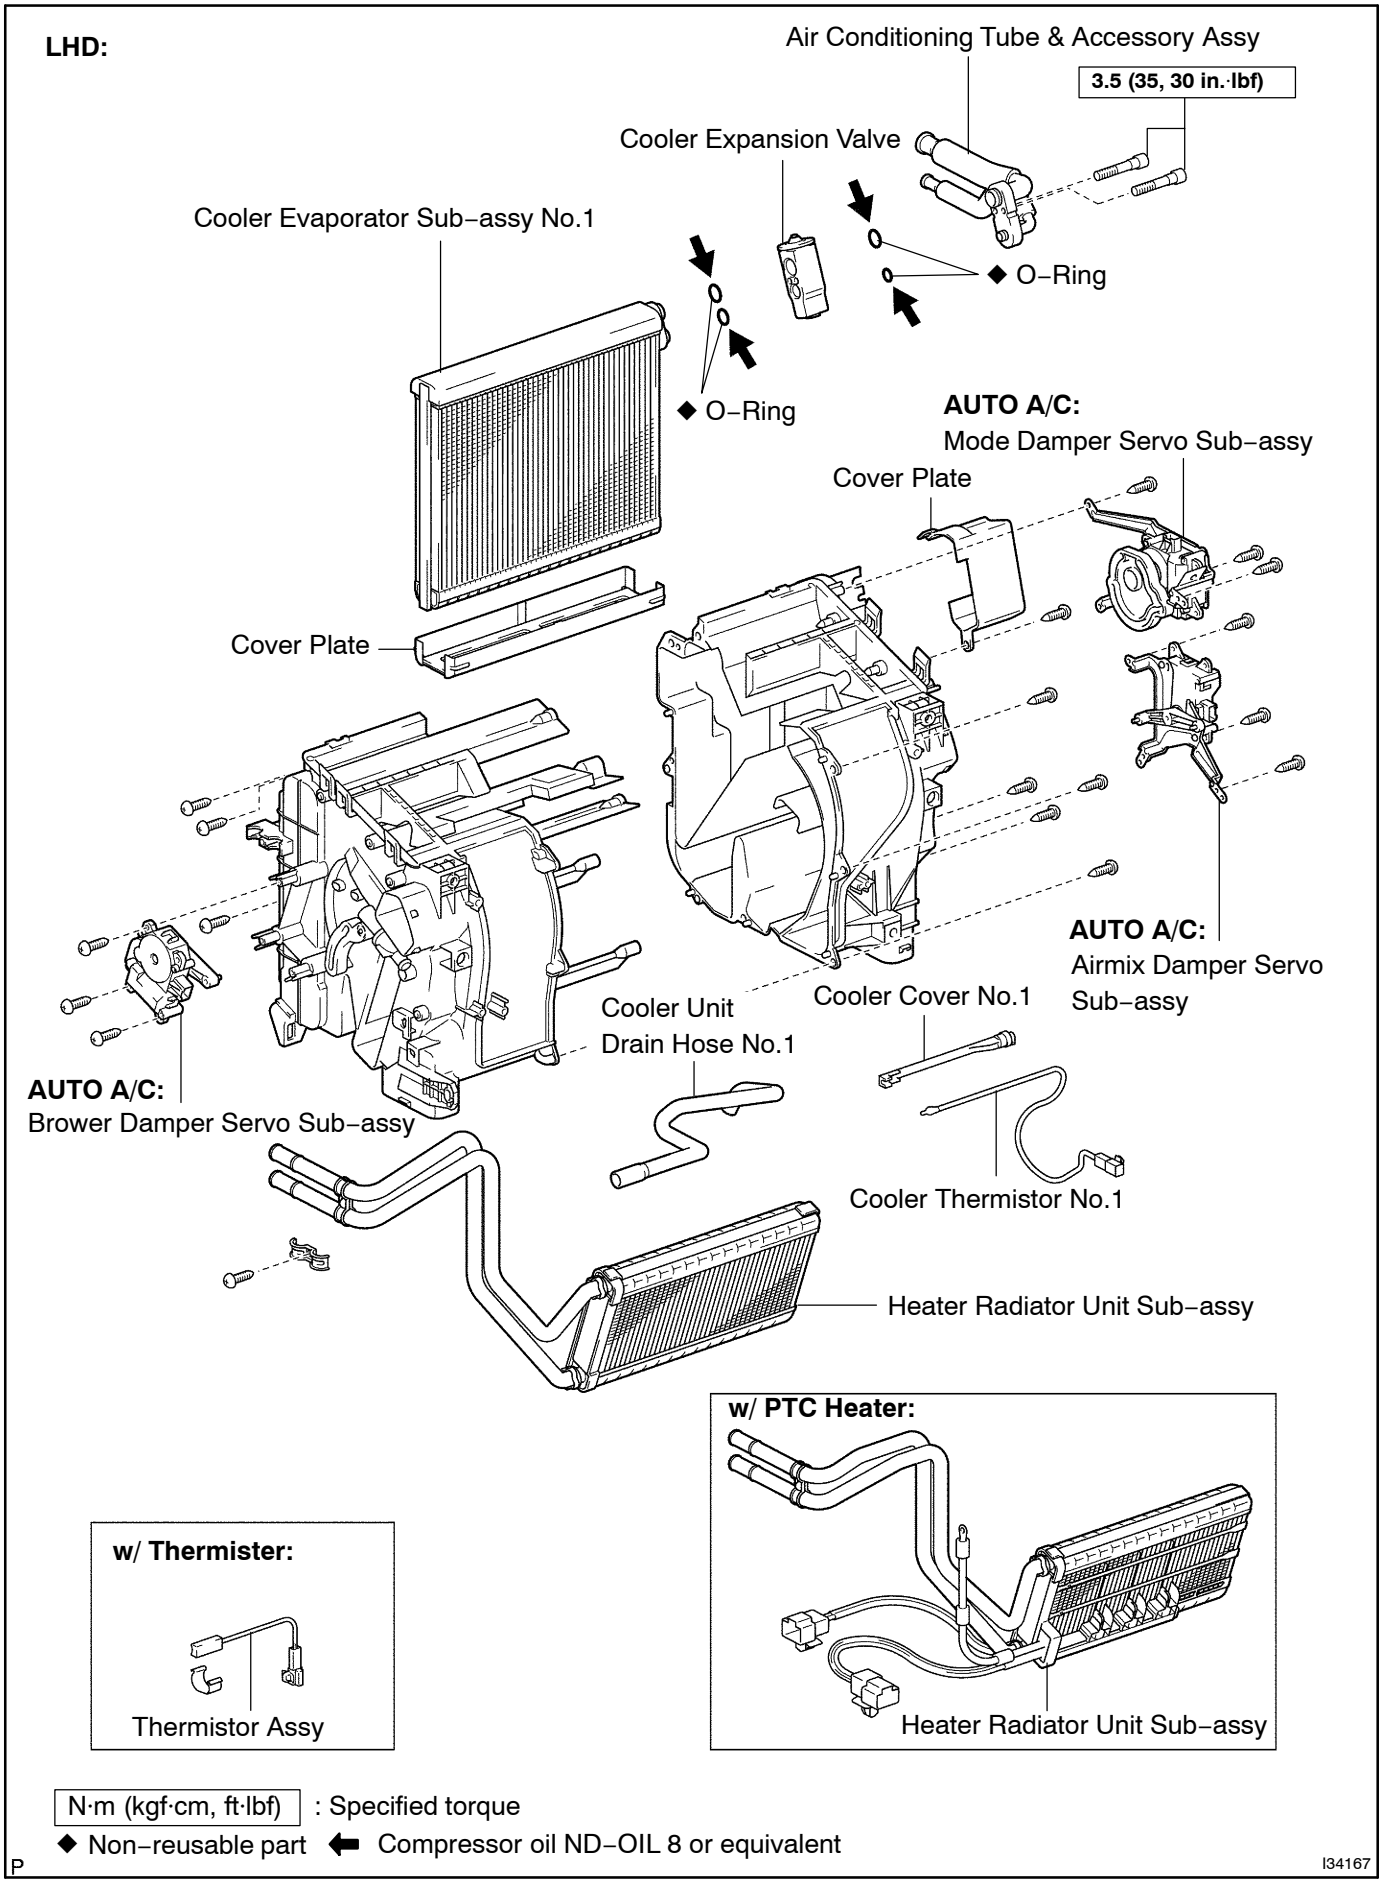


LHD:
Air Conditioning Tube & Accessory Assy
3.5 (35, 30 in.·lbf)
Cooler Expansion Valve
Cooler Evaporator Sub–assy No.1
◆ O–Ring
◆ O–Ring
AUTO A/C:
Mode Damper Servo Sub–assy
Cover Plate
Cover Plate
AUTO A/C:
Airmix Damper Servo Sub–assy
Cooler Unit Drain Hose No.1
Cooler Cover No.1
AUTO A/C:
Brower Damper Servo Sub–assy
Cooler Thermistor No.1
Heater Radiator Unit Sub–assy
w/ PTC Heater:
Heater Radiator Unit Sub–assy
w/ Thermister:
Thermistor Assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part ⬅ Compressor oil ND–OIL 8 or equivalent
P
I34167


RHD:

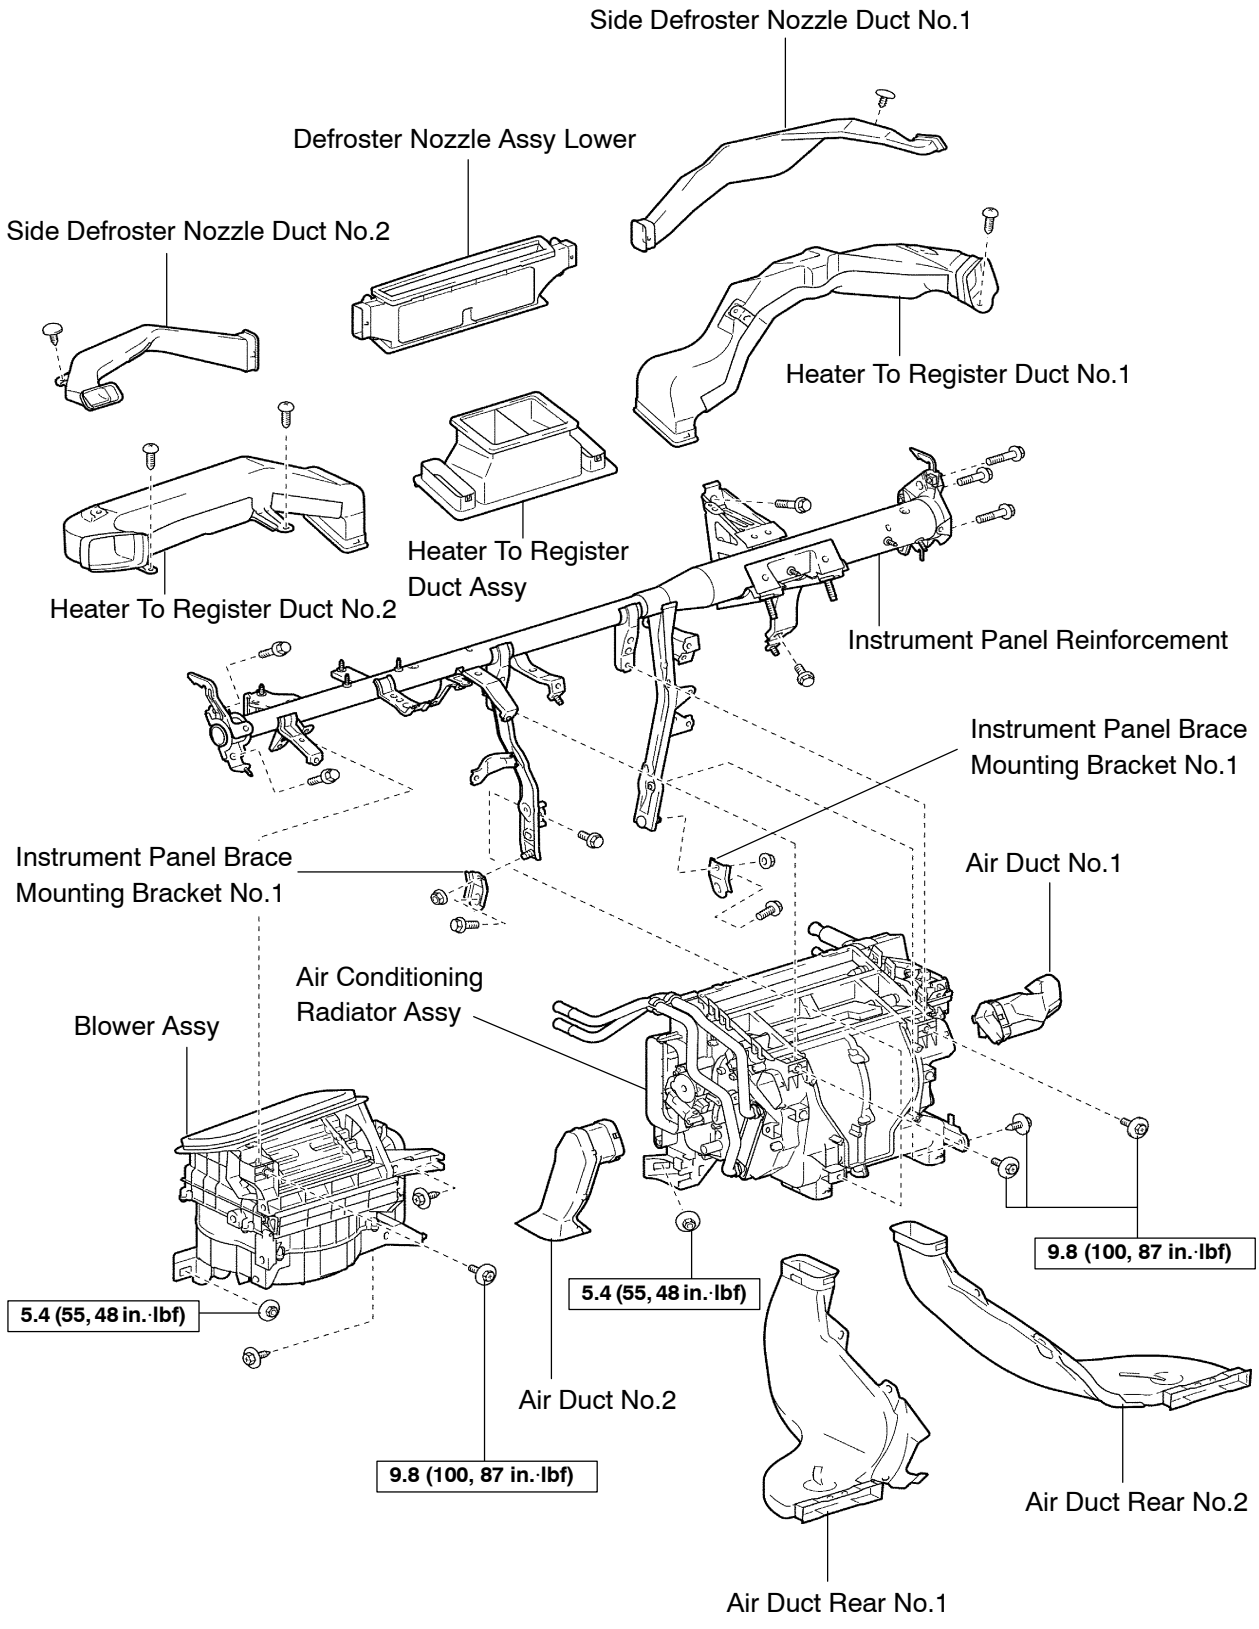

P

N·m (kgf·cm, ft·lbf) : Specified torque

I34390

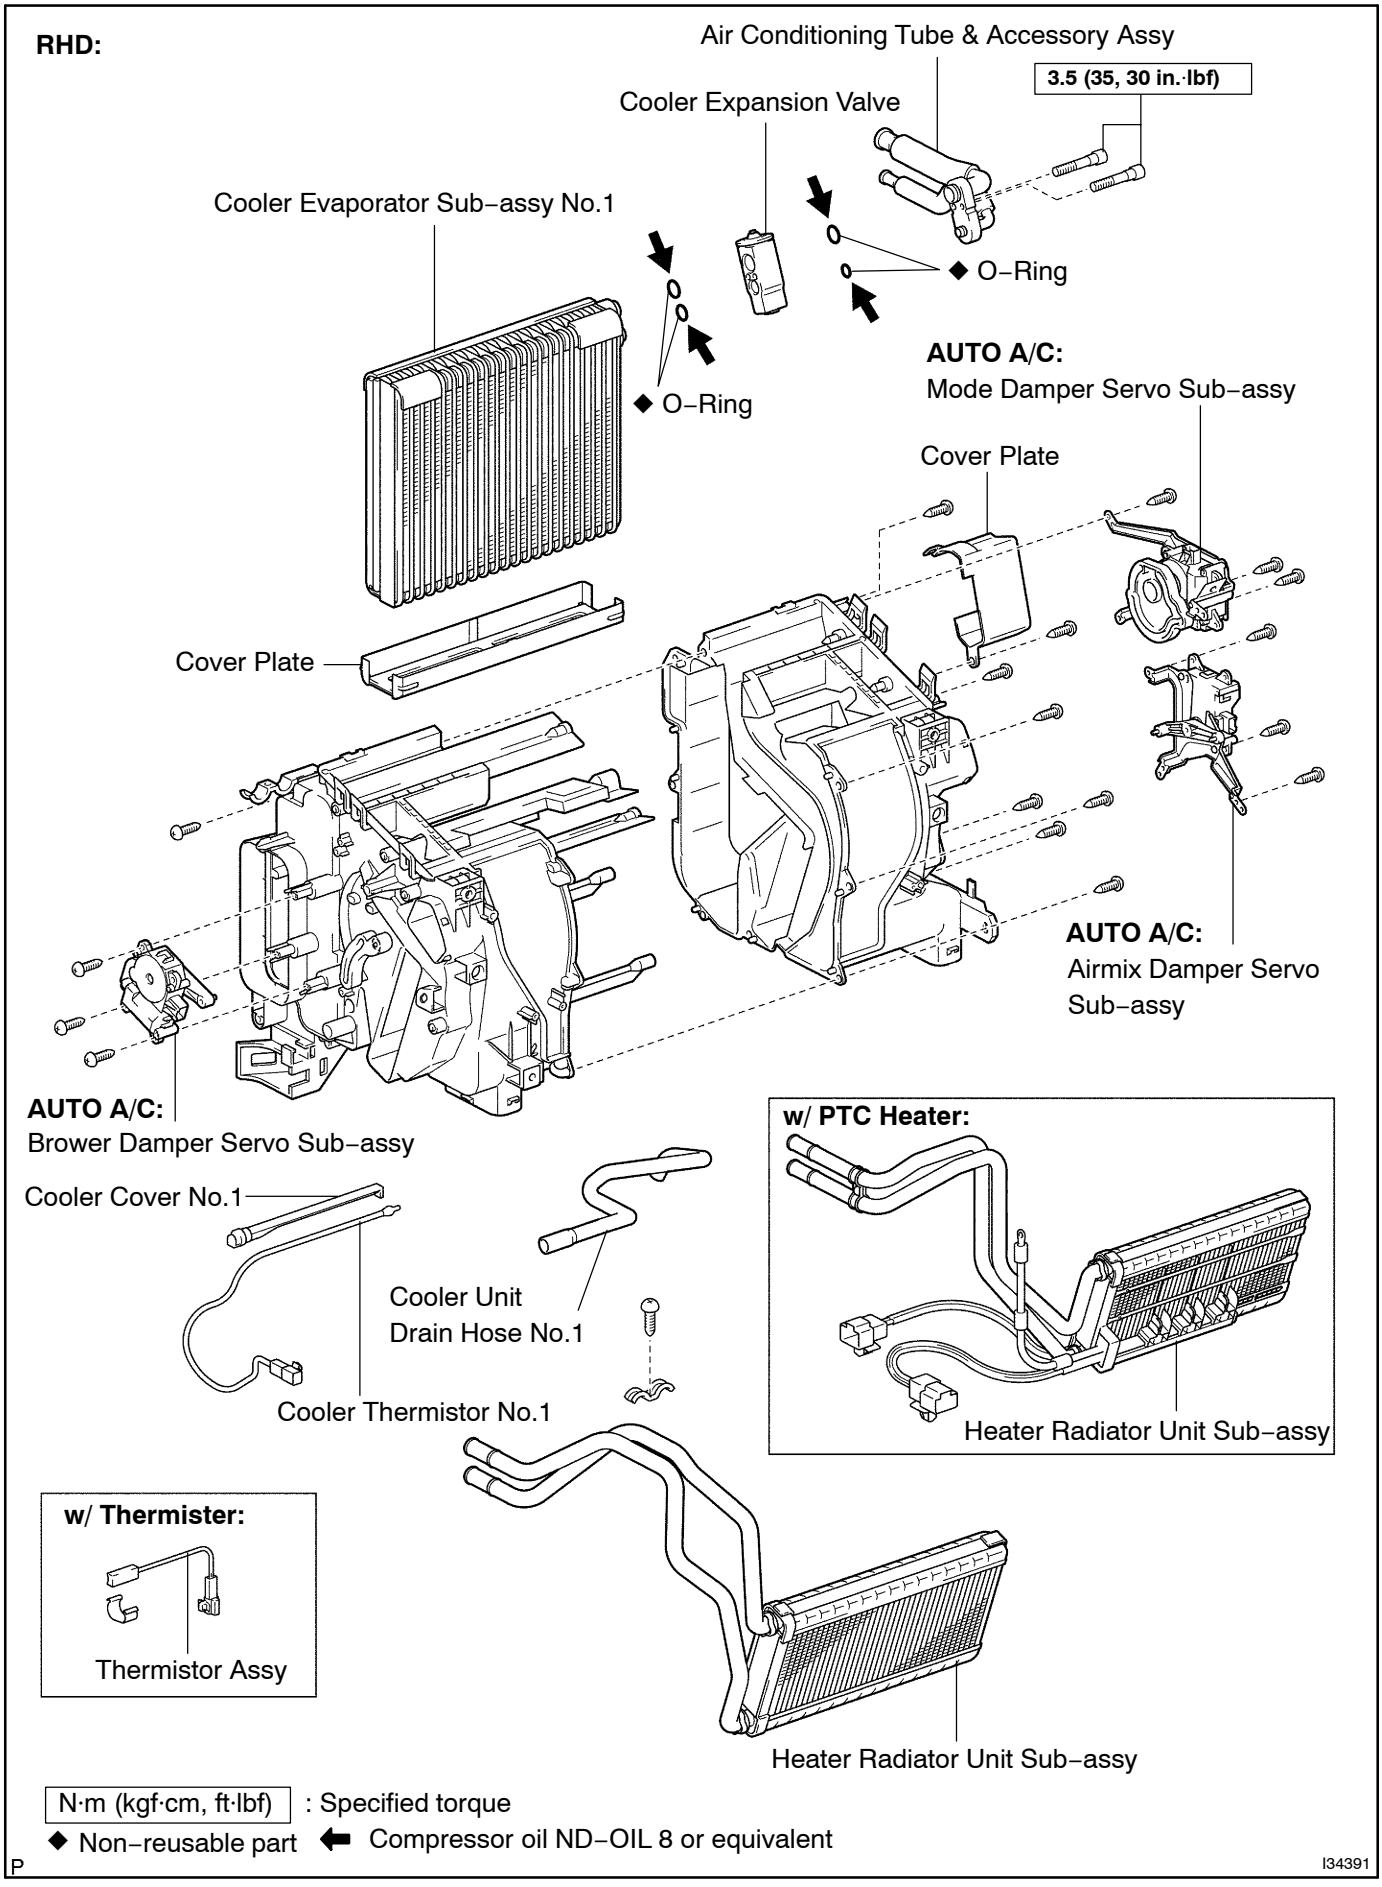
RHD:
Air Conditioning Tube & Accessory Assy
3.5 (35, 30 in.·lbf)
Cooler Expansion Valve
Cooler Evaporator Sub–assy No.1
◆ O–Ring
◆ O–Ring
AUTO A/C:
Mode Damper Servo Sub–assy
Cover Plate
Cover Plate
AUTO A/C:
Airmix Damper Servo Sub–assy
AUTO A/C:
Brower Damper Servo Sub–assy
w/ PTC Heater:
Cooler Cover No.1
Cooler Unit Drain Hose No.1
Cooler Thermistor No.1
Heater Radiator Unit Sub–assy
w/ Thermister:
Thermistor Assy
Heater Radiator Unit Sub–assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part ⬅ Compressor oil ND–OIL 8 or equivalent
P
I34391