
HEATER AMPLIFIER ASSY

550SH–01

REPLACEMENT

1. REMOVE FRONT DOOR SCUFF PLATE RH (See page 71–13)
2. REMOVE COWL SIDE TRIM BOARD RH (See page 71–13)
3. REMOVE INSTRUMENT PANEL UNDER COVER NO.2 (See page 71–13)
4. REMOVE GLOVE COMPARTMENT DOOR SUB–ASSY (See page 71–13)
5. REMOVE INSTRUMENT PANEL ORNAMENT (See page 71–13)
6. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71–13)
7. REMOVE DISC PLAYER CHANGER W/BRACKET (W/ CD CHANGER) (See page 67–15)

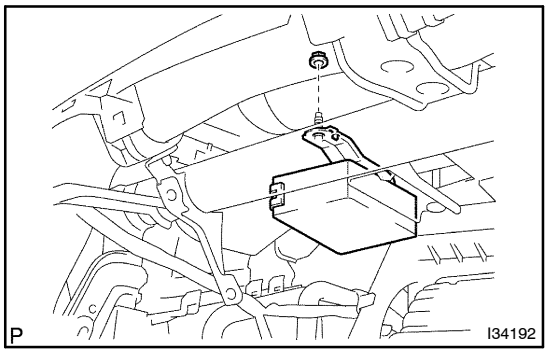

8. REMOVE HEATER AMPLIFIER ASSY
   (a) Disconnect the connector.
   (b) Remove the nut and heater amplifier assy.

9. INSTALL DISC PLAYER CHANGER W/BRACKET (W/ CD CHANGER) (See page 67–15)