
6009U–05

REPLACEMENT

1. PRECAUTION(See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

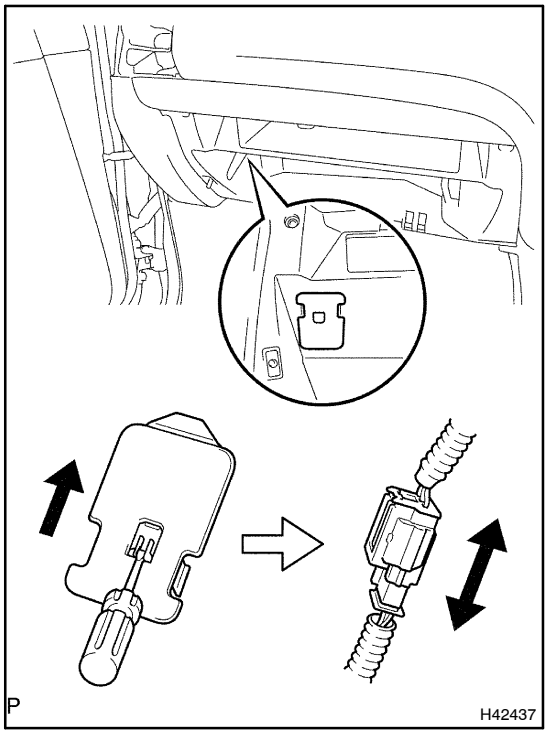

4. DISCONNECT PASSENGER AIRBAG CONNECTOR

(a) Remove the glove compartment door sub–assy.

(b) Remove the glove compartment door pad plate from the instrument panel finish panel lower No.2.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

(c) Using a screwdriver, slide the airbag connector to pull out from the glove compartment door pad plate.


(d) Disconnect the airbag connector.

5. REMOVE INSTRUMENT PANEL SAFETY PAD SUB–ASSY(See page 71–13)

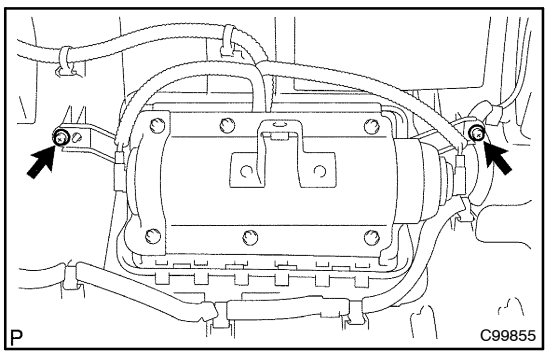

6. REMOVE INSTR PNL PASS L/DOOR AIR BAG ASSY

(a) Remove the 2 screws.

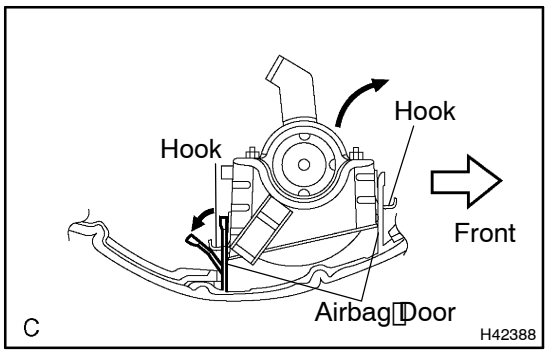

(b) Release the rear side wall of the airbag door from the hook by slightly deflecting it and roll the instr pnl pass l/door airbag assy forward.

(c) Release the front side wall of the airbag door from the other hook and remove the instr pnl pass l/door airbag assy.

7. INSPECT INSTR PNL PASS L/DOOR AIR BAG ASSY (See page 60–8)
8. INSTALL INSTR PNL PASS L/DOOR AIR BAG ASSY
9. CENTER SPIRAL CABLE (See page 60–22)
10. INSTALL STEERING WHEEL ASSY (See page 50–6)
11. INSPECT STEERING WHEEL CENTER POINT
12. INSTALL HORN BUTTON ASSY (See page 60–14)
13. INSPECT HORN BUTTON ASSY (See page 60–8)
14. INSPECT SRS WARNING LIGHT (See page 05–1122)