600GD–01

REPLACEMENT

1. PRECAUTION(See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)
3. REMOVE ROOF HEADLINING ASSY (3 DOOR BODY TYPE)(See page 76–54)
4. REMOVE ROOF HEADLINING ASSY (5 DOOR BODY TYPE)(See page 76–58)

(a) w/ Sunroof:
Remove the 3 screws and side rail spacer front RH.


5. **REMOVE CURTAIN SHIELD AIR BAG ASSY RH**

(a) Using a screwdriver, disconnect the connector of the curtain shield airbag assy RH.

(b) Remove the 12 bolts and curtain shield airbag assy RH.


HINT:
Remove the bolts from front side of the vehicle in order.

3 Door:

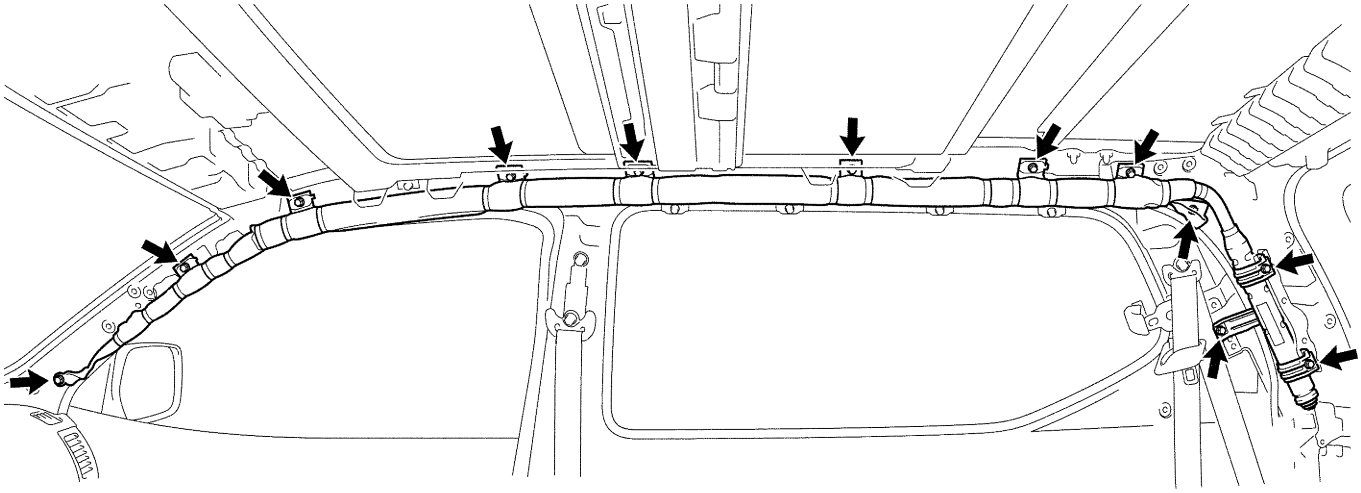

P

5 Door:

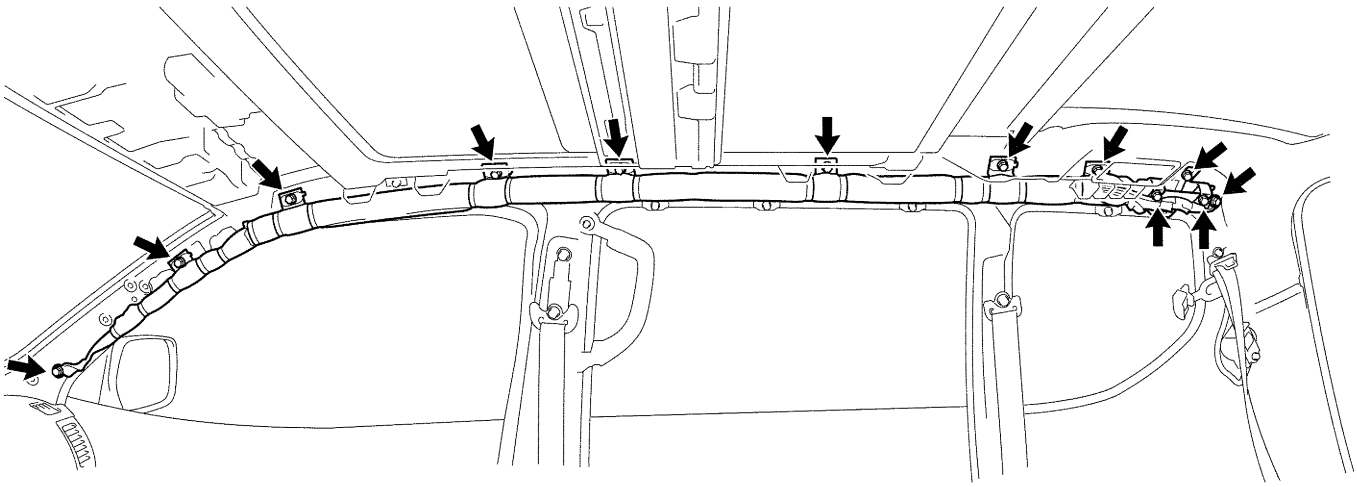

P

C99858
C99859

H42421

6. INSPECT CURTAIN SHIELD AIR BAG ASSY RH

7. INSTALL CURTAIN SHIELD AIR BAG ASSY RH

(a) Install the curtain shield airbag assy RH with the 12 bolts.


Torque: 9.8 N·m (100 kgf·cm, 87 in.·lbf)

HINT:

Install the bolts from rear side of the vehicle in order.


(b) Connect the curtain shield airbag assy RH connector.

3 Door:

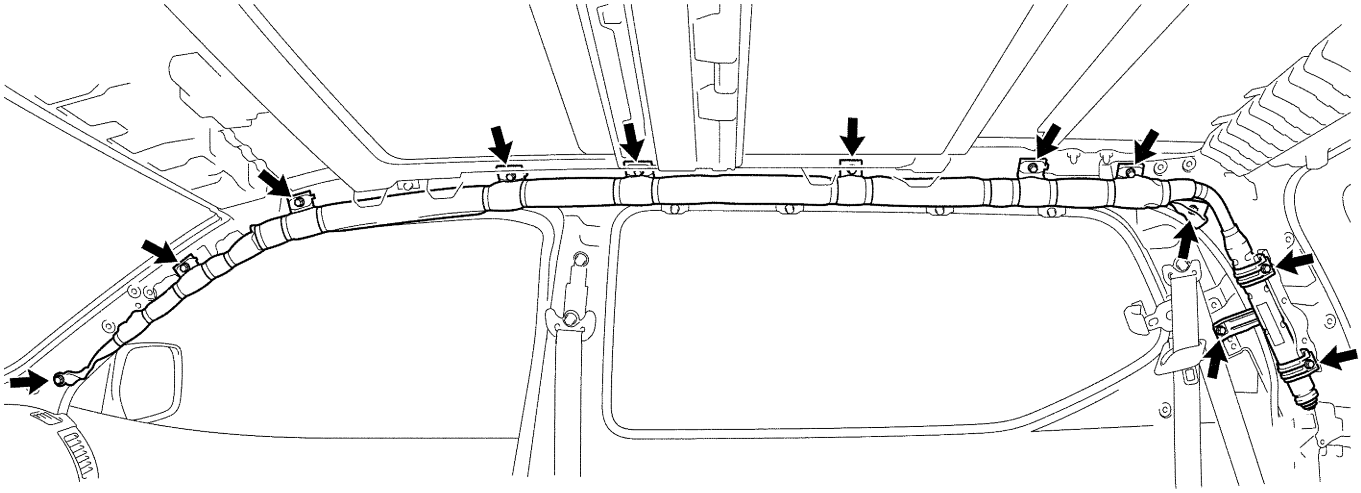

P

5 Door:

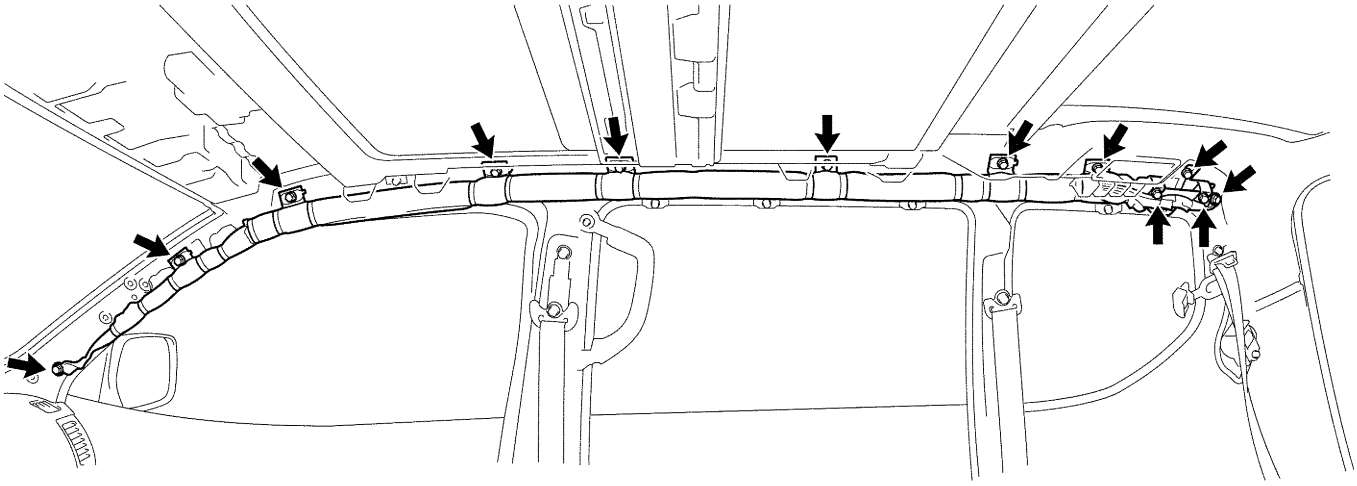

P

C99858
C99859

H42421

8. INSTALL ROOF HEADLINING ASSY (3 DOOR BODY TYPE) (See page 76–54)

9. INSTALL ROOF HEADLINING ASSY (5 DOOR BODY TYPE) (See page 76–58)

10. INSPECT SRS WARNING LIGHT (See page 05–1122)