
600GH–01


REPLACEMENT

1. PRECAUTION(See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)
3. REMOVE SHIFT LEVER KNOB SUB–ASSY (SEPARATED FRONT SEAT TYPE) (See page 71–13)
4. REMOVE SHIFT LEVER KNOB SUB–ASSY (SEPARATED FRONT SEAT TYPE) (See page 71–13)
5. REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE) (See page 71–13)
6. REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE) (See page 71–13)
7. REMOVE CONSOLE PANEL UPPER ASSY (SEPARATED FRONT SEAT TYPE) (See page 71–13)
8. REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY LH(See page 71–13)
9. REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY RH(See page 71–13)
10. REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER (SEPARATED FRONT SEAT TYPE)(See page 71–13)
11. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (BENCH FRONT SEAT TYPE)(See page 71–13)
12. REMOVE INSTRUMENT COVER LOWER CENTER (BENCH FRONT SEAT TYPE) (See page 71–13)
13. REMOVE INSTRUMENT CLUSTER FINISH PANEL COVER (W/ FIELD MONITOR) (See page 71–13)
14. REMOVE INTEGRATION CONTROL & PANEL ASSY(See page 71–13)
15. REMOVE CONSOLE REAR END PANEL SUB–ASSY (W/ REAR COOLER)(See page 71–13)
16. REMOVE RR CONSOLE BOX ASSY (W/O COOL BOX)(See page 71–13)
17. REMOVE RR CONSOLE BOX ASSY (W/ COOL BOX)(See page 71–13)
18. REMOVE CONSOLE BOX INSERT FRONT NO.2 (SEPARATED FRONT SEAT TYPE) (See page 71–13)
19. REMOVE CONSOLE BOX INSERT (SEPARATED FRONT SEAT TYPE)(See page 71–13)
20. REMOVE CONSOLE UPPER PANEL GARNISH FRONT (SEPARATED FRONT SEAT TYPE) (See page 71–13)
21. REMOVE CONSOLE BOX LOWER (SEPARATED FRONT SEAT TYPE)(See page 71–13)

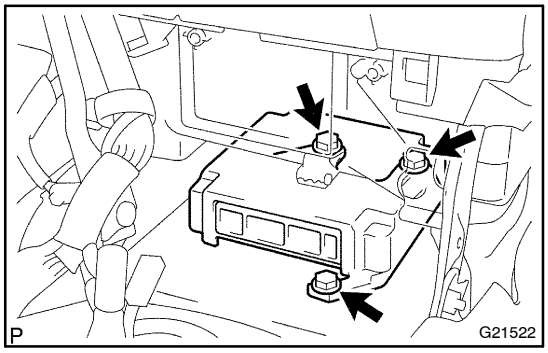

22. REMOVE AIR BAG SENSOR ASSY CENTER
(a) Disconnect the 3 connectors from the airbag sensor assy center.
(b) Remove teh 3 bolts and airbag sensor assy center.

23. INSPECT AIR BAG SENSOR ASSY CENTER(See page 60–8)

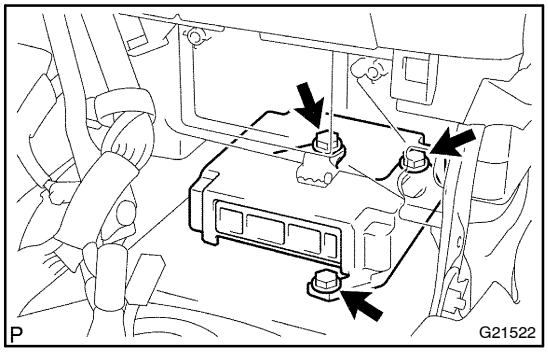

24. INSTALL AIR BAG SENSOR ASSY CENTER

(a) Check that the ignition switch turn OFF.

(b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

(c) Temporarily install the airbag sensor assy center with the 3 bolts.

(d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

(e) Connect the connector to the airbag sensor assy center.

(f) Check that no play is identified.

(g) Check that the water–proof sheet is properly set.

25. INSPECT SRS WARNING LIGHT(See page 05–1122)