
600A3–03


REPLACEMENT

1. PRECAUTION(See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)

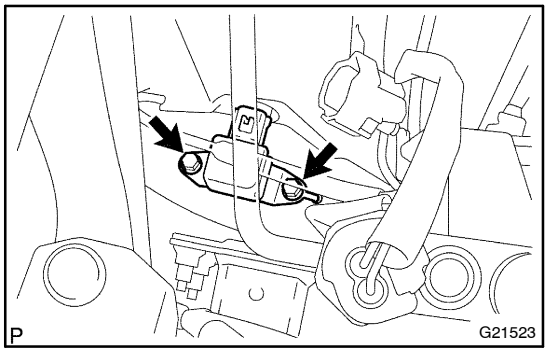

3. **REMOVE AIR BAG FRONT RH SENSOR**
(a) Remove the bolt and airbag front RH sensor.
(b) Disconnect the connector from the airbag front RH sensor.

4. INSPECT AIR BAG FRONT RH SENSOR(See page 60–8)

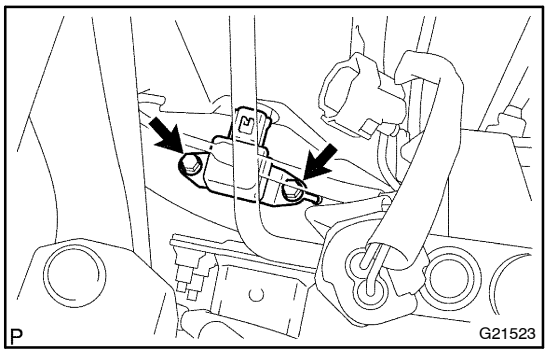

5. **INSTALL AIR BAG FRONT RH SENSOR**
(a) Check that the ignition switch trun OFF.
(b) Check that the battery negative terminal is disconnected.

NOTICE:
Do not start the operation for 90 seconds after removing the terminal.

(c) Install the airbag front RH sensor with the bolt.
Torque: 7.5 N·m (76 kgf·cm, 66 in.·lbf)
(d) Connect the connector to the airbag front RH sensor.
(e) Check that no play is identified.

6. INSPECT SRS WARNING LIGHT(See page 05–1122)