
600GK-01


REPLACEMENT

1. PRECAUTION (See page 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60-1)
3. REMOVE FRONT DOOR SCUFF PLATE RH (See page 76-54)
4. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page 76-54)
5. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (See page 76-54)
6. REMOVE BACK DOOR WEATHERSTRIP (See page 76-54)
7. REMOVE PACKAGE TRAY TRIM PANEL ASSY (See page 76-54)
8. REMOVE LAP BELT OUTER ANCHOR COVER (See page 61-7)
9. REMOVE FRONT SEAT OUTER BELT ASSY RH (See page 61-7)
10. REMOVE LAP BELT OUTER ANCHOR COVER (See page 61-23)
11. REMOVE REAR SEAT BELT ASSY OUTER (See page 61-23)
12. REMOVE QUARTER INSIDE TRIM BOARD RH (See page 76-54)

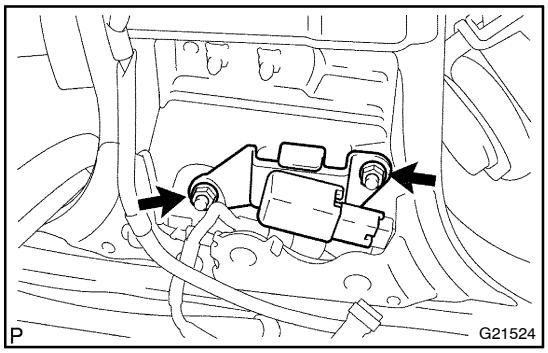

13. REMOVE SIDE AIR BAG SENSOR ASSY RH
(a) Remove the 2 nuts and side airbag sensor assy RH.
(b) Disconnect the connector from the side airbag sensor assy RH.

14. INSPECT SIDE AIR BAG SENSOR ASSY RH (See page 60-8)

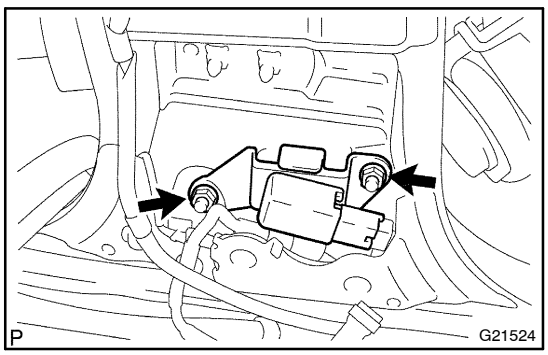

15. INSTALL SIDE AIR BAG SENSOR ASSY RH
(a) Connect the side airbag sensor assy RH connector.
(b) Install the side aibag sensor assy RH with the 2 nuts.
Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

NOTICE:

- **Installation of the connector is done with the sensor assy installed. Make sure the sensor assy is installed with the specified torque.**
- **If the sensor assy has been dropped, or there are cracks, dents or other detects in the case, bracket or connector, replace the sensor assy with a new one.**
- **When installing the sensor assy, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assy to check that there is no looseness.**

16. INSTALL REAR SEAT BELT ASSY OUTER (See page 61–23)
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
17. INSTALL FRONT SEAT OUTER BELT ASSY RH (See page 61–7)
Torque:
Upper bolt: 7.5 N·m (76 kgf·cm, 66 in.·lbf)
Lower bolt: 42 N·m (430 kgf·cm, 31 ft·lbf)
18. INSPECT SRS WARNING LIGHT (See page 05–1122)