
600GM–01

REPLACEMENT

1. PRECAUTION(See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)
3. REMOVE QUARTER SCUFF PLATE INNER RH(See page 76–58)
4. REMOVE FRONT DOOR SCUFF PLATE RH(See page 76–58)
5. REMOVE QUARTER SCUFF PLATE INNER RH(See page 76–58)
6. REMOVE REAR DOOR SCUFF PLATE RH(See page 76–58)
7. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH(See page 76–58)
8. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH(See page 76–58)
9. REMOVE LAP BELT OUTER ANCHOR COVER(See page 61–15)
10. REMOVE CENTER PILLAR GARNISH LOWER RH(See page 76–58)
11. REMOVE FRONT SEAT OUTER BELT ASSY RH(See page 61–15)

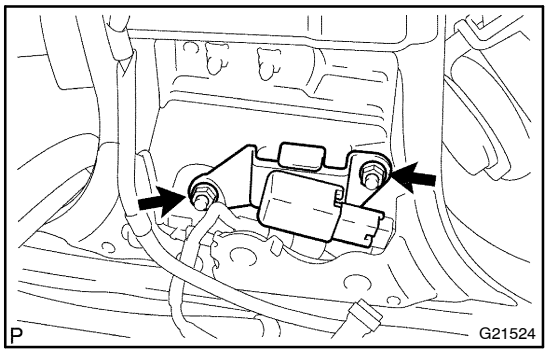


12. REMOVE SIDE AIR BAG SENSOR ASSY RH

(a) Remove the 2 nuts and side airbag sensor assy RH.

(b) Disconnect the connector from the side airbag sensor assy RH.

13. INSPECT SIDE AIR BAG SENSOR ASSY RH(See page 60–8)

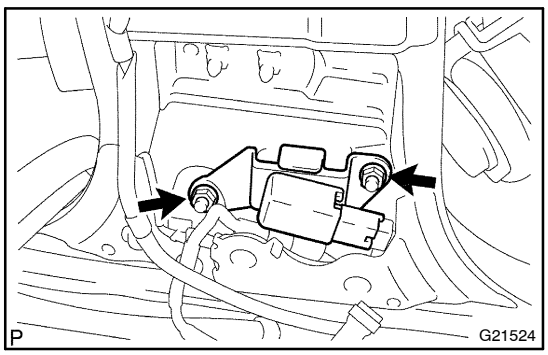

14. INSTALL SIDE AIR BAG SENSOR ASSY RH

(a) Connect the side airbag sensor assy RH connector.

(b) Install the side aibag sensor assy RH with the 2 nuts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

NOTICE:

- **Installation of the connector is done with the sensor assy installed. Make sure the sensor assy is installed with the specified torque.**
- **If the sensor assy has been dropped, or there are cracks, dents or other detects in the case, bracket or connector, replace the sensor assy with a new one.**
- **When installing the sensor assy, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assy to check that there is no looseness.**

15. INSTALL FRONT SEAT OUTER BELT ASSY RH(See page 61–15)
Torque:
Upper bolt: 7.5 N·m (76 kgf·cm, 66 in.·lbf)
Lower bolt: 42 N·m (430 kgf·cm, 31 ft·lbf)

16. INSPECT SRS WARNING LIGHT (See page 05–1122)