

REPLACEMENT

1. PRECAUTION (See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60–1)
3. REMOVE FRONT DOOR SCUFF PLATE RH (See page 76–54)
4. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page 76–54)
5. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (See page 76–54)
6. REMOVE BACK DOOR WEATHERSTRIP (See page 76–54)
7. REMOVE PACKAGE TRAY TRIM PANEL ASSY (See page 76–54)
8. REMOVE LAP BELT OUTER ANCHOR COVER (See page 61–7)
9. REMOVE FRONT SEAT OUTER BELT ASSY RH (See page 61–7)
10. REMOVE LAP BELT OUTER ANCHOR COVER (See page 61–23)
11. REMOVE REAR SEAT BELT ASSY OUTER (See page 61–23)
12. REMOVE QUARTER INSIDE TRIM BOARD RH (See page 76–54)

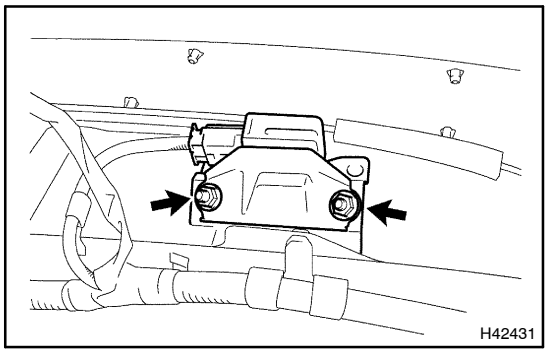

13. REMOVE AIR BAG SENSOR REAR RH
(a) Disconnect the connector of the airbag sensor rear RH.
(b) Remove the 2 nuts and the airbag sensor rear RH.

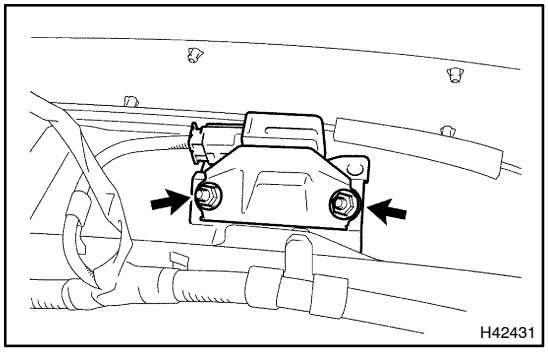

14. INSTALL AIR BAG SENSOR REAR RH
(a) Install the airbag sensor rear RH with the 2 nuts.
Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)
(b) Connect the connector of the airbag sensor rear RH.

NOTICE:

- **Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

15. INSPECT AIR BAG SENSOR REAR RH (See page 60–8)
16. INSTALL REAR SEAT BELT ASSY OUTER (See page 61–23)
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
17. INSTALL FRONT SEAT OUTER BELT ASSY RH (See page 61–7)
Torque:
Upper bolt: 7.5 N·m (76 kgf·cm, 66 in.·lbf)
Lower bolt: 42 N·m (430 kgf·cm, 31 ft·lbf)
18. INSPECT SRS WARNING LIGHT (See page 05–1122)