

REPLACEMENT

1. PRECAUTION (See page 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 60–1)
3. REMOVE QUARTER SCUFF PLATE INNER RH (See page 76–58)
4. REMOVE REAR DOOR SCUFF PLATE RH (See page 76–58)
5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (See page 76–58)
6. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (See page 76–58)
7. REMOVE BACK DOOR WEATHERSTRIP (See page 76–58)
8. REMOVE SEAT ASSY, NO.3 (See page 72–46)
9. REMOVE LAP BELT OUTER ANCHOR COVER REAR NO.1 SAET (See page 61–30)
10. REMOVE REAR NO.2 SEAT BELT ASSY OUTER RH (See page 61–30)
11. REMOVE QUARTER INSIDE TRIM BOARD RH (See page 76–58)

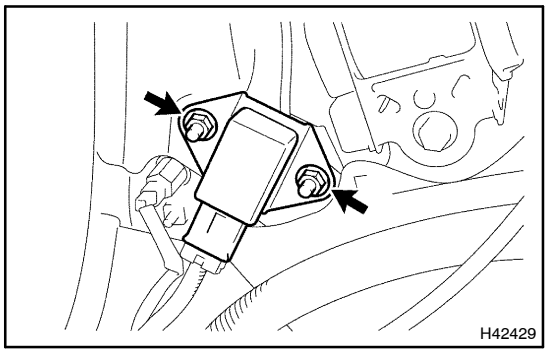

12. REMOVE AIR BAG SENSOR REAR RH
(a) Disconnect the connector of the airbag sensor rear RH.
(b) Remove the 2 nuts and the airbag sensor rear RH.

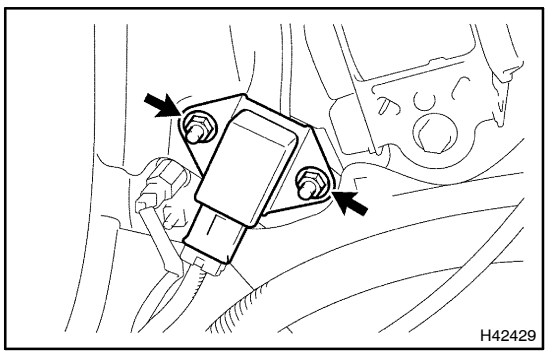

13. INSTALL AIR BAG SENSOR REAR RH
(a) Install the airbag sensor rear RH with the 2 nuts.
Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)
(b) Connect the connector of the airbag sensor rear RH.

NOTICE:

- **Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

14. INSPECT AIR BAG SENSOR REAR RH (See page 60–8)
15. INSTALL REAR NO.2 SEAT BELT ASSY OUTER RH (See page 61–30)
16. INSPECT SRS WARNING LIGHT (See page 05–1122)