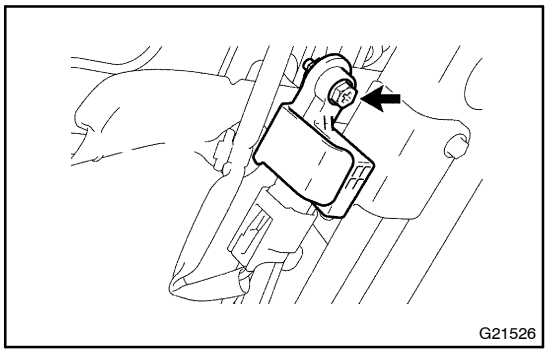
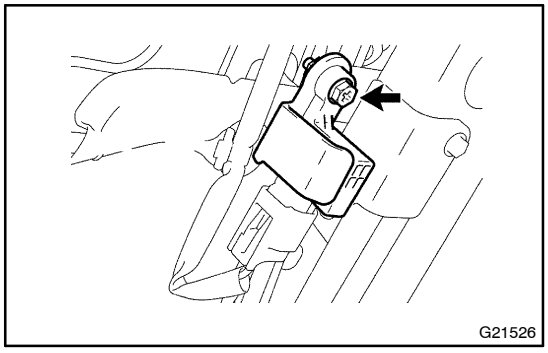
REPLACEMENT

1. PRECAUTION(See page 60–1)
2. SEPARATE BATTERY NEGATIVE TERMINAL(See page 60–1)
3. REMOVE SEAT TRACK BRACKET COVER OUTER FRONT RH (RHD STEERING POSITION TYPE)
4. REMOVE SEAT TRACK BRACKET COVER OUTER FRONT LH (LHD STEERING POSITION TYPE)
5. REMOVE SEAT TRACK BRACKET COVER INNER FRONT RH (RHD STEERING POSITION TYPE)
6. REMOVE SEAT TRACK BRACKET COVER INNER FRONT LH (LHD STEERING POSITION TYPE)
7. REMOVE SEAT TRACK COVER RH
8. REMOVE SEAT TRACK COVER RH
9. REMOVE FRONT SEAT ASSY RH (RHD STEERING POSITION TYPE)
10. REMOVE FRONT SEAT ASSY LH (LHD STEERING POSITION TYPE)


G21526

11. REMOVE SEAT POSITION AIR BAG SENSOR
(a) Disconnect the connector of the seat position airbag sensor.
(b) Remove the bolt and seat position airbag sensor.


G21526

12. INSTALL SEAT POSITION AIR BAG SENSOR
(a) Install the seat position airbag sensor with a new bolt.
Part No.:
Bolt: 90119–06871
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)
(b) Connect the connector of the seat position airbag sensor.

NOTICE:
- **Installation of the connector is done with the sensor assy installed. Make sure the sensor assy is installed with the specified torque.**
- **If the sensor assy has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assy with a new one.**
- **When installing the sensor assy, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assy to check that there is no looseness.**

13. INSTALL FRONT SEAT ASSY RH (RHD STEERING POSITION TYPE)
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
14. INSTALL FRONT SEAT ASSY LH (LHD STEERING POSITION TYPE)
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
15. INSPECT SRS WARNING LIGHT(See page 05–1122)