HEADLAMP UNIT ASSY LH


650NG–01

REPLACEMENT

HINT:


COMPONENTS: See page 65-10

1. **REMOVE FRONT BUMPER GUARD** (See page 76–2)
2. **REMOVE FRONT FENDER LINER RH** (See page 76–2)
3. **REMOVE FRONT FENDER LINER LH** (See page 76–2)
4. **REMOVE FRONT BUMPER COVER** (See page 76–2)

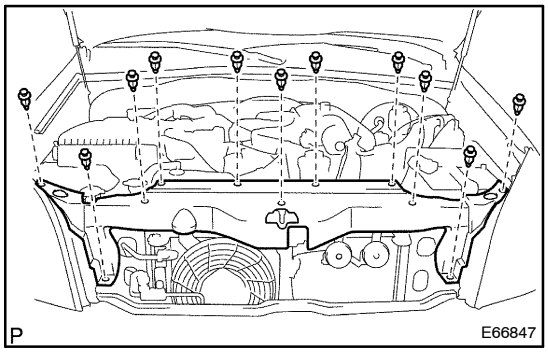

5. REMOVE RADIATOR SUPPORT SEAL UPPER

(a) Remove the 11 clips, and radiator support seal upper.

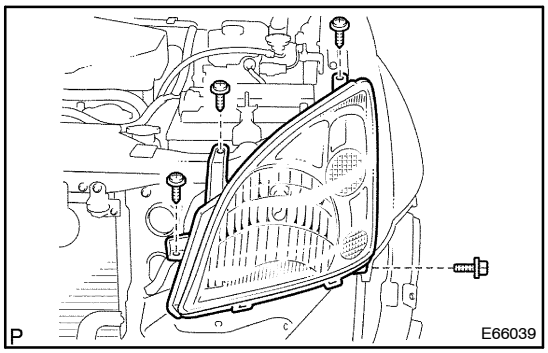


6. REMOVE LH HEADLAMP ASSY

(a) Remove the 3 screws and bolt.

(b) Disconnect the connectors.


(c) Pull out the headlamp unit forward and remove the headlamp assy LH.

7. REMOVE HEADLAMP SOCKET COVER

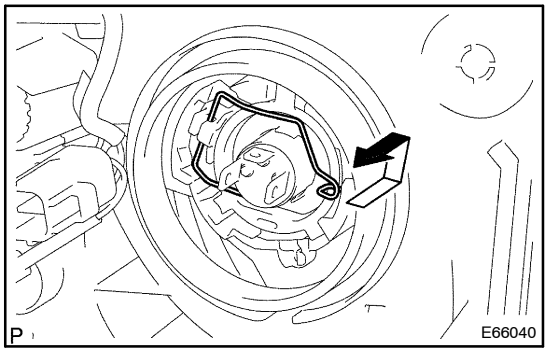

8. REMOVE HEADLAMP UNIT ASSY LH

(a) Release the lock of the set spring and remove the headlamp bulb No.1.

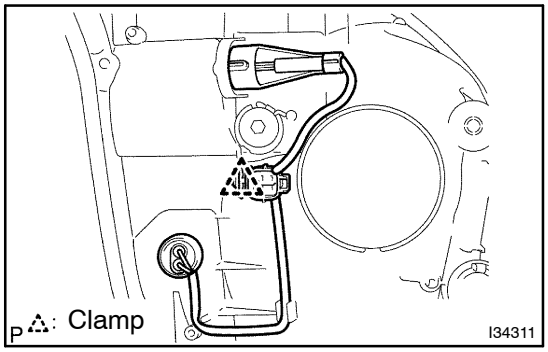

(b) Remove the clamp.
(c) Remove the headlamp cord with 2 bulbs.

9. INSTALL FRONT FENDER LINER RH (See page 76–2)
10. INSTALL FRONT FENDER LINER LH (See page 76–2)
11. ADJUST HEADLIGHT AIM ONLY (See page 65–13)
12. PUT VEHICLE THESE CONDITIONS (See page 65–15)
13. ADJUST FOG LIGHT AIM (See page 65–15)