FOG LAMP LAMP UNIT LH


650NJ–01

ADJUSTMENT

1. PUT VEHICLE THESE CONDITIONS

(a) Tire inflation pressure is the specified value.(See page 28–1)

(b) Start the engine.

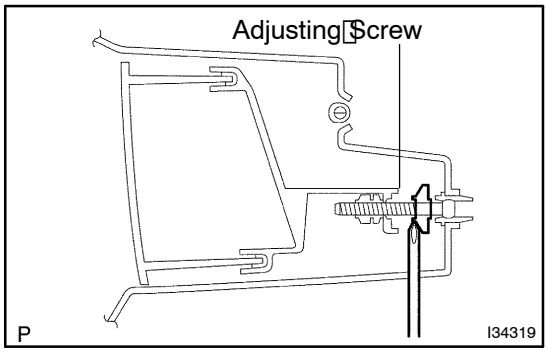

2. ADJUST FOG LIGHT AIM

(a) The fog light aim can be adjusting by moving the aiming screw in the vertical direction.