
SIDE TURN SIGNAL LAMP LENS LH

650NK–01

REPLACEMENT

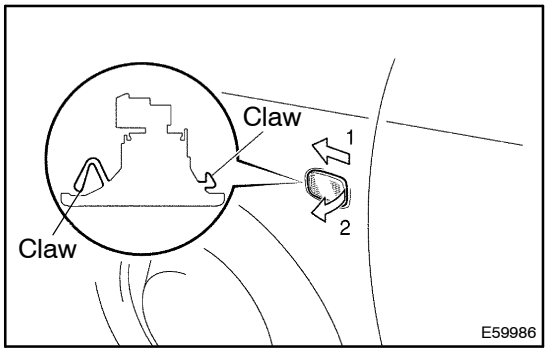

1. REMOVE SIDE TURN SIGNAL LAMP ASSY LH

(a) Pull the vehicle forward and undo the claw by pulling it forward.

(b) Take the socket off and remove the side turn signal lamp lens LH.

2. REMOVE SIDE TURN SIGNAL LAMP LENS LH

(a) Install the side turn signal lamp lens LH with a new gasket.