
REAR COMBINATION LAMP LENS LH

650NL–01

REPLACEMENT

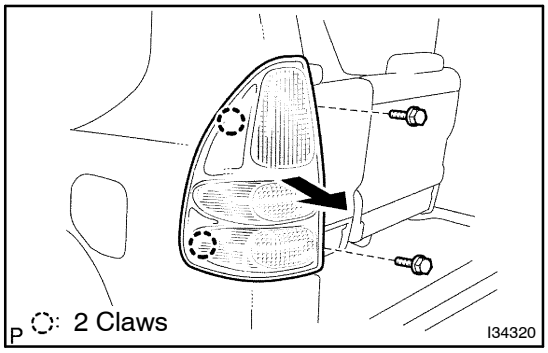

1. REMOVE REAR COMBINATION LAMP ASSY LH

(a) Remove the 2 bolts and disengage the 2 claws.

(b) Disconnect the connector and remove the rear combination lamp assy LH.

2. REMOVE REAR COMBINATION LAMP LENS LH

(a) Remove the 3 sockets with 3 bulbs, and rear combination lamp lens LH.