
REAR LAMP LENS & BODY LH

650NN–01

REPLACEMENT

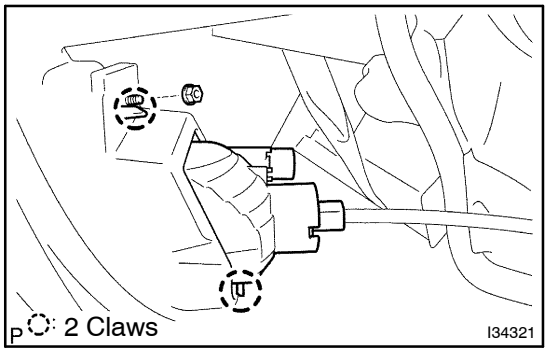

1. REMOVE REAR LAMP ASSY LH

(a) Disconnect the connector and remove the nut.

(b) Release the 2 claws and remove the rear lamp assy LH.

2. REMOVE REAR LAMP LENS & BODY LH

(a) Remove the socket with bulb and rear lamp lens & body LH.