REAR WIPER MOTOR ASSY


6609X–01

REPLACEMENT

1. **REMOVE REAR WIPER ARM ASSY**

(a) Remove the nut and the rear wiper arm.

2. **REMOVE BACK DOOR GARNISH CENTER (See page 75–37)**
3. **REMOVE BACK DOOR SIDE GARNISH RH (See page 75–37)**
4. **REMOVE BACK DOOR SIDE GARNISH LH (See page 75–37)**
5. **REMOVE TOOL BOX PANEL SUB–ASSY UPPER (See page 75–37)**
6. **REMOVE DOOR PULL HANDLE SUB–ASSY (w/ SPARE TIRE) (See page 75–37)**
7. **REMOVE ASSIST GRIP ASSY (w/o SPARE TIRE) (See page 75–37)**
8. **REMOVE BACK DOOR TRIM BOARD (See page 75–37)**
9. **REMOVE BACK DOOR SERVICE HOLE COVER (See page 75–37)**

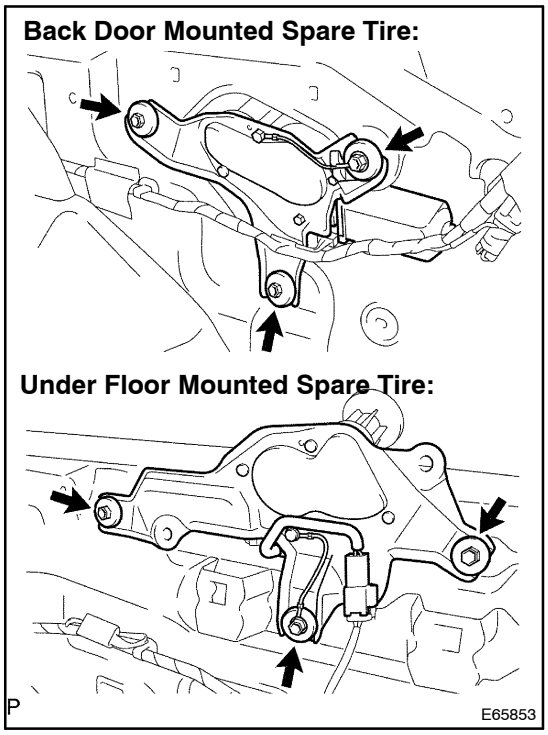

10. **REMOVE REAR WIPER MOTOR ASSY**


(a) Remove the 3 bolts.

(b) Disconnect the connector, and remove the rear wiper motor assy.

11. **INSTALL REAR WIPER MOTOR ASSY**

(a) Install the rear wiper motor assy with the 3 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)


(b) Connect the connecter.

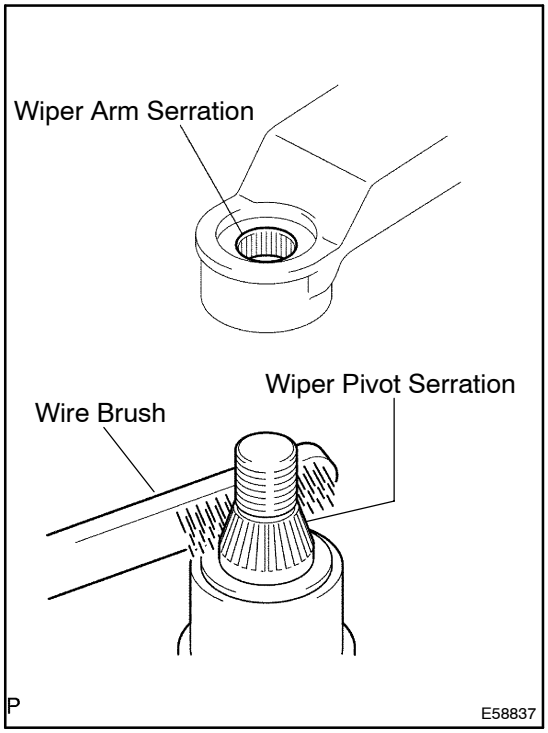

12. INSTALL REAR WIPER ARM ASSY

(a) Scrape off the serration part of the wiper arm with a round file or equivalent.

(b) Clean the rear wiper pivot serration with a wire brush.

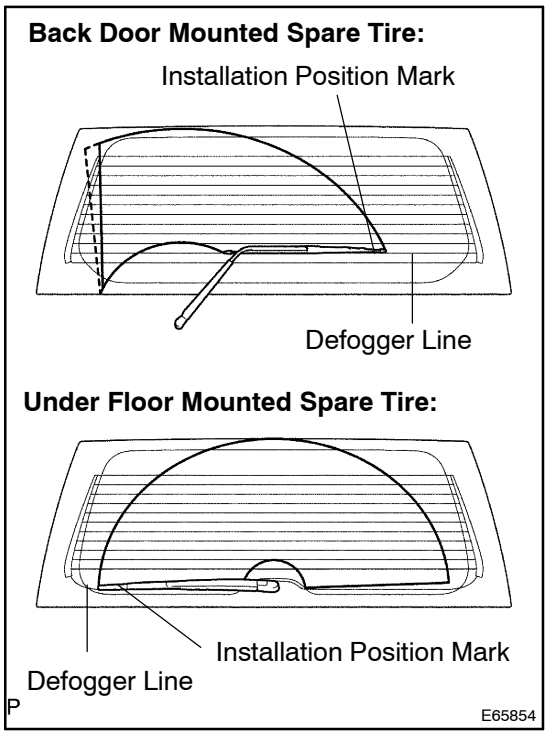

(c) Stop the rear wiper motor assy at the automatic stop position. Install the rear wiper arm at the position as shown in the illustration.

Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

13. INSTALL BACK DOOR SERVICE HOLE COVER (See page 75–37)