WIPER RUBBER LH

6609Y–01

REPLACEMENT

1. REMOVE FR WIPER BLADE LH

(a) Remove the front wiper blade LH from the front wiper arm LH.


NOTICE:

Do not fold down the front wiper arm with the front wiper blade being removed from it.

2. REMOVE WIPER RUBBER LH

(a) Remove the front wiper rubber LH from the front wiper blade.

(b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

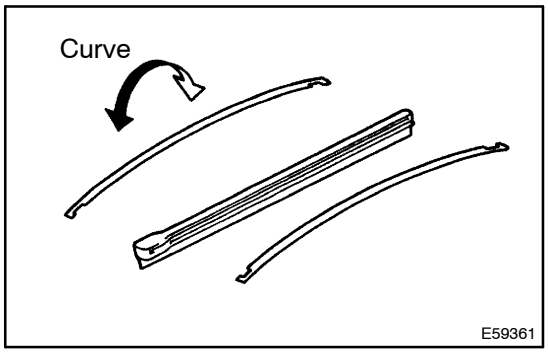


3. INSTALL WIPER RUBBER LH

(a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

NOTICE:

Be careful about the right side and the wrong side of the backing plates.

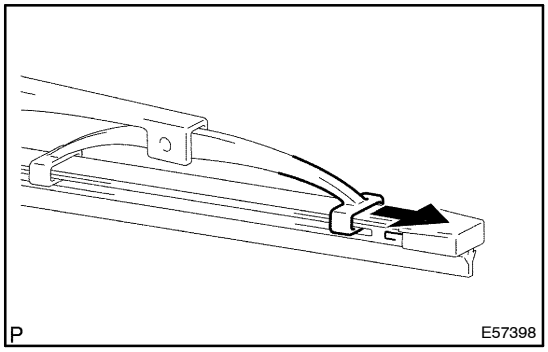

(b) Install the wiper rubber LH so that the head part (Larger side) of the wiper rubber faces the arm axle side.

NOTICE:

Push the front wiper blade into the grooves of the wiper rubber to engage them completely.