HEADLAMP WASHER ACTUATOR SUB–ASSY LH


660A2–01

REPLACEMENT

HINT:


COMPONENTS: See page 76–1

1. **REMOVE FRONT BUMPER GUARD (See page 76–2)**
2. **REMOVE FRONT FENDER LINER RH (See page 76–2)**
3. **REMOVE FRONT FENDER LINER LH (See page 76–2)**
4. **REMOVE FRONT BUMPER COVER (See page 76–2)**

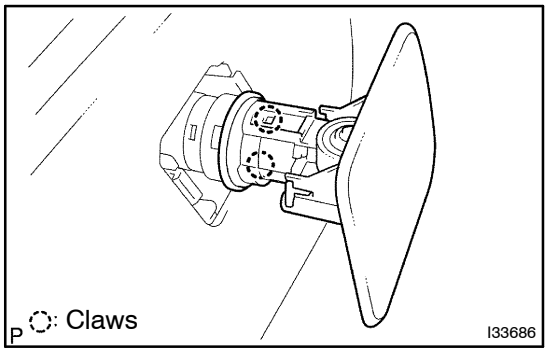

5. **REMOVE HEADLAMP CLEANER WASHER NOZZLE**

(a) Release the 2 claws pulling the head lamp cleaner nozzle, and remove it.

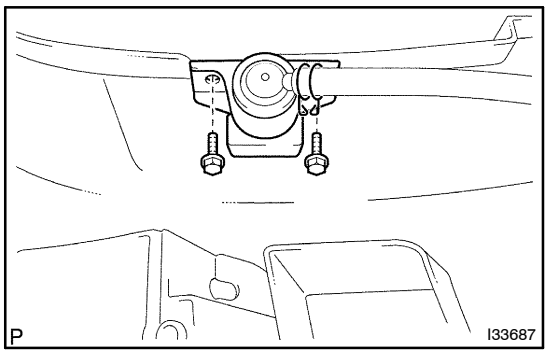

6. **REMOVE HEADLAMP WASHER ACTUATOR SUB–ASSY LH**

(a) Disconnect the head lamp cleaner hose.

(b) Remove the 2 bolts .

(c) Remove the head lamp washer actuator sub–assy LH.