MULTI–DISPLAY (CRT DISPLAY) DISPLAY


670LH–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2

1. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
2. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
3. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY LH(See page 71–13)**
4. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY RH(See page 71–13)**
5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL COVER (W/ FIELD MONITOR) (See page 71–13)**
6. **REMOVE INTEGRATION CONTROL & PANEL ASSY(See page 71–13)**
7. **REMOVE RADIO BRACKET NO.1(See page 67–5)**
8. **REMOVE RADIO BRACKET NO.2(See page 67–5)**

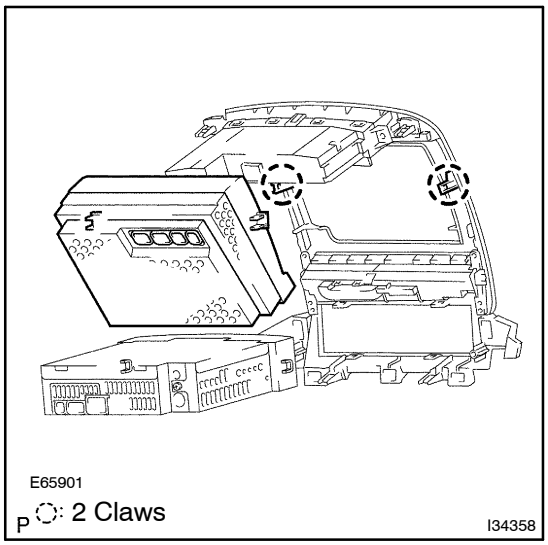

9. **REMOVE MULTI–DISPLAY (CRT DISPLAY) DISPLAY**

(a) Release the 2 claws and remove the multi display.