FRONT NO.1 SPEAKER ASSY


670LJ–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2


1. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75–12)**
2. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH (See page 75–12)**
3. **REMOVE FRONT ARMREST ASSY LH (See page 75–12)**
4. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (See page 75–12)**
5. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (See page 75–12)**

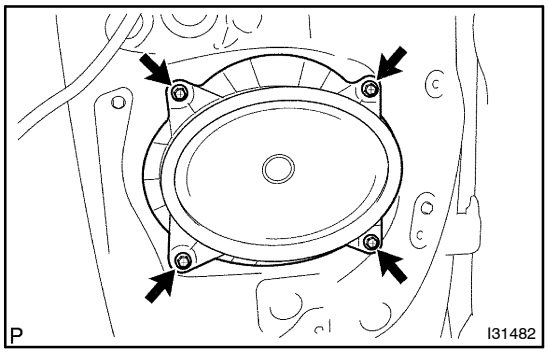

6. REMOVE FRONT NO.1 SPEAKER ASSY

(a) Disconnect the connector.

(b) Remove the 4 screws and front No.1 speaker assy.

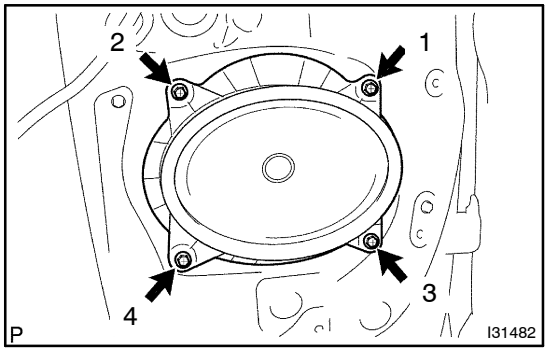

7. INSTALL FRONT NO.1 SPEAKER ASSY

(a) Install the front No.1 speaker assy with the 4 screws.

NOTICE:

Install them in the order shown in the illustration.

(b) Connect the connector.