FRONT NO.2 SPEAKER ASSY


670LK–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2

1. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH(See page 75–12)**
2. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH(See page 75–12)**
3. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY(See page 75–12)**
4. **REMOVE FRONT ARMREST ASSY LH(See page 75–12)**
5. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH(See page 75–12)**

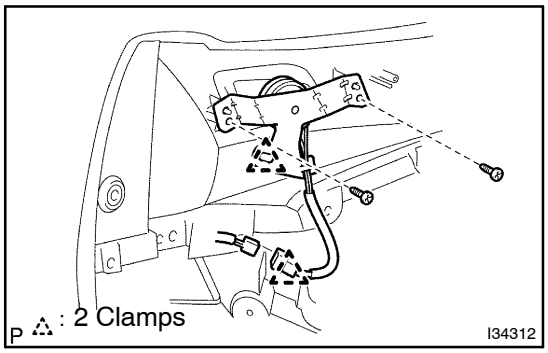

6. **REMOVE FRONT NO.2 SPEAKER ASSY**

(a) Disconnect the connector.

(b) Remove the 2 clamps.

(c) Remove the 2 screws and front No.2 speaker assy.