REAR SPEAKER ASSY


REPLACEMENT

670LL–01

HINT:

COMPONENTS: See page 67–2


1. **REMOVE REAR DOOR INSIDE HANDLE BEZEL LH (5 DOOR BODY TYPE) (See page 75–24)**
2. **REMOVE REAR LH ARMREST ASSY (5 DOOR BODY TYPE)(See page 75–24)**
3. **REMOVE POWER WINDOW REGULATOR SWITCH ASSY REAR (5 DOOR BODY TYPE) (See page 75–24)**
4. **REMOVE REAR DOOR TRIM BOARD SUB–ASSY LH (5 DOOR BODY TYPE) (See page 75–24)**
5. **REMOVE FRONT DOOR SCUFF PLATE LH (3 DOOR BODY TYPE)(See page 76–54)**
6. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (3 DOOR BODY TYPE) (See page 76–54)**
7. **REMOVE BACK DOOR WEATHERSTRIP (3 DOOR BODY TYPE)(See page 76–54)**
8. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (3 DOOR BODY TYPE) (See page 76–54)**
9. **REMOVE PACKAGE TRAY TRIM PANEL ASSY (3 DOOR BODY TYPE)(See page 76–54)**
10. **REMOVE QUARTER INSIDE TRIM BOARD LH (3 DOOR BODY TYPE)(See page 76–54)**

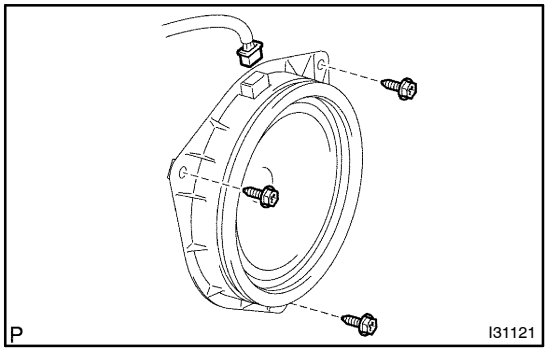

11. REMOVE REAR SPEAKER ASSY

(a) Disconnect the connector.

(b) Remove the 3 screws, and rear speaker assy.

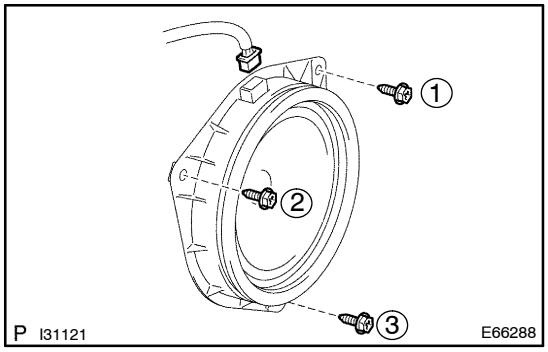

12. INSTALL REAR SPEAKER ASSY

(a) Install the rear speaker assy with the 3 screws.

NOTICE:

Install them in the order shown in the illustration.

(b) Connect the connectors.