W/BOX SPEAKER ASSY NO.1


670LN–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2


1. **REMOVE REAR NO. 2 SEAT ASSY LH(See page 72–46)**
2. **REMOVE REAR NO. 2 SEAT ASSY RH(See page 72–46)**
3. **REMOVE FRONT DOOR SCUFF PLATE RH (3 DOOR BODY TYPE)(See page 76–58)**
4. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (3 DOOR BODY TYPE) (See page 76–58)**
5. **REMOVE BACK DOOR WEATHERSTRIP (3 DOOR BODY TYPE)(See page 76–58)**
6. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (3 DOOR BODY TYPE)(See page 76–58)**
7. **REMOVE PACKAGE TRAY TRIM PANEL ASSY (3 DOOR BODY TYPE)(See page 76–58)**
8. **REMOVE QUARTER INSIDE TRIM BOARD RH (3 DOOR BODY TYPE)(See page 76–54)**
9. **REMOVE ROOF SIDE GARNISH INNER RH (3 DOOR BODY TYPE)(See page 76–54)**
10. **REMOVE REAR DOOR SCUFF PLATE RH (5 DOOR BODY TYPE)(See page 76–58)**
11. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (5 DOOR BODY TYPE) (See page 76–58)**
12. **REMOVE BACK DOOR WEATHERSTRIP (5 DOOR BODY TYPE)(See page 76–58)**
13. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (5 DOOR BODY TYPE)(See page 76–58)**
14. **REMOVE PACKAGE TRAY TRIM PANEL ASSY (5 DOOR BODY TYPE)(See page 76–58)**
15. **REMOVE QUARTER INSIDE TRIM BOARD RH (5 DOOR BODY TYPE)(See page 76–58)**
16. **REMOVE ROOF SIDE GARNISH INNER RH (5 DOOR BODY TYPE)(See page 76–58)**

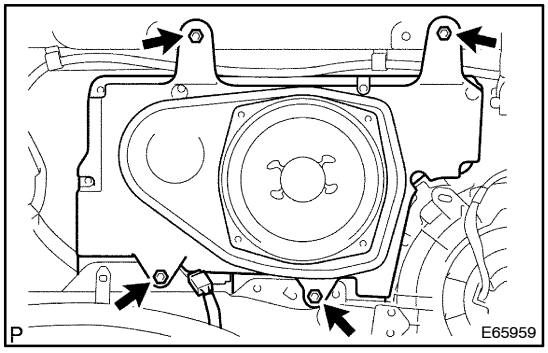

17. REMOVE W/BOX SPEAKER ASSY NO.1


(a) Disconnect the connector.

(b) Remove the 4 bolts and w/ box speaker assy No.1.

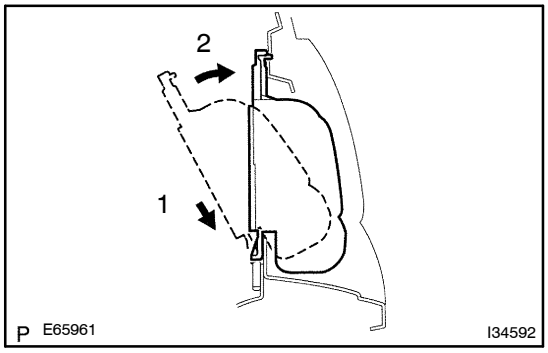

18. INSTALL W/BOX SPEAKER ASSY NO.1

(a) Place the w/ box speaker assy No.1 temporarily on the body shown in the illustration.

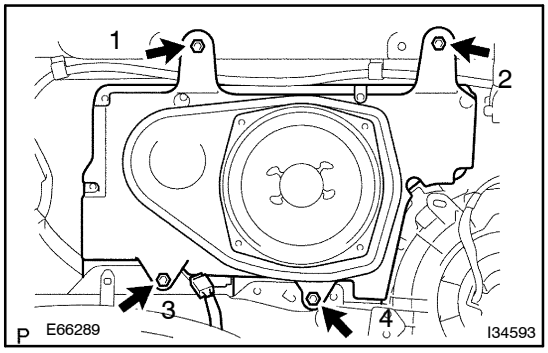

(b) Install the w/ box speaker assy No.1 with the 4 bolts.

NOTICE:

Install them in the order shown the illustration.

(c) Connect the connector.