DISC PLAYER CHANGER


REPLACEMENT

670LO–01

HINT:

COMPONENTS: See page 67–2

1. **REMOVE GLOVE COMPARTMENT DOOR SUB–ASSY(See page 71–13)**
2. **REMOVE INSTRUMENT PANEL ORNAMENT(See page 71–13)**
3. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2(See page 71–13)**

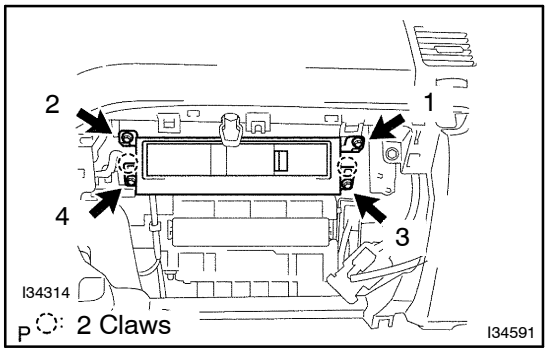


4. **REMOVE DISC PLAYER CHANGER W/BRACKET**

(a) Remove the 4 bolts.


(b) Release the 2 claws and pull the disc player changer w/ bracket.

(c) Disconnect the connectors and remove the disc player changer w/ bracket.

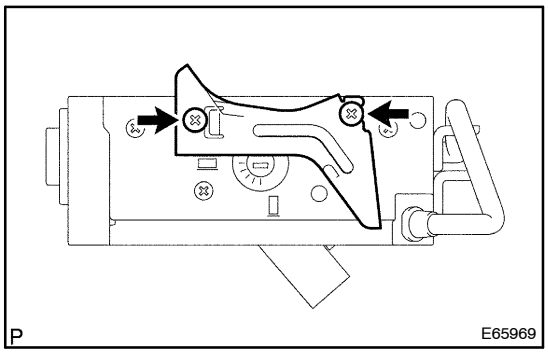


5. **REMOVE DISC PLAYER BRACKET**

(a) Remove the 2 screws and disc player bracket.

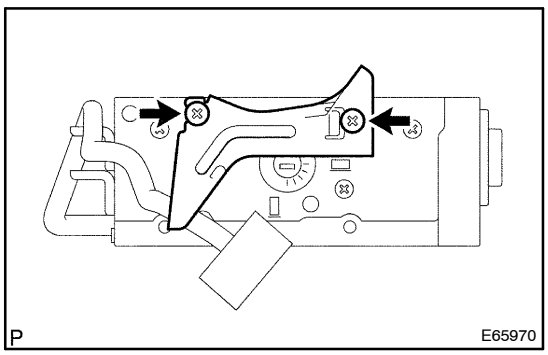

6. **REMOVE DISC PLAYER BRACKET**

(a) Remove the 2 screws and disc player bracket.

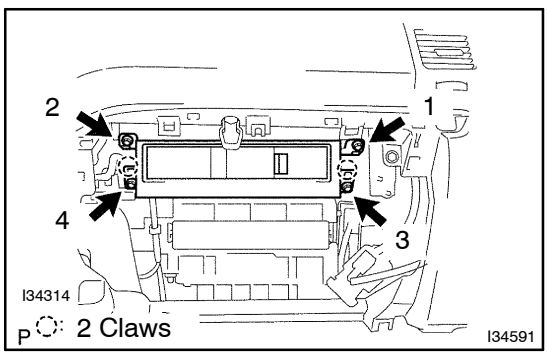

7. **INSTALL DISC PLAYER CHANGER W/BRACKET**

(a) Connect the connectors.

(b) Engage the 2 claws and place the disc player changer w/ bracket temporarily on the body.

(c) Install the 4 bolts and disc player changer w/ bracket.

NOTICE:

Install them in the order shown in the illustration.