POWER POINT SOCKET ASSY


670LU–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2

1. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2(See page 71–13)**
2. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1(See page 71–13)**
3. **REMOVE CONSOLE PANEL UPPER ASSY(See page 71–13)**
4. **REMOVE CONSOLE UPPER PANEL GARNISH FRONT(See page 71–13)**

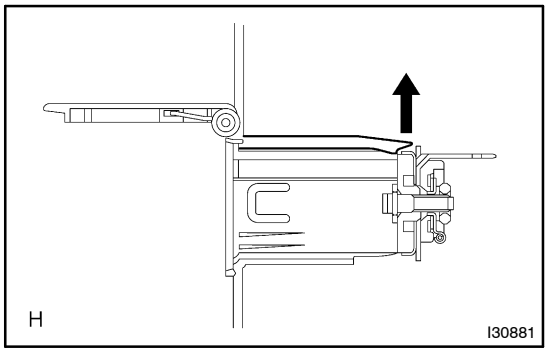

5. **REMOVE POWER POINT SOCKET ASSY**

(a) Pressing the claw of the power point socket assy in the direction of the arrow, push the power point socket assy toward the inside of the chamber and remove it.

6. **INSTALL POWER POINT SOCKET ASSY**

(a) Align the claw of the power point socket assy with the cutout of the power point socket cover and fully push it to install.