POWER POINT SOCKET ASSY RR


670LV–01

REPLACEMENT

HINT:


COMPONENTS: See page 67–2

1. **REMOVE FRONT DOOR SCUFF PLATE LH (3 DOOR BODY TYPE)(See page 76–54)**
2. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (3 DOOR BODY TYPE) (See page 76–54)**
3. **REMOVE BACK DOOR WEATHERSTRIP (3 DOOR BODY TYPE)(See page 76–54)**
4. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (3 DOOR BODY TYPE)(See page 76–54)**
5. **REMOVE PACKAGE TRAY TRIM PANEL ASSY (3 DOOR BODY TYPE)(See page 76–54)**
6. **REMOVE QUARTER INSIDE TRIM BOARD LH (3 DOOR BODY TYPE)(See page 76–54)**
7. **REMOVE REAR DOOR SCUFF PLATE LH (5 DOOR BODY TYPE)(See page 76–58)**
8. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (5 DOOR BODY TYPE) (See page 76–58)**
9. **REMOVE BACK DOOR WEATHERSTRIP (5 DOOR BODY TYPE)(See page 76–58)**
10. **REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (5 DOOR BODY TYPE)(See page 76–58)**
11. **REMOVE PACKAGE TRAY TRIM PANEL ASSY (5 DOOR BODY TYPE)(See page 76–58)**
12. **REMOVE QUARTER INSIDE TRIM BOARD LH (5 DOOR BODY TYPE)(See page 76–58)**

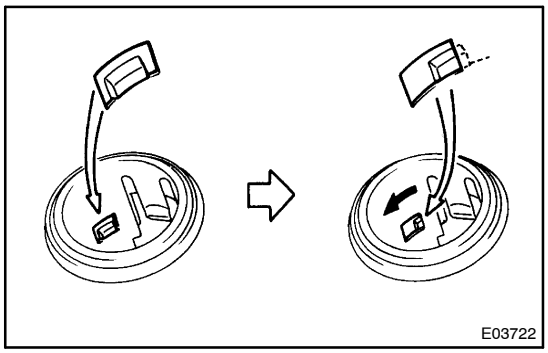

13. **REMOVE POWER POINT SOCKET ASSY RR**

(a) Turn the socket in the circumference direction as shown in the illustration, disengage the claw between the power point socket RR and the power point socket cover RR, and push out the socket to the room side.

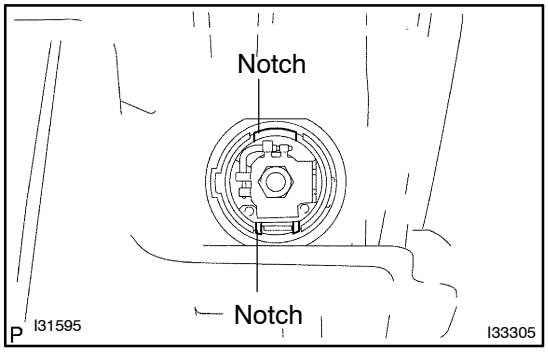

(b) Align the socket with the notch on the power point socket cover RR, remove the power point socket assy RR to the room side.

14. **INSTALL POWER POINT SOCKET ASSY RR**

(a) Align the socket with the notch on the power point socket cover RR, push the power point socket assy RR into as head as possible and install it.