700O9–01

REPLACEMENT

HINT:


- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. REMOVE REAR NO. 2 SEAT ASSY LH (See page 72–46)


2. REMOVE ROOF SIDE GARNISH INNER LH (See page 76–54 or 76–58)

(a) 5–door models:
Remove the quarter scuff plate inside LH.
(b) Remove the rear door scuff plate LH.
(c) Remove the rear door opening trim weatherstrip LH.
(d) Remove the back door weatherstrip.
(e) Remove the rear floor mat support plate rear.
(f) Remove the quarter inside trim board LH.
(g) Remove the roof side garnish inner LH.

3–Door Models

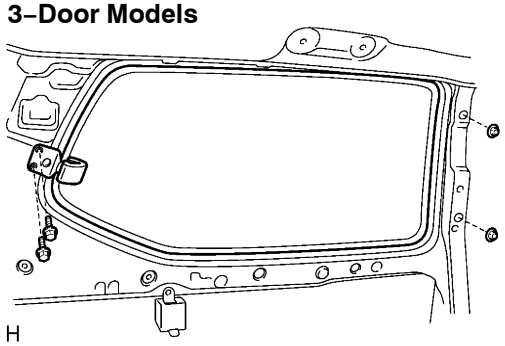

5–Door Models

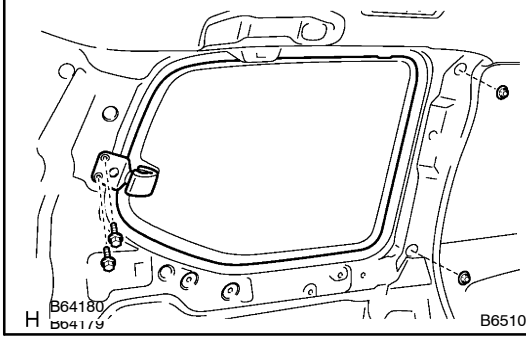

3. REMOVE QUARTER WINDOW ASSY LH


(a) Disconnect the connectors.
(b) Remove the 2 bolts and 2 nuts.
(c) Remove the window assy LH.

NOTICE:

Be careful not to damage the body and glass.

4. REMOVE QUARTER WINDOW LOCK ASSY

(a) Remove the screw and window lock assy.

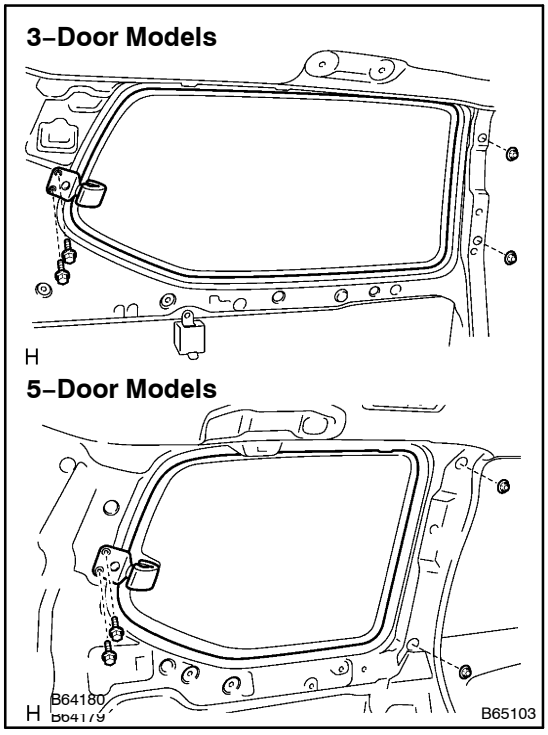

5. INSTALL QUARTER WINDOW ASSY LH

(a) Install the window assy.
(b) Install the 2 bolts and 2 nuts.
(c) Connect the connectors.