
700OG–01

ON–VEHICLE INSPECTION

1. OPERATIONAL INSPECTION ELECTRICALLY–RETRACT DOOR MIRROR

(a) Turn the ignition switch to the ACC position.


(b) At each position of the outer mirror body, check the operation when operating the retract switch of the outer mirror.

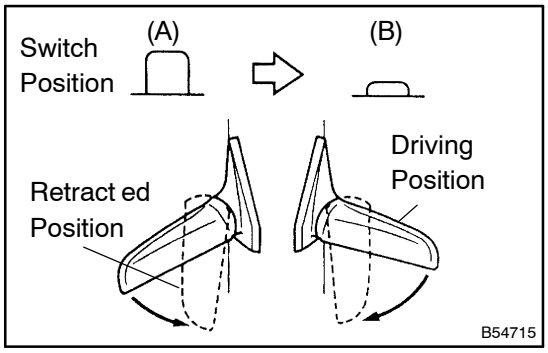

(c) Check the outer mirror operation, as shown in the illustration.

(1) Push the retract switch from the (A) position to the (B) position.

(2) Check that the right and left mirrors move from the driving position to the retracted position.

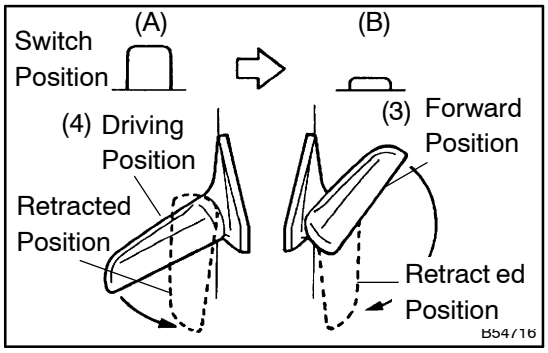


(d) Check the outer mirror operation, as shown in the illustration.

(1) Move one of the mirrors to the forward position by hand.

(2) Push the retract switch from the (A) position to the (B) position.

(3) Check that the mirror moves from the forward position to the retract position.

(4) Check that the other mirror moves from the driving position to the retracted position.

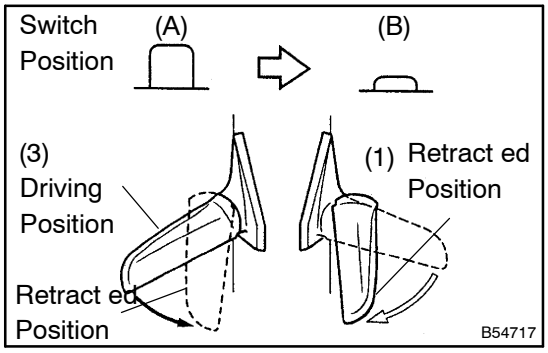


(e) Check the outer mirror operation, as shown in the illustration.


(1) Move one of the mirrors to the retracted position by hand.

(2) Push the retract switch from the (A) position to the (B) position.

(3) Check that the other mirror moves from the driving position to the retracted position.

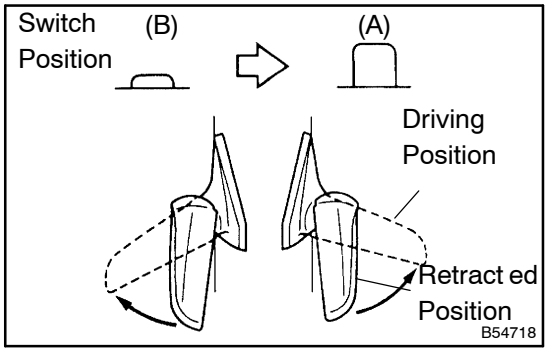

(f) Check the outer mirror operation, as shown in the illustration.
(1) Push the retract switch from the (B) position to the (A) position.
(2) Check that the right and left mirrors move from the retracted position to the driving position.

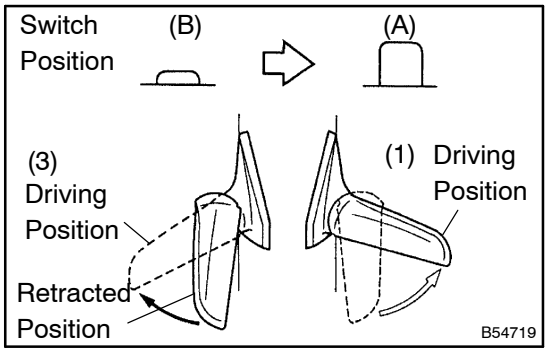

(g) Check the outer mirror operation, as shown in the illustration.
(1) Move one of mirrors to the driving position by hand.
(2) Push the retract switch From the (A) position to the (B) position.
(3) Check that the other mirror moves from the retracted position to the driving position.

(h) Check operation of the outer mirror body when the ignition switch is turned OFF during operation.
(1) When turning the ignition switch OFF during operation of the mirror body, check that the mirror body operation stops.
(2) Check that the mirror body continues to operate when the ignition switch is turned to ACC again.

HINT:
If the retract switch is switched while the ignition switch is OFF and the ignition switch is turned to ACC again, the mirror body will operate in the opposite direction.

(i) Check operation of the outer mirror body when it is restrained by an obstacle.
(1) Check that operation stops when restraining the mirror body movement by hand while the mirror body is moving to the retraced position or the driving position.
(2) Switch the retract switch under the above condition, and check that the mirror body starts operation again to the opposite direction.