
INNER REAR VIEW MIRROR ASSY

700OK–01

REPLACEMENT

HINT:
The installation is in the reverse order of the removal.

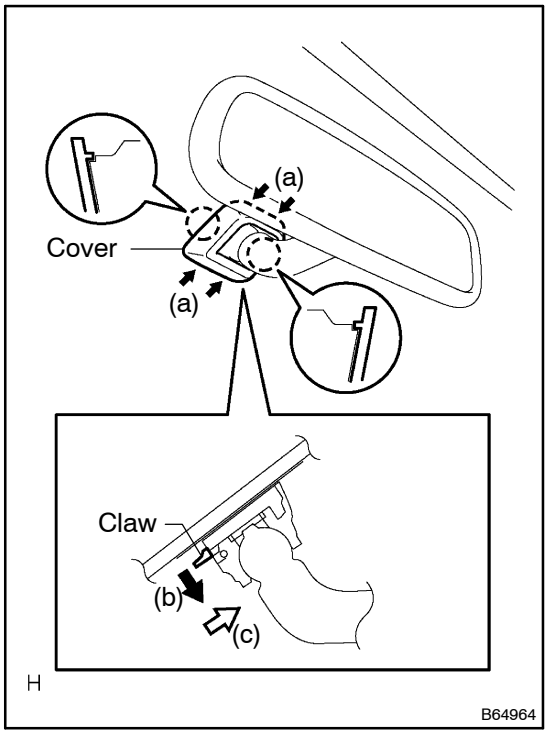

1. REMOVE INNER REAR VIEW MIRROR ASSY

(a) Push the (a) part in the direction indicated by the arrow marks and remove the cover.

(b) Pushing the claw in the (b) direction, slide the inner rear view mirror assy in the (c) direction and remove it.