OUTER REAR VIEW MIRROR ASSY LH

700OJ–01


REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.


1. REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (See page 75–12)

(a) Remove the front door lower frame bracket garnish LH.
(b) Remove the front door inside handle bezel LH.
(c) Remove the power window regulator master switch assy.
(d) Remove the front armrest assy LH.
(e) Remove the front door trim board LH.

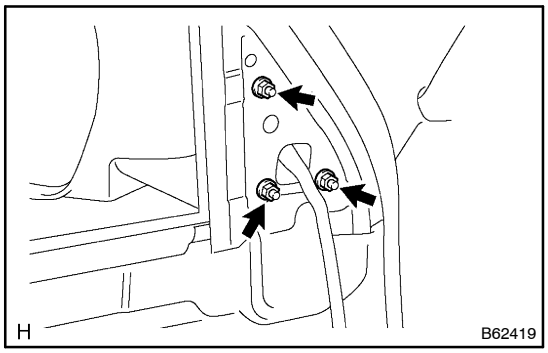

2. REMOVE OUTER REAR VIEW MIRROR ASSY LH

(a) Disconnect the connector.
(b) Remove the 3 nuts and mirror assy.

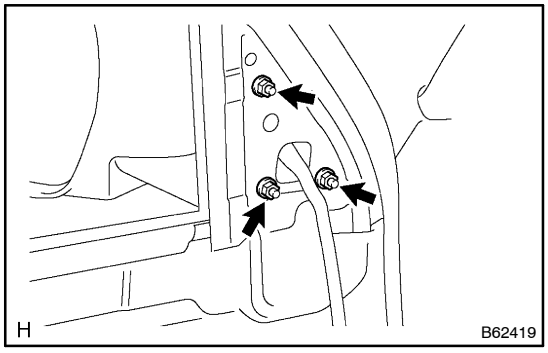

3. INSTALL OUTER REAR VIEW MIRROR ASSY LH

(a) Install the mirror assy with the 3 nuts.
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)
(b) Connect the connector.