710CO–01


INSPECTION

1. LIGHT CONTROL RHEOSTAT ASSY

(a) Check the continuity of light control rheostat when light control rheostat operation as shown in chart below.

Standard:

Terminal (Symbol)	Condition	Specified condition
2 (T) ⇔ Body ground	Ignition switch ON, Tail-light switch OFF → ON	Below 1V → 10 – 14V
3 (IG) ⇔ Body ground	Ignition switch OFF → ON	Below 1V → 10 – 14V
5 (E) ⇔ Body ground	Constant	Continuity

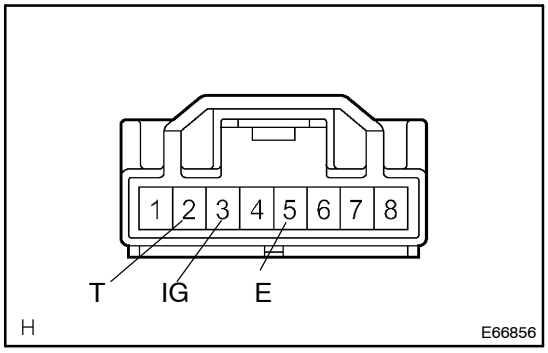

(b) Check resistance.

(1) Check the resistance between terminal 4 (RV) and terminal 3 (T) when operating the light control rheostat volume knob. Also, check that the resistance changes continuously.

Standard resistance:

Turn the knob to maximum: Approx. 10 kΩ

Turn the knob to minimum: Approx. 0 kΩ

