
710CZ–01

OVERHAUL


HINT:

COMPONENTS: See page 71–28


1. **REMOVE SHIFT LEVER KNOB SUB–ASSY (SEPARATED FRONT SEAT TYPE)**
2. **REMOVE SHIFT LEVER KNOB SUB–ASSY (SEPARATED FRONT SEAT TYPE)**
3. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE)** **(See page 71–13)**
4. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE)** **(See page 71–13)**
5. **REMOVE CONSOLE PANEL UPPER ASSY (SEPARATED FRONT SEAT TYPE)** **(See page 71–13)**
6. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY LH** **(See page 71–13)**
7. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY RH** **(See page 71–13)**
8. **REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER (SEPARATED FRONT SEAT TYPE)** **(See page 71–13)**
9. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (BENCH FRONT SEAT TYPE)** **(See page 71–13)**
10. **REMOVE INSTRUMENT COVER LOWER CENTER (BENCH FRONT SEAT TYPE)** **(See page 71–13)**
11. **REMOVE INTEGRATION CONTROL & PANEL ASSY** **(See page 55–106)**
12. **REMOVE RADIO BRACKET NO.1** **(See page 67–5)**
13. **REMOVE RADIO BRACKET NO.2** **(See page 67–5)**

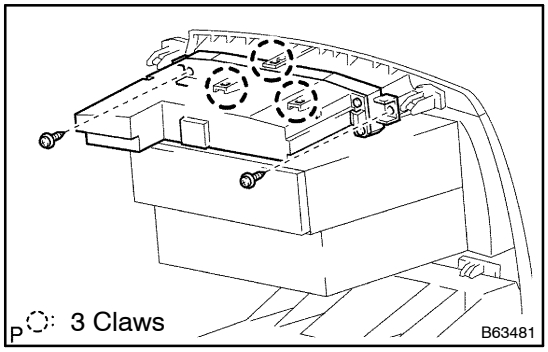


14. **REMOVE ACCESSORY METER ASSY**
(a) Remove the 2 screws.
(b) Disengage the 3 claws and remove the accessory meter assy.

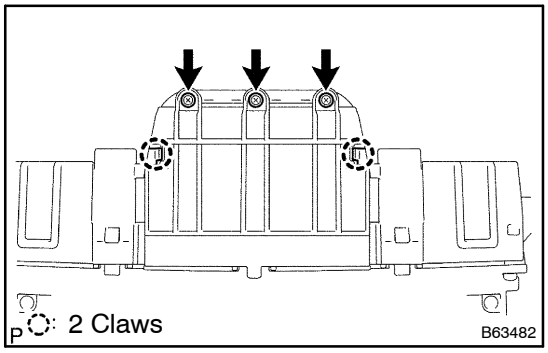

15. **REMOVE CENTER DISPLAY GLASS**
(a) Remove the 3 screws.
(b) Disengage the 2 claws.

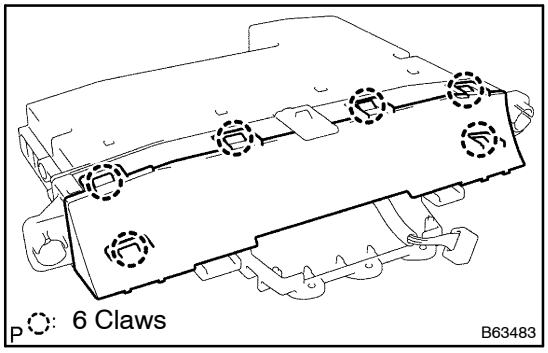


(c) Disengage the 6 claws and remove the center display glass.

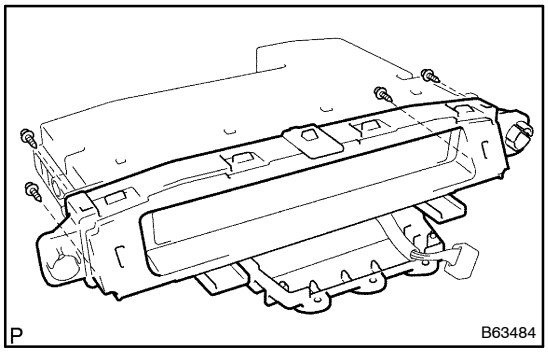

16. REMOVE ACCESSORY METER CASE ASSY

(a) Remove the 4 screws and accessory meter case assy.

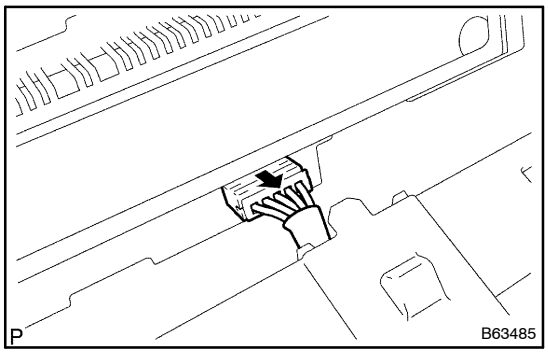

17. REMOVE ACCESSORY METER SWITCH

(a) Disconnect the connectors and remove the accessory meter switch.

18. REMOVE MULTI INFORMATION DISPLAY ECU