
710D1–01

OVERHAUL

HINT:

COMPONENTS: See page 71–31


1. **REMOVE SHIFT LEVER KNOB SUB–ASSY (SEPARATED FRONT SEAT TYPE)**
2. **REMOVE SHIFT LEVER KNOB SUB–ASSY (SEPARATED FRONT SEAT TYPE)**
3. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE)** **(See page 71–32)**
4. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE)** **(See page 71–32)**
5. **REMOVE CONSOLE PANEL UPPER ASSY (SEPARATED FRONT SEAT TYPE)** **(See page 71–32)**
6. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY LH** **(See page 71–32)**
7. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY RH** **(See page 71–32)**
8. **REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER (SEPARATED FRONT SEAT TYPE)** **(See page 71–32)**
9. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (BENCH FRONT SEAT TYPE)** **(See page 71–32)**
10. **REMOVE INSTRUMENT COVER LOWER CENTER (BENCH FRONT SEAT TYPE)** **(See page 71–32)**
11. **REMOVE INSTRUMENT CLUSTER FINISH PANEL COVER** **(See page 71–32)**
12. **REMOVE INTEGRATION CONTROL & PANEL ASSY** **(See page 55–106)**
13. **REMOVE RADIO BRACKET NO.1** **(See page 67–5)**
14. **REMOVE RADIO BRACKET NO.2** **(See page 67–5)**

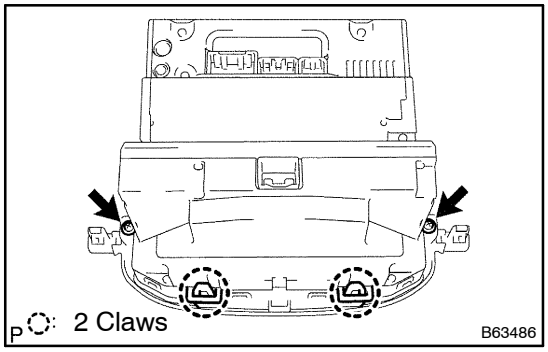

15. **REMOVE ACCESSORY METER ASSY**

(a) Remove the 2 screws.


(b) Disengage the 2 claws and remove the accessory meter assy.

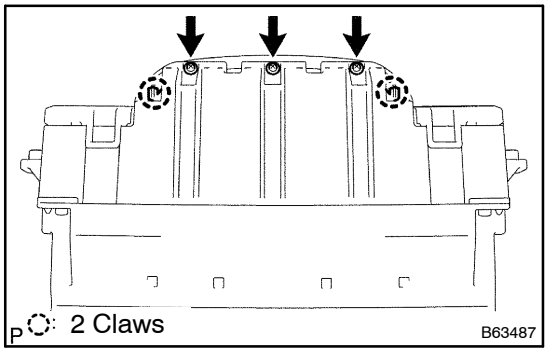


16. **REMOVE ACCESSORY METER SWITCH**

(a) Remove the 3 screws.

(b) Disengage the 2 claws.

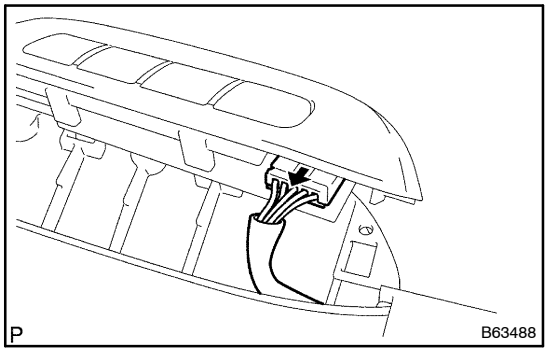


(c) Disconnect the connectors and remove the accessory meter switch.

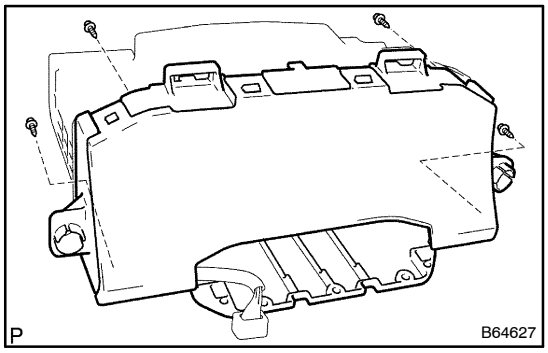

17. REMOVE CENTER DISPLAY GLASS

(a) Remove the 4 screws and center display glass.

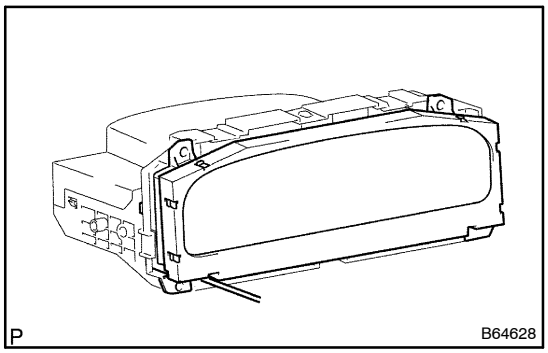

18. REMOVE ACCESSORY METER CASE ASSY

(a) Remove the accessory meter case assy.

19. REMOVE MULTI INFORMATION DISPLAY ECU