
720FJ–01

ON–VEHICLE INSPECTION

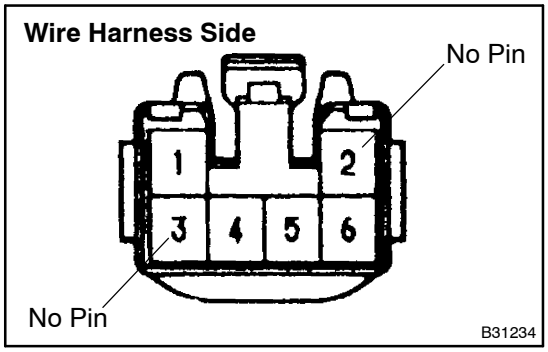

1. CHECK SEAT HEATER CONTROL

(a) Disconnect the connector from the seat heater control assy.

(b) Check the voltage or continuity of each terminal of the wire harness side.

Standard:

Terminal No.	Condition	Specified Condition
6 ⇔ Body ground	Constant	Continuity
1 ⇔ 6	(Seat heater switch) OFF → ON	0 V → 10 – 14 V
4 ⇔ 6	Constant	10 – 14 V

If the result is not as specified, there may be a malfunction on the wire harness side or seat heater switch.