

REAR NO.1 SEAT LH


COMPONENTS

720EZ-01

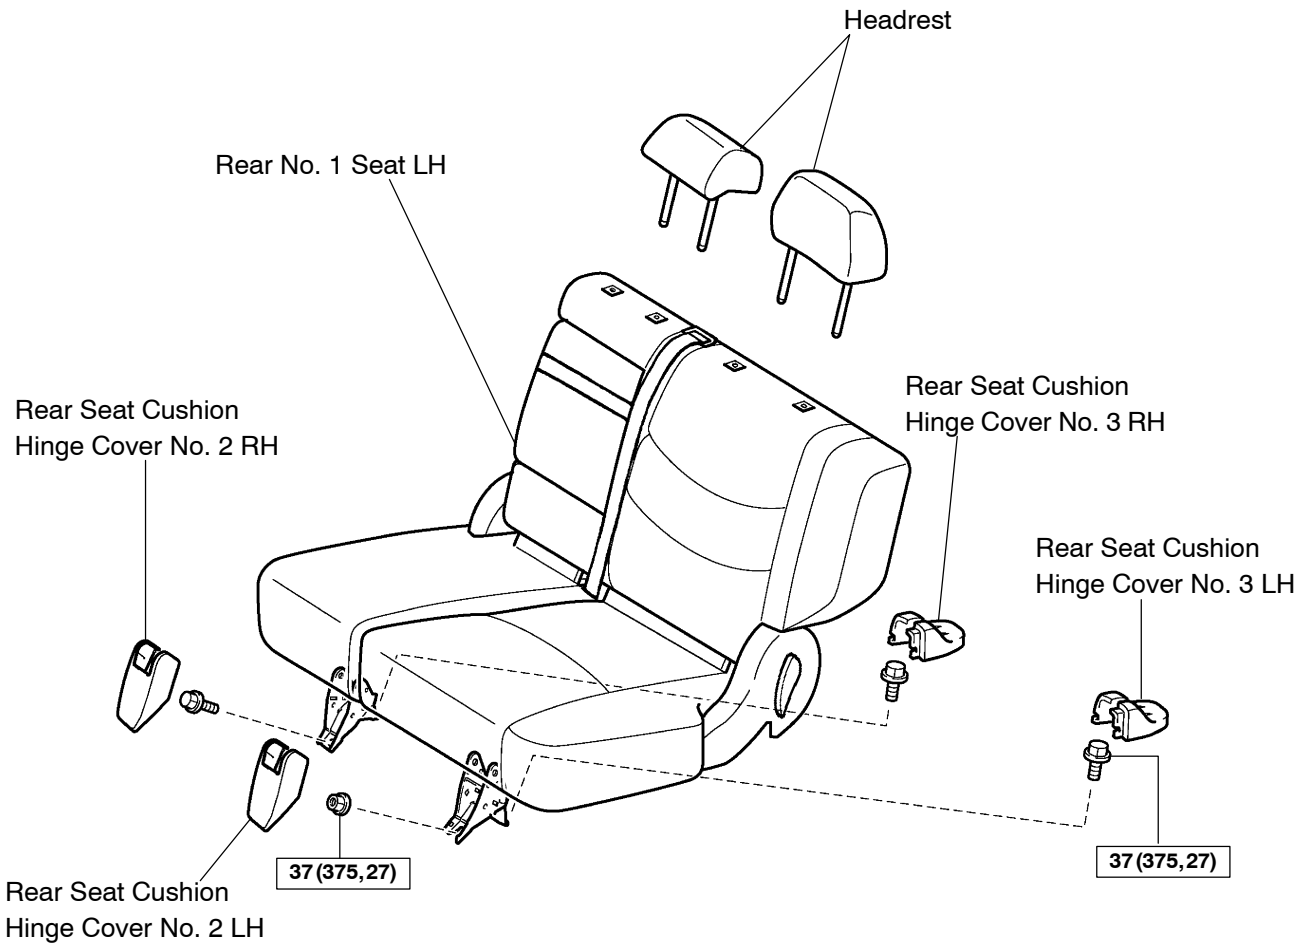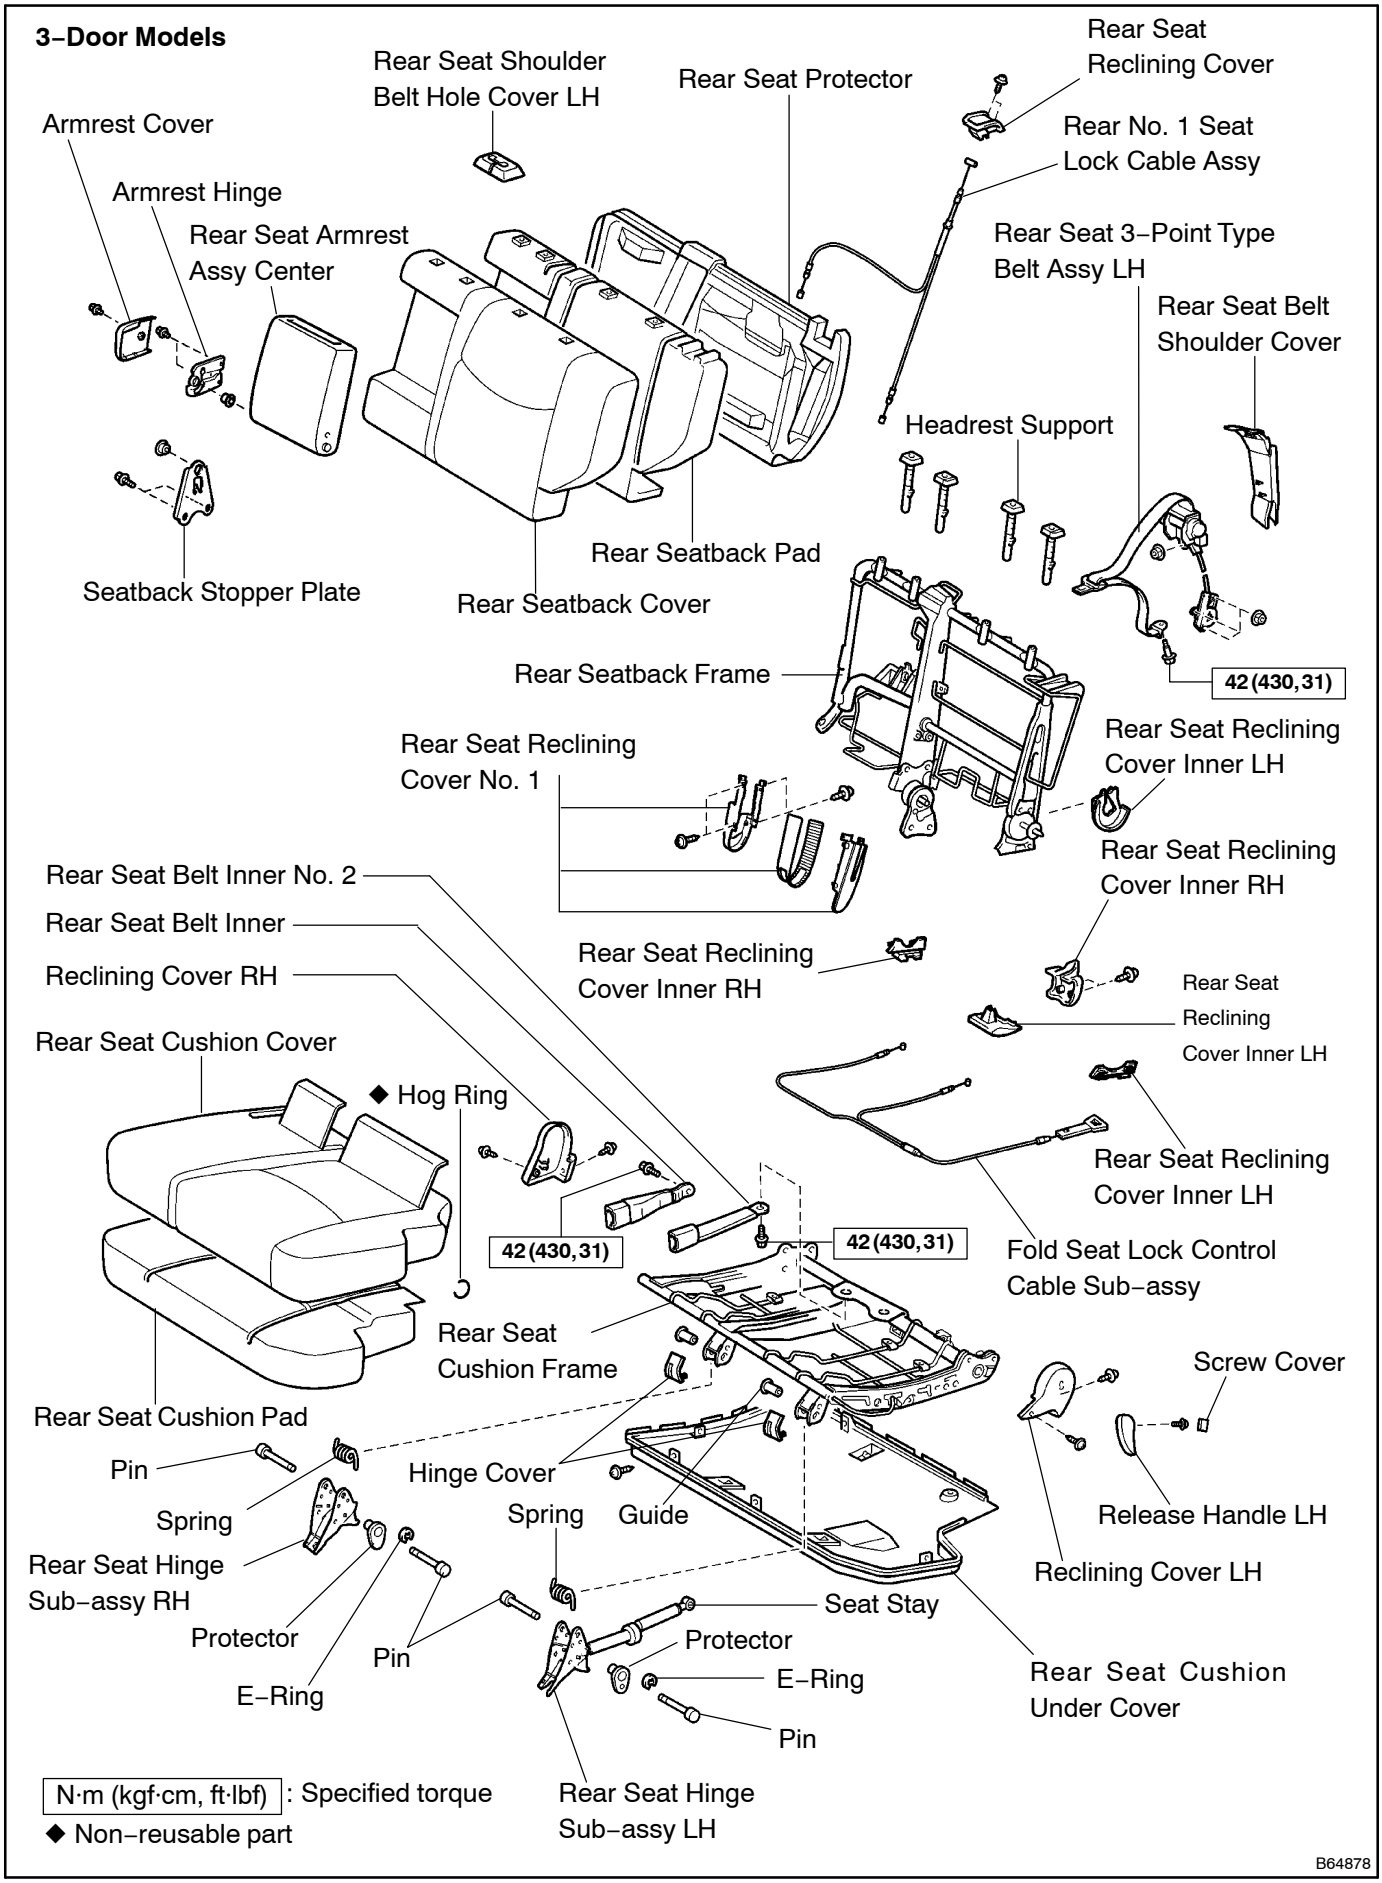


3–Door Models
Rear Seat Shoulder Belt Hole Cover LH
Rear Seat Protector
Rear Seat Reclining Cover
Armrest Cover
Rear No. 1 Seat Lock Cable Assy
Armrest Hinge
Rear Seat Armrest Assy Center
Rear Seat 3–Point Type Belt Assy LH
Rear Seat Belt Shoulder Cover
Headrest Support
Seatback Stopper Plate
Rear Seatback Pad
Rear Seatback Cover
Rear Seatback Frame
42 (430, 31)
Rear Seat Reclining Cover No. 1
Rear Seat Reclining Cover Inner LH
Rear Seat Belt Inner No. 2
Rear Seat Reclining Cover Inner RH
Rear Seat Belt Inner
Reclining Cover RH
Rear Seat Reclining Cover Inner RH
Rear Seat Reclining Cover Inner LH
Rear Seat Cushion Cover
◆ Hog Ring
42 (430, 31)
42 (430, 31)
Fold Seat Lock Control Cable Sub–assy
Rear Seat Cushion Frame
Screw Cover
Rear Seat Cushion Pad
Pin
Hinge Cover
Spring
Guide
Release Handle LH
Spring
Rear Seat Hinge Sub–assy RH
Reclining Cover LH
Seat Stay
Protector
Pin
Protector
E–Ring
Rear Seat Cushion Under Cover
E–Ring
Pin
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Rear Seat Hinge Sub–assy LH
B64878

5–Door Models

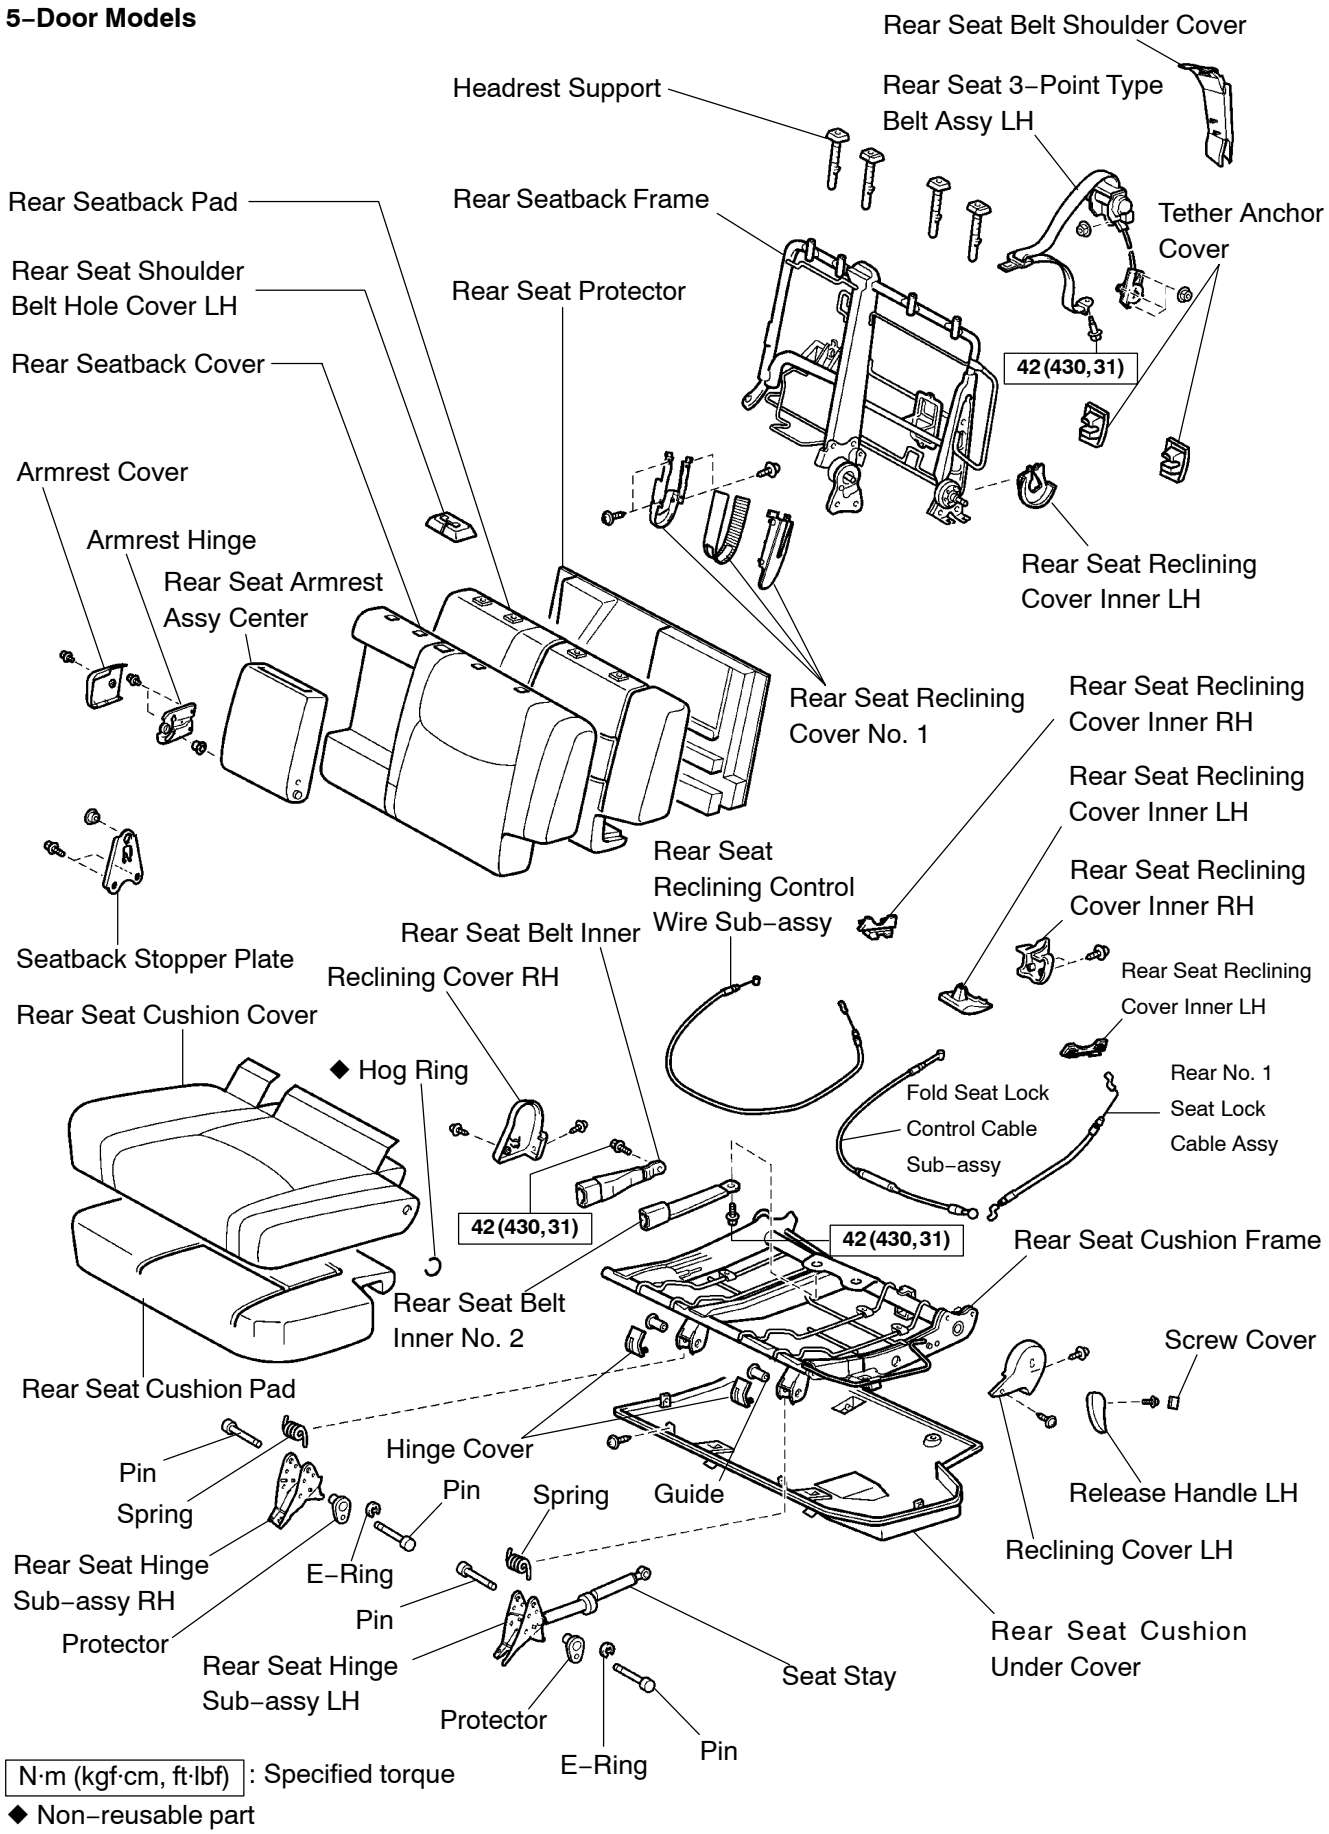

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

B64875