
720F0–01

OVERHAUL

1. REMOVE REAR NO.1 SEAT LH


(a) Remove the headrest.

(b) Tumble the seat.

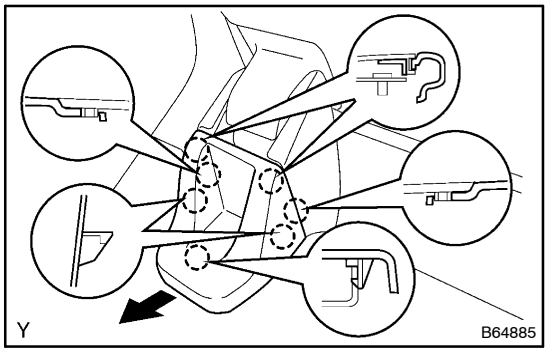

(c) Remove the rear seat cushion hinge cover No. 2 LH and RH.

(d) Set the rear seat to the floor.

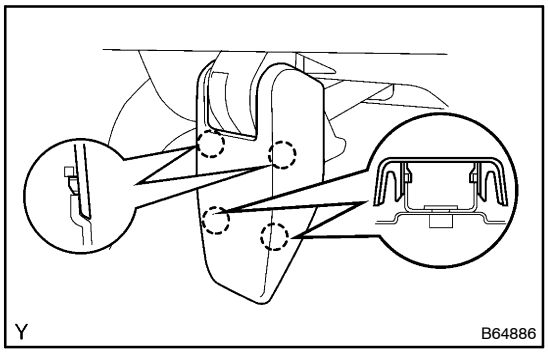


(e) Remove the rear seat cushion hinge cover No. 3 LH and RH.

(f) Tumble the seat.


(g) Remove the 3 bolts, nut and the seat.

2. REMOVE REAR SEAT CUSHION COVER LH


(a) Using a screwdriver, remove the screw cover, screw and the release handle LH.

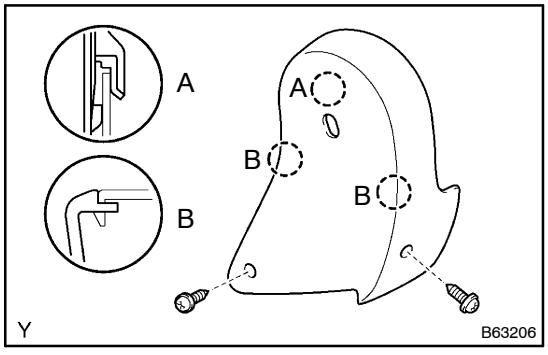


(b) Remove the 2 screws and the reclining cover LH.

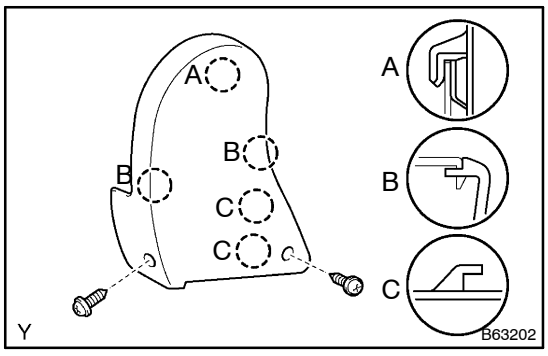

(c) Remove the 2 screws and the reclining cover RH.

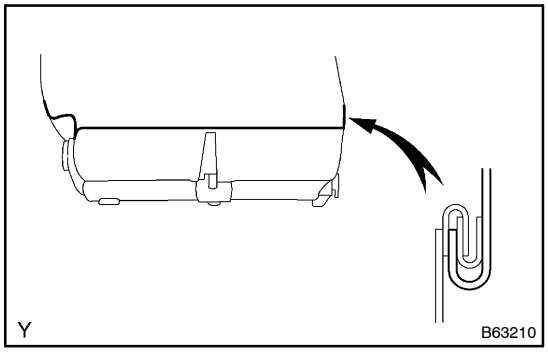

(d) Disengage the seatback cover hem.

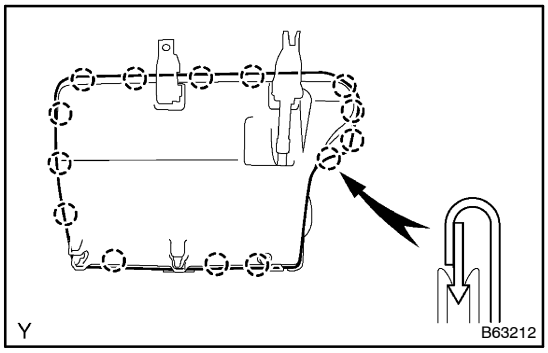

(e) Insert a screwdriver between the seat cushion cover and seat cushion under cover.

NOTICE:

Tape the screwdriver tip before using it pry parts.

(f) Pry the seat cushion cover hem to disengage it.

(g) Cut the hog rings and bring the seat cushion cover together with the pad.

(h) Remove the nut and disconnect the rear seat 3 point type seat belt assy LH.

(i) Remove the seat cushion cover together with the pad.

(j) Cut the hog rings and remove the seat cushion cover from the pad.

3. REMOVE REAR SEAT ARMREST ASSY CENTER

(a) Open the fastener of the seatback cover.


(b) Remove the screw and the armrest cover.

(c) Remove the 3 bolts, guide, armrest hinge and the armrest.

4. REMOVE REAR SEATBACK ASSY LH

(a) Disconnect the seat lock control cables from the seatback frame (5–door models).

(b) Remove the 3 bolts, washer, grommet and the seatback stopper plate.

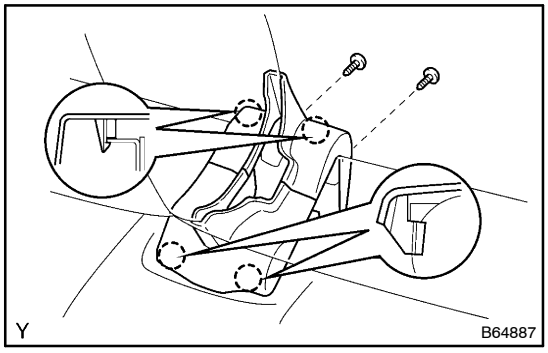


(c) Remove the 2 screws and the 2 reclining covers.

(d) Remove the 4 bolts and the rear seatback assy LH.

5. REMOVE REAR SEATBACK COVER LH

(a) Remove the 2 tether anchor covers (w/ tether anchor).

(b) Remove the rear seat protector.

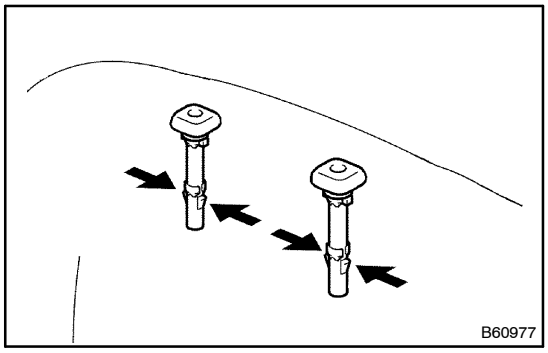

(c) Push the claws and remove the 4 headrest supports.

(d) Remove the rear seat shoulder belt hole cover.

(e) Remove the 2 screws and rear seat reclining cover (3–door models).

(f) Remove the seatback cover together with the pad.


(g) Cut the hog rings and remove the seatback cover.

6. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY LH

(a) Remove the 2 screws and the reclining adjuster cover sub–assy.

(b) Using a screwdriver, remove the rear seat shoulder belt hole cover.

(c) Remove the 2 nuts, 2 screws and the seat belt.

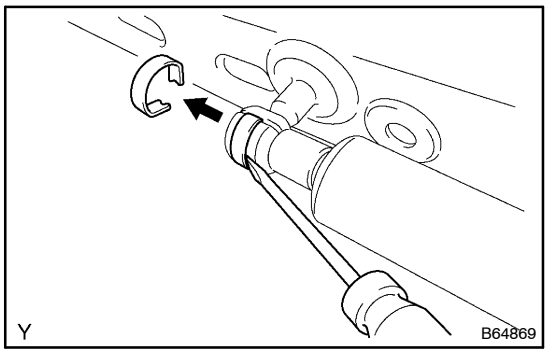

7. REMOVE REAR SEAT HINGE SUB–ASSY LH

(a) Using a screwdriver, remove the spring of the seat stay ball–joint.

(b) Disconnect the ball–joint from the seat cushion frame.

(c) Remove the hinge cover, E–ring, pin, hinge guide, spring and the hinge together with the seat stay.

8. REMOVE REAR SEAT HINGE SUB–ASSY RH

(a) Remove the hinge cover, E–ring, pin, hinge guide and the hinge.

9. REMOVE REAR SEAT CUSHION UNDER COVER SUB–ASSY LH

(a) Remove the 7 screws, cushion and the cover.

10. REMOVE REAR SEAT BELT INNER

(a) Remove the nut and rear seat belt inner.

(b) Remove the nut and rear seat belt inner No. 2.

11. REMOVE FOLD SEAT LOCK CONTROL CABLE ASSY NO.2

12. REMOVE REAR NO.1 SEAT LOCK CABLE ASSY

13. REMOVE REAR SEAT RECLINING CONTROL WIRE SUB–ASSY

14. INSTALL FOLD SEAT LOCK CONTROL CABLE ASSY NO.2

15. INSTALL REAR SEAT BELT INNER

(a) Install the rear seat belt inner No. 2 with the nut.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

(b) Install the rear seat belt inner with the nut.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

16. INSTALL REAR SEAT CUSHION UNDER COVER SUB–ASSY LH

(a) Install the cover with the 6 screws.

(b) Install the cushion with the screw.

17. INSTALL REAR SEAT HINGE SUB–ASSY RH

(a) Install the hinge guide to the hinge.
(b) Install the hinge with the pin and new E–ring.
(c) Install the hinge cover.

18. INSTALL REAR SEAT HINGE SUB–ASSY LH

(a) Install the spring to the ball–joint of the seat stay.
(b) Connect the ball–joint to the seat cushion frame securely.
(c) Install the spring and hinge guide to the hinge.
(d) Install the hinge with the pin and new E–ring.
(e) Install the hinge cover.

19. INSTALL NO.1 SEAT 3 POINT TYPE BELT ASSY LH

(a) Install the seat belt with the 2 nuts and 2 screws.
(b) Install the rear seat shoulder belt hole cover.
(c) Install the reclining adjuster cover sub–assy with the 2 screws.

20. INSTALL REAR SEATBACK COVER LH

(a) Install the seatback cover to the seatback pad with new hog rings.
(b) Install the seatback cover together with the pad to the seatback frame.
(c) Install the 2 headrest supports.


NOTICE:

Be careful not to mistake the headrest support direction.

(d) Connect the rear seat lock cable to the rear seat reclining cover.
(e) Install the rear seat reclining cover with the 2 screws (3–door models).
(f) Install the rear seat shoulder belt hole cover (3–door models).
(g) Install the rear seat protector.
(h) Install the 2 tether anchor covers (w/ tether anchor).

21. INSTALL REAR SEATBACK ASSY LH

(a) Install the rear seatback assy LH with the 4 bolts.
Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)

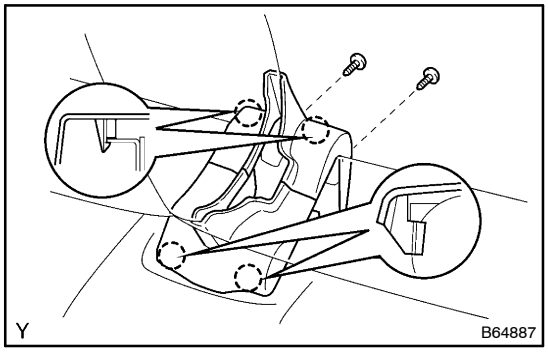

(b) Install the 2 reclining covers with the 2 screws.
(c) Install the seatback stopper plate to the seat cushion frame with the 2 bolts.
(d) Install the grommet, washer and the bolt.
(e) Connect the seat lock control cables to the seatback frame (5–doors models).

22. INSTALL REAR SEAT ARMREST ASSY CENTER

(a) Install the armrest.
(b) Install the guide to the armrest hinge.
(c) Install the armrest hinge with the 3 bolts.
(d) Install the armrest cover with the screw.
(e) Close the fastener of the seatback cover.


23. INSTALL REAR SEAT CUSHION COVER LH

(a) Install the seat cushion cover to the seat cushion pad with new hog rings.


(b) Install the No .1 seat 3 point type belt through the seat cushion pad.

(c) Install the No .1 seat 3 point type belt with the bolt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)


(d) Install the seat cushion cover together with the pad to the seat cushion frame with new hog rings.

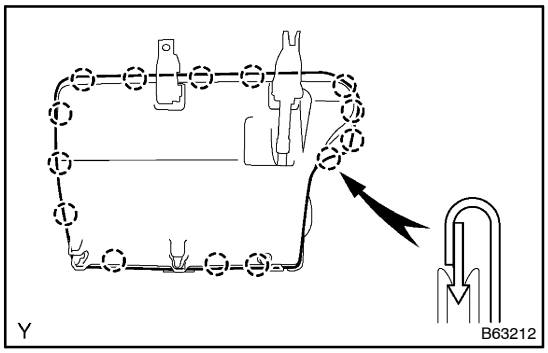


(e) Engage the seat cushion cover hem to the seat cushion under cover securely.

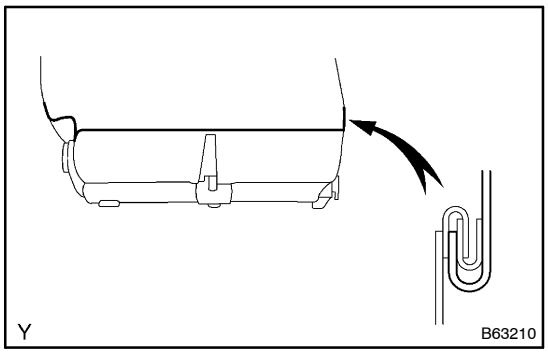

(f) Engage the seatback cover hem.

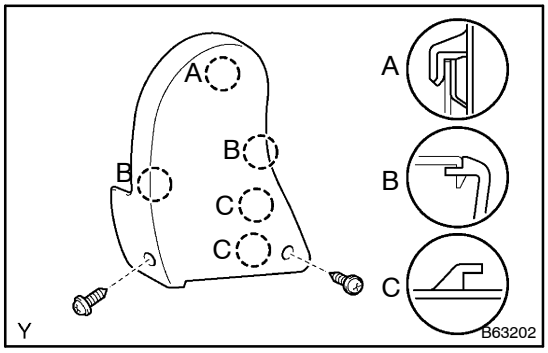

(g) Install the reclining cover RH with the 2 screws.

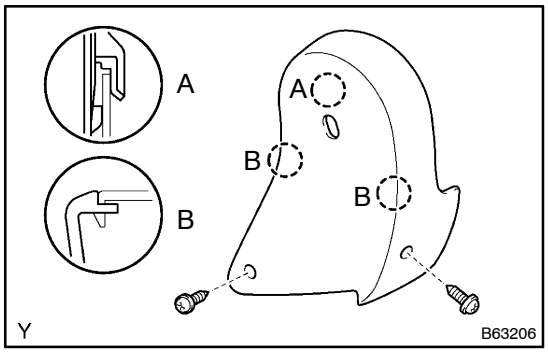

(h) Install the reclining cover LH with the 2 screws.


(i) Install the the release handle LH with the screw.

(j) Install the screw cover.

24. INSTALL REAR NO.1 SEAT LH


(a) Install the seat with the 3 bolts and the nut.
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

(b) Set the rear seat to the floor.

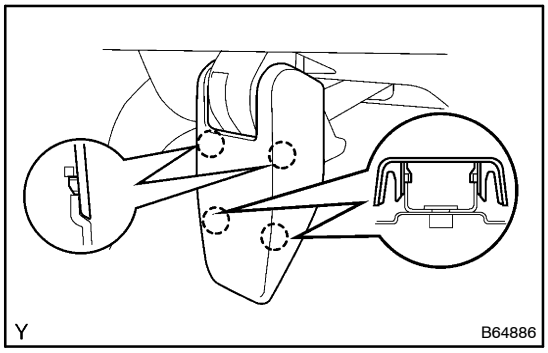

(c) Install the rear seat cushion hinge cover No. 3 LH and RH.

(d) Tumble the seat.

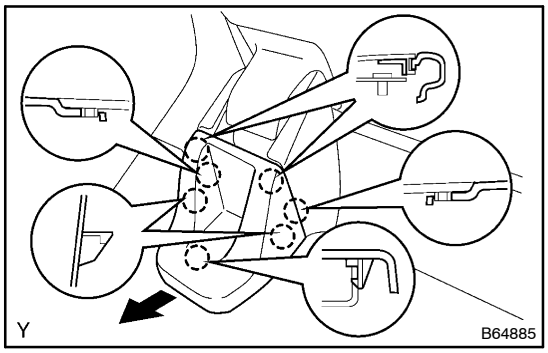

(e) Install the rear seat cushion hinge cover No. 2 LH and RH.

(f) Install the headrest.