
720F2–01


OVERHAUL

1. REMOVE REAR NO.1 SEAT RH


(a) Remove the headrest.
(b) Tumble the seat.

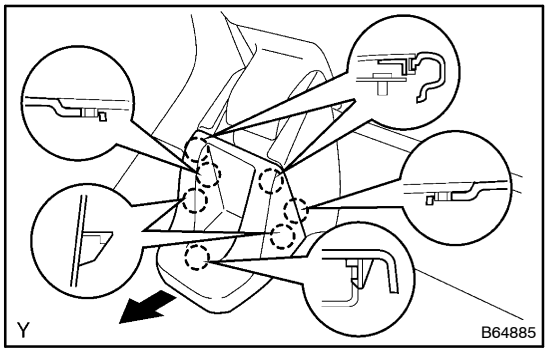

(c) Remove the rear seat cushion hinge cover No. 2 LH and RH.
(d) Set the rear seat to the floor.

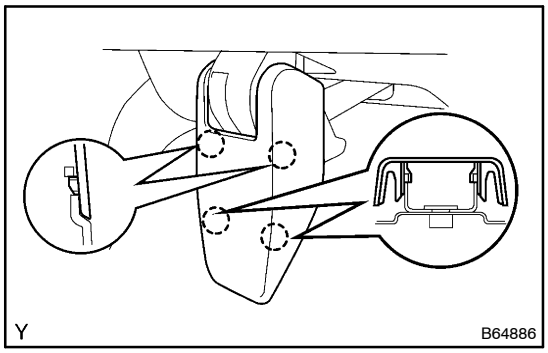


(e) Remove the rear seat cushion hinge cover No. 3 LH and RH.
(f) Tumble the seat.
(g) Remove the 3 bolts, nut and the seat.

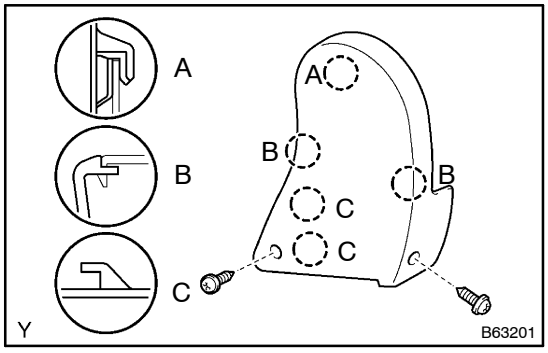


2. REMOVE REAR SEAT CUSHION COVER RH


(a) Remove the 2 screws and the reclining cover LH.
(b) Using a screwdriver, remove the screw cover, screw and the release handle RH.

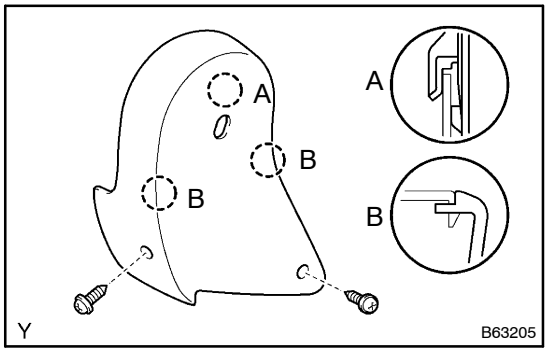


(c) Remove the 2 screws and the reclining cover RH.

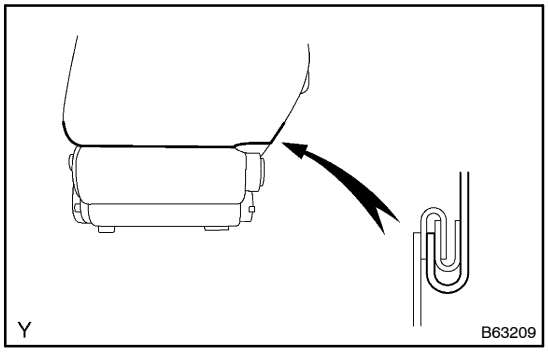

(d) Disengage the seat back cover hem.
(e) Remove the tether anchor cover (w/ tether anchor).
(f) Open the fastener of the seatback cover, remove the rear seat protector.

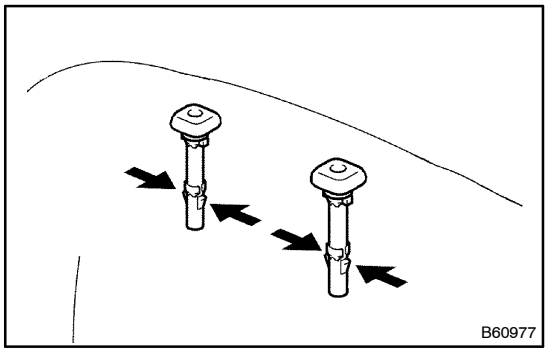

(g) Push the claws and remove the 2 headrest supports.
(h) Remove the 2 screws and the rear seat reclining cover (3–door models).
(i) Remove the seatback cover together with the pad.
(j) Cut the hog rings and remove the seatback cover.

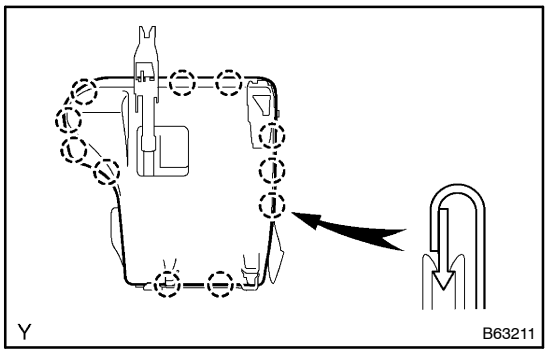

3. REMOVE REAR SEATBACK COVER RH

(a) Insert a screwdriver between the seat cushion cover and seat cushion under cover.


NOTICE:

Tape the screwdriver tip before using it pry parts.

(b) Pry the seat cushion cover hem to disengage it.
(c) Cut the hog rings and remove the seat cushion cover together with the pad.
(d) Cut the hog rings and remove the seat cushion cover.

4. REMOVE REAR SEAT HINGE SUB–ASSY LH

(a) Remove the hinge cover, E–ring, pin, hinge guide and the hinge.

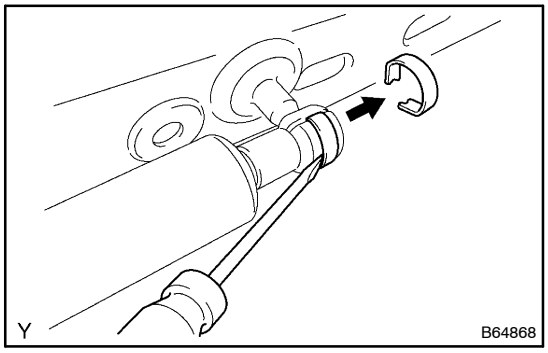

5. REMOVE REAR SEAT HINGE SUB–ASSY RH

(a) Using a screwdriver, remove the spring of the seat stay ball–joint.
(b) Disconnect the ball–joint from the seat cushion frame.
(c) Remove the hinge cover, E–ring, pin, hinge guide, spring and the hinge together with the seat stay.

6. REMOVE REAR SEAT CUSHION UNDER COVER SUB–ASSY RH

(a) Remove the 4 screws and the cover.

7. REMOVE REAR SEAT BELT INNER

(a) Remove the nut and the belt.

8. REMOVE REAR NO.1 SEAT LOCK CABLE ASSY

9. REMOVE FOLD SEAT LOCK CONTROL CABLE ASSY NO.2

10. INSTALL FOLD SEAT LOCK CONTROL CABLE ASSY NO.2

11. INSTALL REAR NO.1 SEAT LOCK CABLE ASSY

12. INSTALL REAR SEAT BELT INNER

(a) Remove the nut and the belt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

13. INSTALL REAR SEAT CUSHION UNDER COVER SUB–ASSY RH

(a) Remove the 4 screws and the cover.

14. INSTALL REAR SEAT HINGE SUB–ASSY RH


(a) Install the spring to the ball–joint of the seat stay.
(b) Connect the ball–joint to the seat cushion frame securely.
(c) Install the spring and hinge guide to the hinge.
(d) Install the hinge with the pin and new E–ring.
(e) Install the hinge cover.

15. INSTALL REAR SEAT HINGE SUB–ASSY LH

(a) Install the hinge guide to the hinge.
(b) Install the hinge with the pin and new E–ring.
(c) Install the hinge cover.

16. INSTALL REAR SEAT CUSHION COVER RH

(a) Install the seat cushion cover to the seat cushion pad with new hog rings.
(b) Install the seat cushion cover together with the pad to the seat cushion frame with new hog rings.

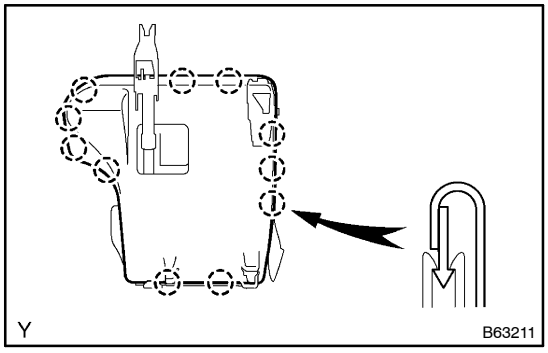


(c) Engage the seat cushion cover hem to the seat cushion under cover securely.

17. INSTALL REAR SEATBACK COVER RH


(a) Install the seatback cover to the seatback pad with new hog rings.
(b) Install the seatback cover together with the pad to the seatback frame.
(c) Install the 2 headrest supports.
(d) Install the rear seat reclining cover with the 2 screws (3–door models).
(e) Install the rear seat shoulder belt hole cover (3–door models).

NOTICE:
Be careful not to mistake the headrest support direction.


(f) Install the rear seat protector and close the fastener of the seatback cover.
(g) Install the tether anchor cover (w/ tether anchor).

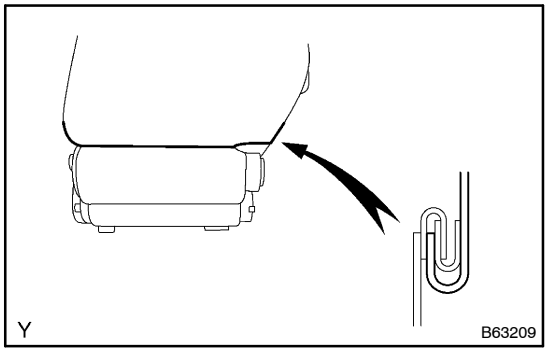

(h) Engage the seat back cover hem.

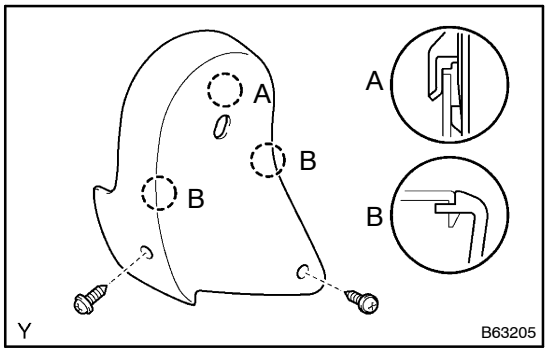


(i) Install the reclining cover RH with the 2 screws.
(j) Install the release handle RH with the screw.
(k) Install the screw cover.

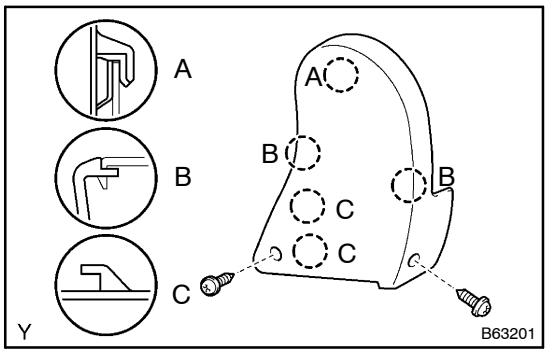


(l) Install the reclining cover LH with the 2 screws.

18. INSTALL REAR NO.1 SEAT RH

(a) Install the seat with the 3 bolts and the nut.
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
(b) Set the rear seat to the floor.

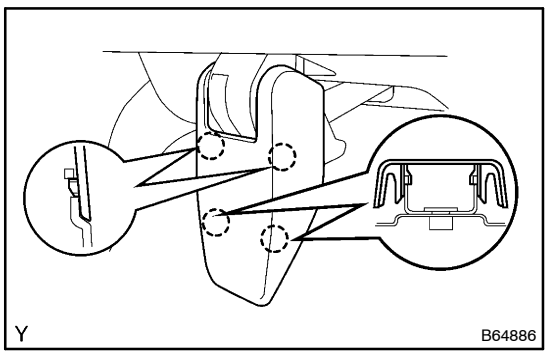

(c) Install the rear seat cushion hinge cover No. 3 LH and RH.
(d) Tumble the seat.

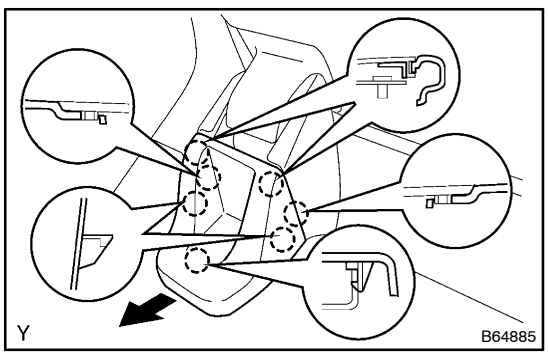

(e) Install the rear seat cushion hinge cover No. 2 LH and RH.
(f) Install the headrest.