TRANSMITTER BATTERY


REPLACEMENT

730EW–01

1. REMOVE TRANSMITTER SUB–ASSY MODULE SET DOOR CONTROL (See page 73–25)

NOTICE:

Special caution should be taken for handling each component as they are precision electronic components.

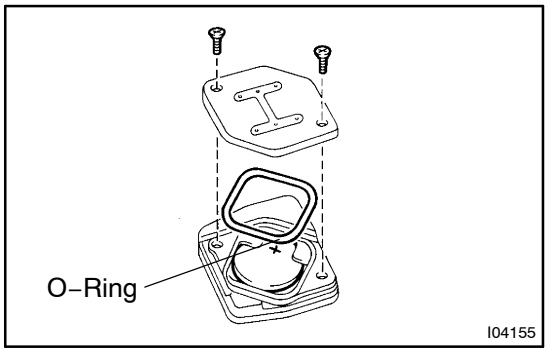


2. REMOVE TRANSMITTER BATTERY

(a) Using a screwdriver, remove the 2 screws and cover.

(b) Remove the transmitter battery (lithium battery).

NOTICE:

- **Do not push the terminals with your finger.**
- **Prying up the battery (lithium battery) to forcibly remove it will cause deformation of the terminals.**
- **Do not touch the battery with wet hands. Water may cause unexpected rust.**
- **Do not touch or move any components inside the transmitter, or it may interfere with the proper operation.**

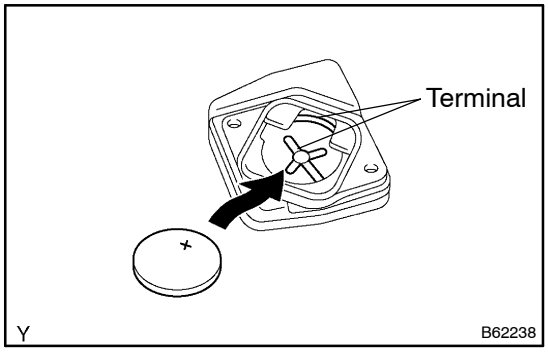

3. INSTALL TRANSMITTER BATTERY

(a) Install a new battery (lithium battery) with the positive (+) side up, as shown in the illustration.

NOTICE:

- **Be sure the positive side and the negative side of the transmitter battery are faced correctly.**
- **Be careful not to bend the electrode of the transmitter battery insertion.**
- **Be careful that no dust or oil adheres to the transmitter case.**

(b) Check that O–ring is not distorted or slipped off, and install the cover.

(c) Using a screwdriver, tighten the 2 screws.

NOTICE:

If the screws are loose, it may cause faulty contact between the battery (lithium battery) and the terminals.