
750IG–01


ADJUSTMENT

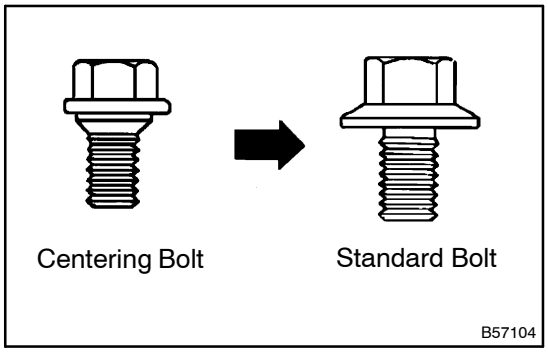

HINT:
Since a centering bolt is used as a hood hinge set bolt and hood lock set bolt, the hood and hood lock can not be adjusted with them on. Substitute a bolt with a washer for the centering bolt.


1. INSPECT HOOD SUB–ASSY

(a) Check that the clearance is within the standard value.

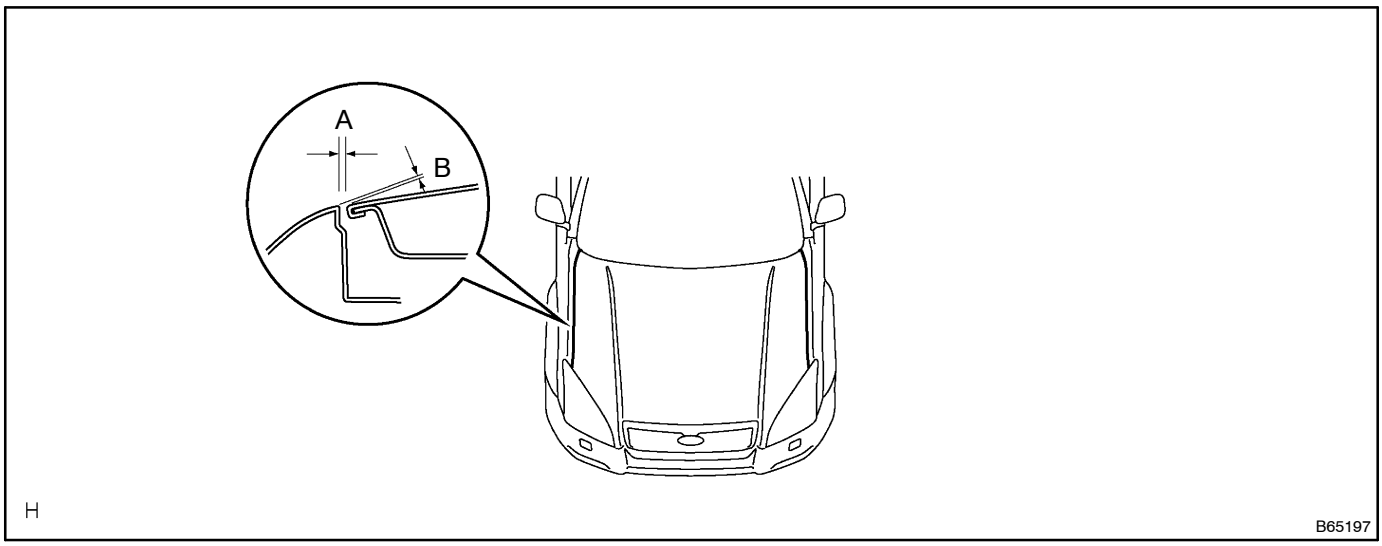

Standard:


A	3.9 ± 1.5 mm (0.154 ± 0.059 in.)
B	0.4 ± 1.5 mm (0.015 ± 0.059 in.)

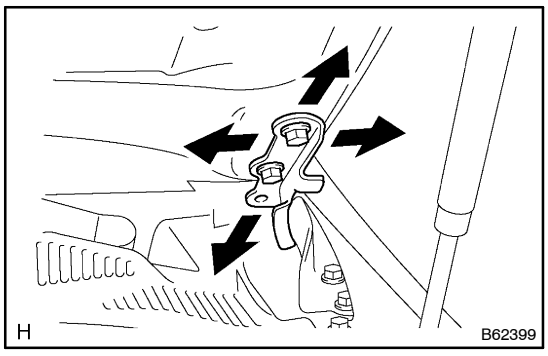

2. ADJUST HOOD SUB–ASSY

(a) Horizontally adjust the hood.

(1) Loosen the 4 hood hinge set bolts on the hood side.

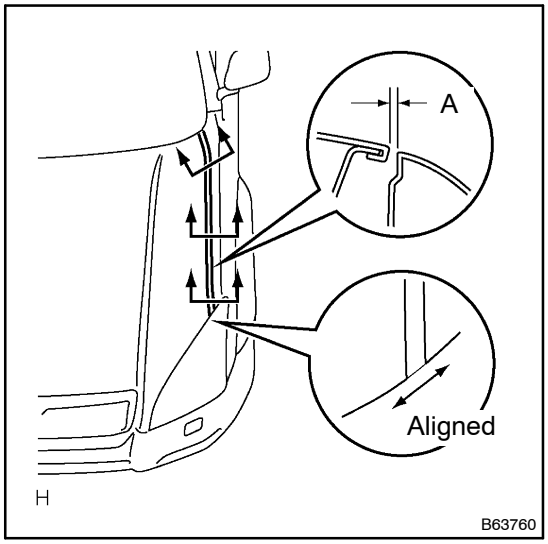


(2) Adjust the clearance so that it will be in the standard value, by moving the hood.

Standard A: 3.9 ± 1.5 mm (0.154 ± 0.059 in.)

(3) Tighten the hood side hinge bolts after the adjustment.

Torque: 13 N·m (130 kgf·cm, 10 ft·lbf)

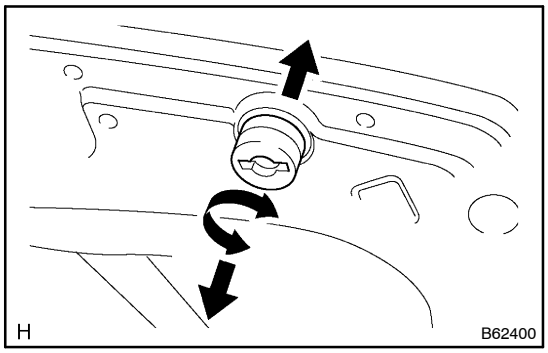

(b) Adjust the height of the hood front end by the cushion rubber.

(1) Adjust the cushion rubber so that the hood and the fender will be aligned.

HINT:


The cushion rubber goes up and down by turning it.

(c) Adjust the hood lock.

(1) Using a clip remover, remove the 8 clips and radiator support upper.

(2) Remove the radiator support upper.

(3) Using a screwdriver, disengage the 4 clips.

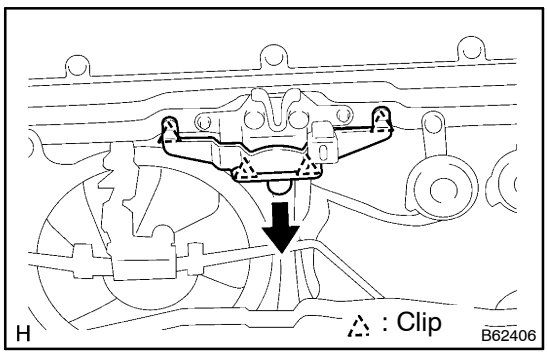


HINT:

Tape the screwdriver tip before use.

(4) Remove the hood lock release lever protector.

NOTICE:

Removing the protector damages the clips inside the protector therefore, the use of a new protector is necessary on the installation.

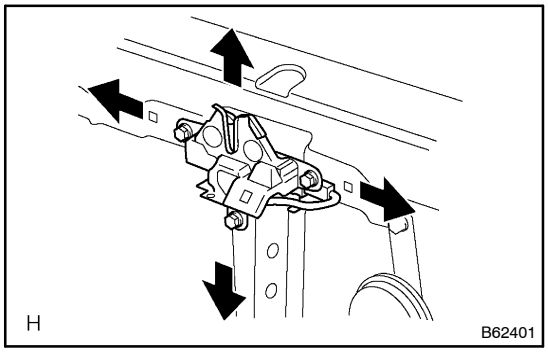

(5) Adjust the hood lock position so that the striker will come in, by moving the striker.

(6) Tighten the hood lock bolts after the adjustment.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)