
HOOD SUPPORT ASSY LH

750II–01

REPLACEMENT

HINT:
On the RH side, use the same procedures as on the LH side.

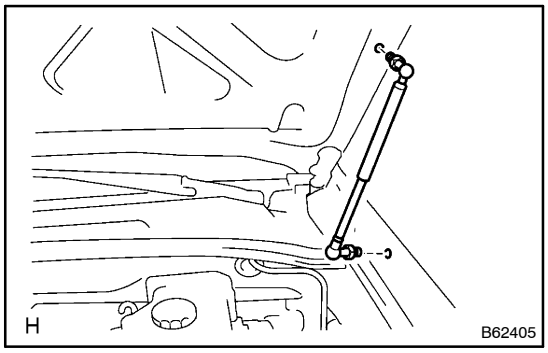

1. REMOVE HOOD SUPPORT ASSY LH

(a) Remove the bolt and hood support assy from the hood panel.

HINT:
While supporting the hood by hand, remove the hood support.

(b) Remove the bolt and hood support assy from the vehicle body.

2. INSTALL HOOD SUPPORT ASSY LH

(a) Install the hood support assy with the 2 bolts.
Torque: 17.5 N·m (180 kgf·cm, 13 ft·lbf)