
750IJ–01

DISPOSAL

HINT:

On the RH side, use the same procedures as on the LH side.

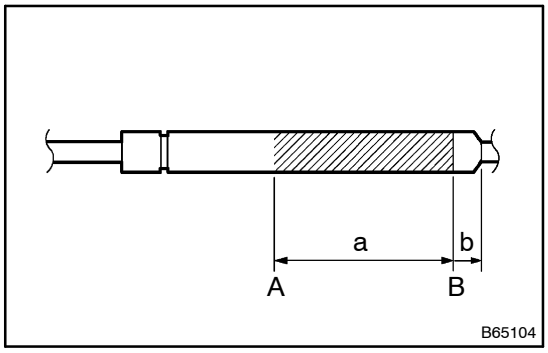

1. DISPOSE OF HOOD SUPPORT ASSY LH

(a) Horizontally fix the hood support assy on a vise, with the piston rod pulled out.

(b) With protection glasses on, gradually cut a part between A and B as shown in the illustration using a metal saw to gradually release the gas.

Dimension:

a	80 mm (3.15 in.)
b	20 mm (0.80 in.)

NOTICE:

Although the gas inside the hood support assy is colorless, odorless and harmless, there is a possibility that cutting tips of the metal saw would scatter. Therefore, cover it with clothes or something.