
750IO–01

# ADJUSTMENT

HINT:


- On the RH side, use the same procedures as on the LH side.

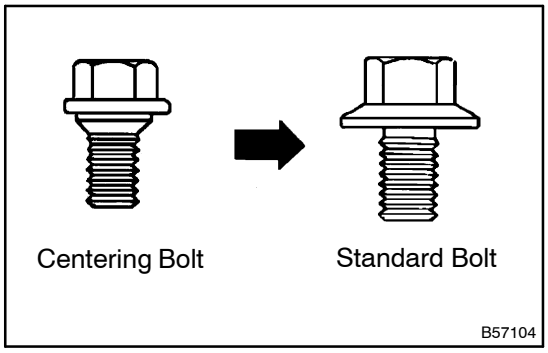


- Since a centering bolt is used as door hinge set bolts on the body side and the door side, the door can not be adjusted with them on. Substitute a bolt with a washer for the centering bolt.


### 1. INSPECT REAR DOOR PANEL SUB–ASSY LH

(a) Check that the clearance is within the standard value.

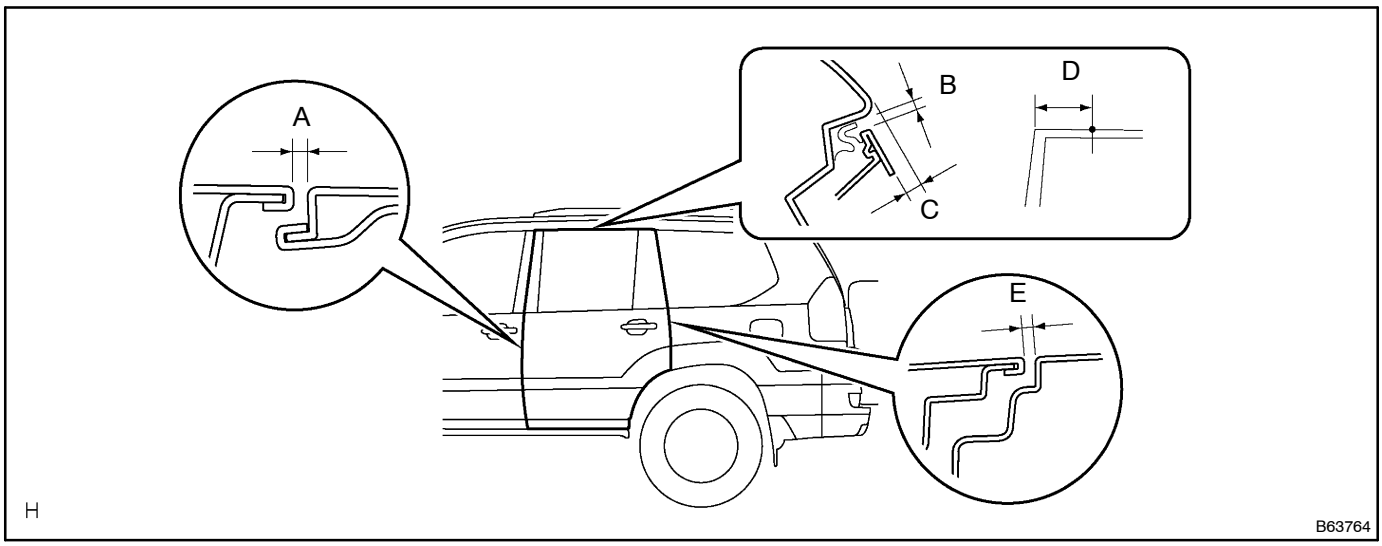


**Standard:**


| | |
|---|---|
| A | 5.0 ± 1.5 mm (0.197 ± 0.059 in.) |
| B | 5.5 ± 1.5 mm (0.220 ± 0.059 in.) |
| C | 6.2 ± 1.5 mm (0.244 ± 0.059 in.) |
| D | 160 mm (6.30 in.) |
| E | 4.5 ± 1.5 mm (0.177 ± 0.059 in.) |

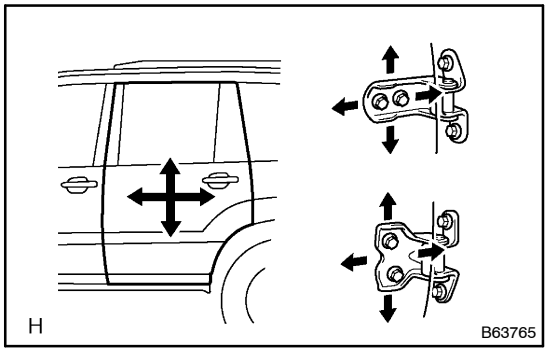


**2. ADJUST REAR DOOR PANEL SUB–ASSY LH**


(a) Adjust the door forward/rearward and vertically by loosening the body side hinge bolts.

(b) Tighten the body side hinge bolts after the adjustment.
**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

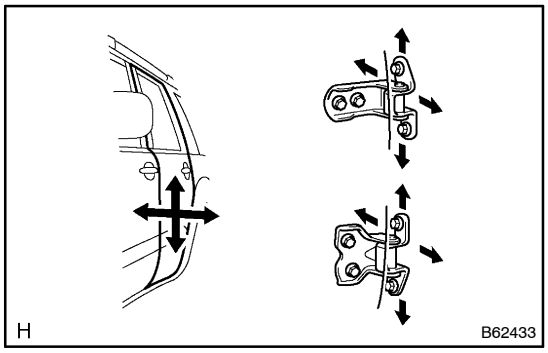


(c) Horizontally and vertically adjust the door by loosening the door side hinge bolts.

(d) Tighten the body side hinge bolts after the adjustment.
**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

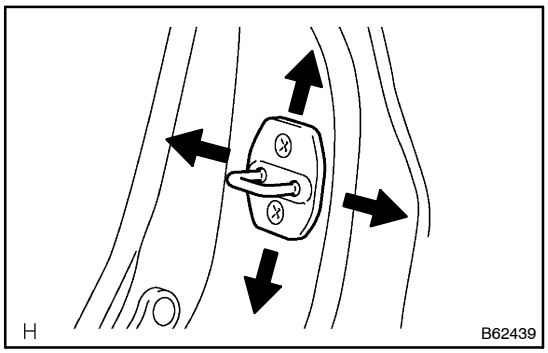


(e) Adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic–faced hammer.

(f) Tighten the striker mounting screws after the adjustment.
**Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)**