
ROOF RACK ASSY LH

760PS–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.
- On the RH side, use the same precedure as on the LH side.

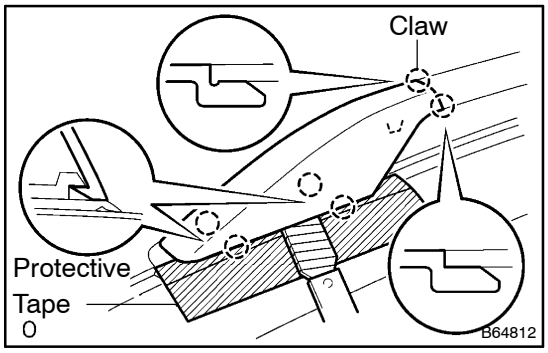

1. REMOVE ROOF RACK LEG COVER FRONT LH

(a) Put protective tape under the roof panel.

(b) Using a scraper, disengage the 5 claws and remove the leg cover.


HINT:

Tape the scraper tip before use.

2. REMOVE ROOF RACK LEG COVER FRONT RH

HINT:

Use the same procedures described above for the LH side.

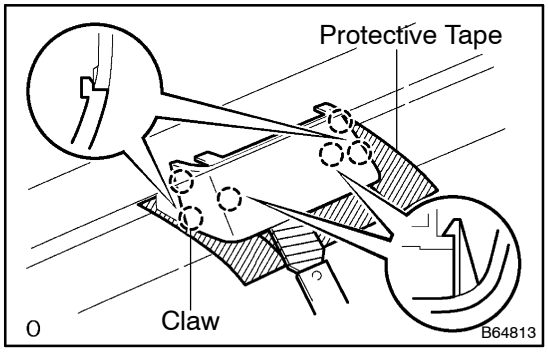

3. REMOVE ROOF RACK LEG COVER CENTER LH

(a) Put protective tape under the roof panel.

(b) Using a scraper, disengage the 6 claws and remove the leg cover.


HINT:

Tape the scraper tip before use.

4. REMOVE ROOF RACK LEG COVER CENTER RH

HINT:

Use the same procedures described above for the LH side.

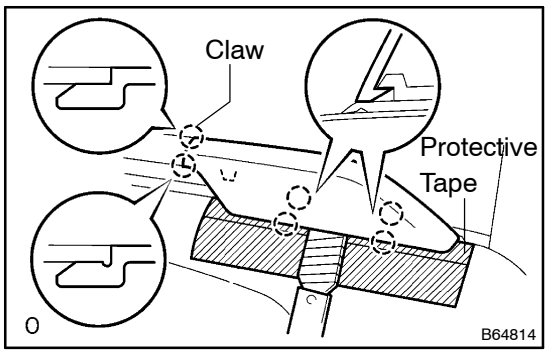

5. REMOVE ROOF RACK LEG COVER REAR LH

(a) Put protective tape under the roof panel.

(b) Using a scraper, disengage the 6 claws and remove the leg cover.

HINT:

Tape the scraper tip before use.

6. REMOVE ROOF RACK LEG COVER REAR RH

HINT:

Use the same procedures described above for the LH side.

7. REMOVE ROOF RACK ASSY LH

(a) Remove the 5 bolts and roof rack assy.

8. REMOVE ROOF RACK ASSY RH

(a) Remove the 5 bolts and roof rack assy.