REAR DOOR BELT MOULDING LH


760Q0–01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal.
- On the RH side, use the same procedures as on the LH side.

1. **REMOVE POWER WINDOW REGULATOR SWITCH ASSY (5–DOOR MODELS)** **(See page 75–24)**
2. **REMOVE REAR DOOR INSIDE HANDLE BEZEL LH (5–DOOR MODELS) (See page 75–24)**
3. **REMOVE REAR LH ARMREST ASSY (5–DOOR MODELS) (See page 75–24)**
4. **REMOVE REAR DOOR TRIM BOARD SUB–ASSY LH (5–DOOR MODELS) (See page 75–24)**
5. **REMOVE REAR DOOR WINDOW FRAME MOULDING FRONT LH (5–DOOR MODELS)** **(See page 76–33)**

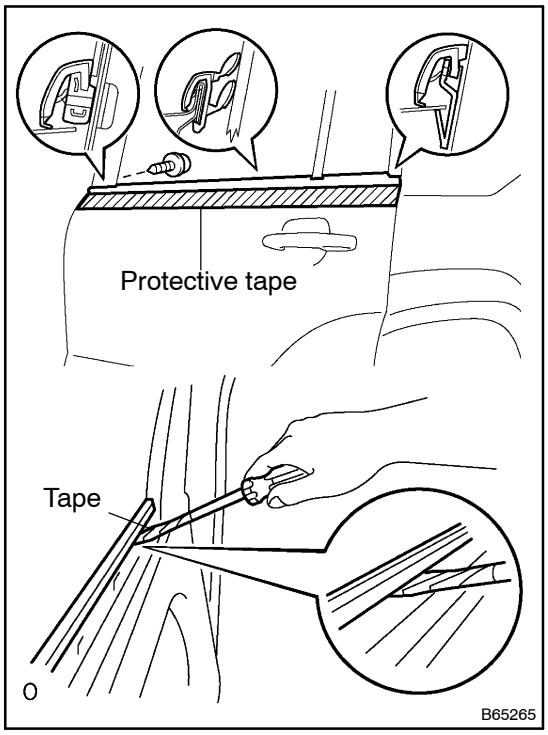

6. **REMOVE REAR DOOR BELT MOULDING LH (5–DOOR MODELS)**

(a) Remove the screw.

(b) Put protective tape under the moulding.

(c) Using a screwdriver or moulding remover, disengage the claw and remove the moulding.

HINT:

Tape the screwdriver tip before use.