QUARTER BELT MOULDING LH

760Q8–02

REPLACEMENT


HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

1. REMOVE REAR NO. 2 SEAT ASSY LH (See page 72–46)

2. REMOVE ROOF SIDE GARNISH INNER LH (See page 76–54 or 76–58)

(a) 5–door models only:
Remove the quarter scuff plate inside LH.
(b) Remove the rear door scuff plate LH.
(c) Remove the rear door opening trim weatherstrip LH.
(d) Remove the back door weatherstrip.
(e) Remove the rear floor mat support plate rear.
(f) Remove the quarter inside trim board LH.
(g) Remove the roof side garnish inner LH.
(h) Remove the quarter window assy LH.

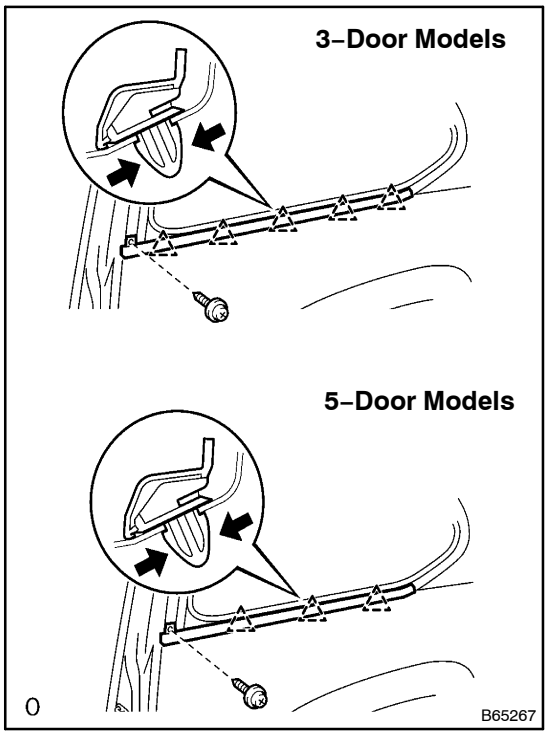

3. REMOVE QUARTER BELT MOULDING LH

(a) Remove the screw.
(b) Using long nose pliers, disengage the 5 claws (3–door models) or 3 claws (5–door models) and remove the belt moulding.

HINT:
Tape the tips of the pliers before use.