
760Q2-01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.
- On the RH side, use the same procedures as on the LH side.

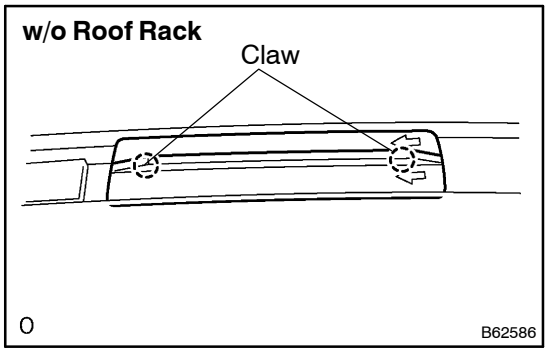


1. REMOVE ROOF DRIP SIDE FINISH MOULDING JOINT COVER LH (w/o ROOF RACK)

(a) Using a screwdriver, disengage the 2 claws and remove the joint cover.

HINT:

Tape the screwdriver tip before use.

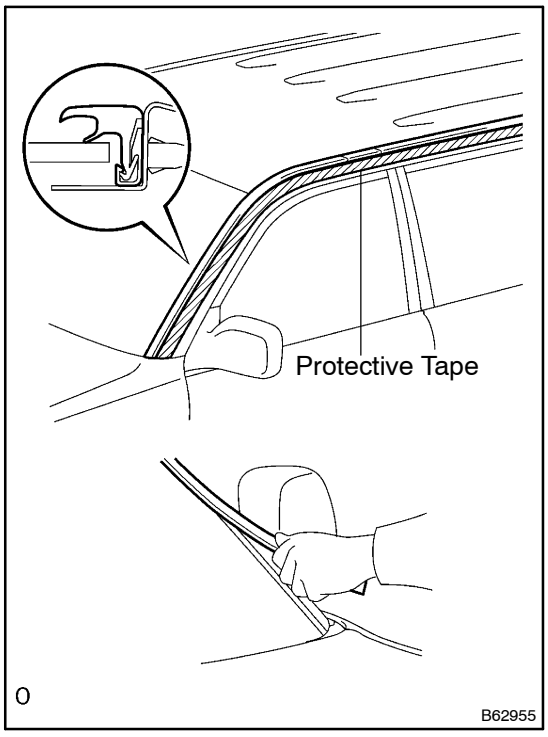


2. REMOVE WINDSHIELD MOULDING OUTSIDE LH

(a) Put protective tape around the moulding.

(b) Pull out the moulding by hand.

NOTICE:

- **Be careful not to damage the moulding.**
- **If the moulding is damaged, exchange it for a new one.**

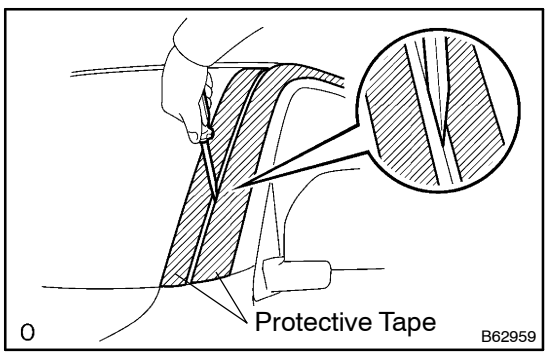


3. REMOVE WINDSHIELD OUTSIDE MOULDING FASTENER NO.1

(a) Put protective tape around the fastener.

(b) Using a screwdriver, disengage the 3 clips, and pull out the fastener by hand.

NOTICE:

- **Be careful not to damage the windshield and fastener.**
- **If the windshield and fastener are damaged, exchange them for new ones.**

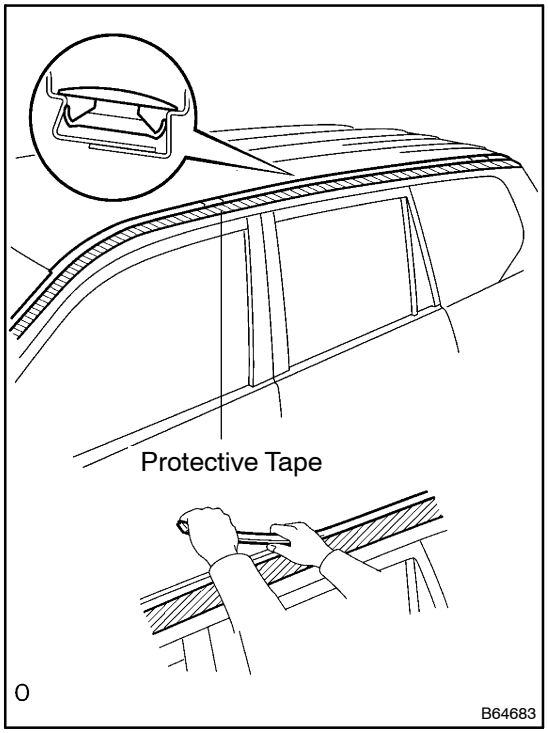


4. REMOVE ROOF DRIP SIDE FINISH MOULDING CENTER NO.2 LH

(a) Put protective tape around the moulding.

(b) Pull out the moulding by hand.

NOTICE:

Be careful not to damage the moulding.

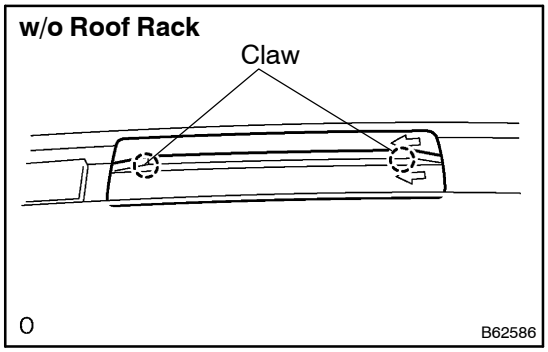


5. REMOVE ROOF DRIP SIDE FINISH MOULDING JOINT COVER LH (w/o ROOF RACK)

(a) Using a screwdriver, disengage the 2 claws and remove the joint cover.

HINT:

Tape the screwdriver tip before use.

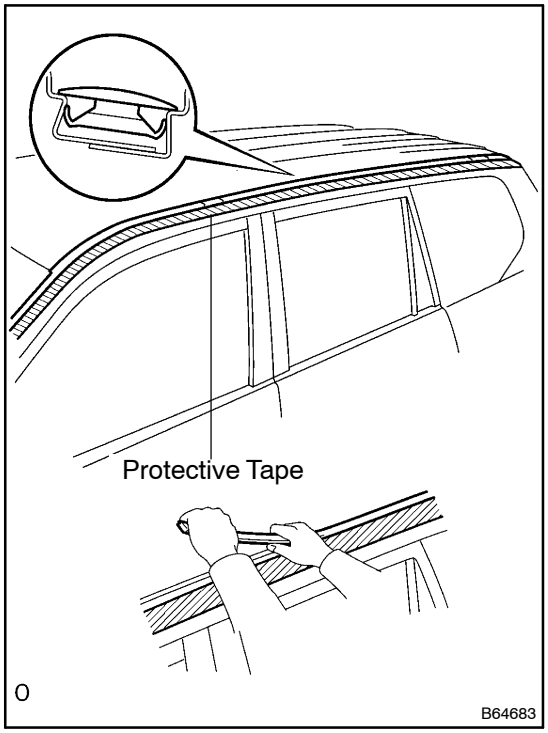


6. REMOVE ROOF DRIP SIDE FINISH MOULDING CENTER LH

(a) Put protective tape around the moulding.

(b) Pull out the moulding by hand.

NOTICE:

Be careful not to damage the moulding.

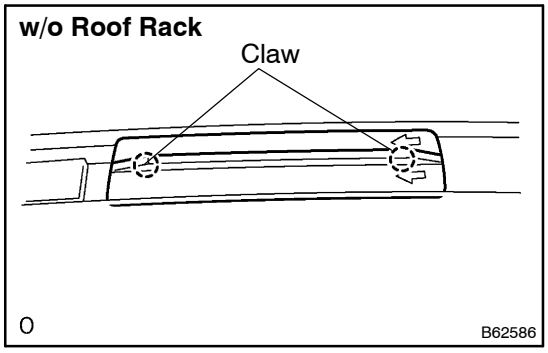


7. REMOVE ROOF DRIP SIDE FINISH MOULDING JOINT COVER LH (w/o ROOF RACK)

(a) Using a screwdriver, disengage the 2 claws and remove the joint cover.

HINT:

Tape the screwdriver tip before use.

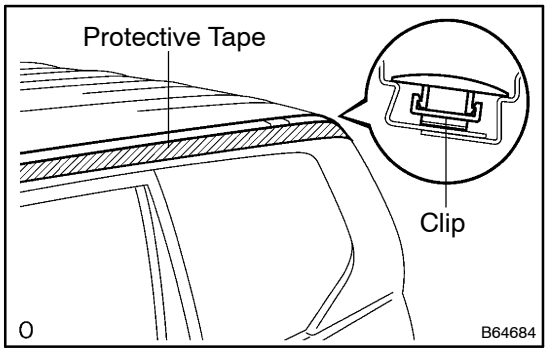


8. REMOVE ROOF DRIP SIDE FINISH MOULDING REAR LH

(a) Put protective tape around the moulding.

(b) Pull out the moulding by hand.

NOTICE:

- **Be careful not to damage the moulding.**
- **Do not remove the clips.**
- **If the clips are damaged or removed accidentally, exchange them for supplied ones.**

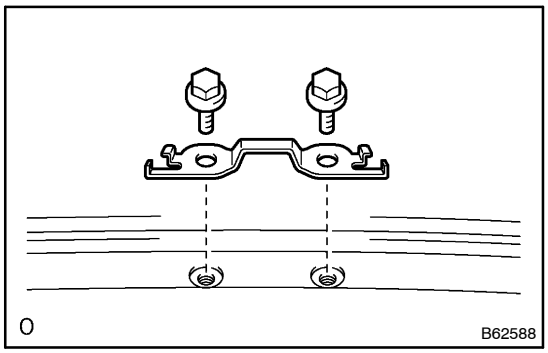

9. REMOVE ROOF RACK BRACKET FRONT


(a) Remove the 2 bolts and bracket.

10. REMOVE ROOF RACK BRACKET CENTER LH

(a) Remove the 2 bolts and bracket.

11. REMOVE ROOF RACK BRACKET REAR LH

(a) Remove the 2 bolts and bracket.

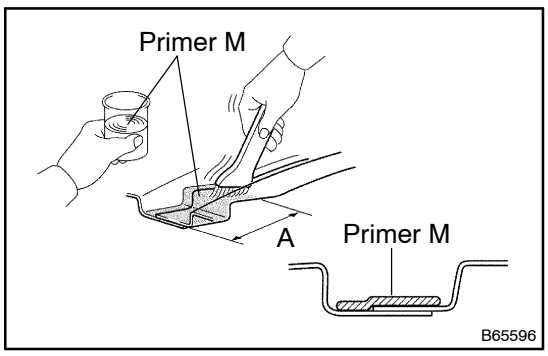


12. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP NO.1

(a) Using a brush, coat the exposed part of the body on the vehicle side with Primer M.


Dimension (A): 40.0 mm (3.125 in.)

NOTICE:

- **Dry the primer coating for 3 minutes or more.**
- **Do not coat the adhesive with Primer M.**
- **Do not keep any of the opened Primer M for later use.**

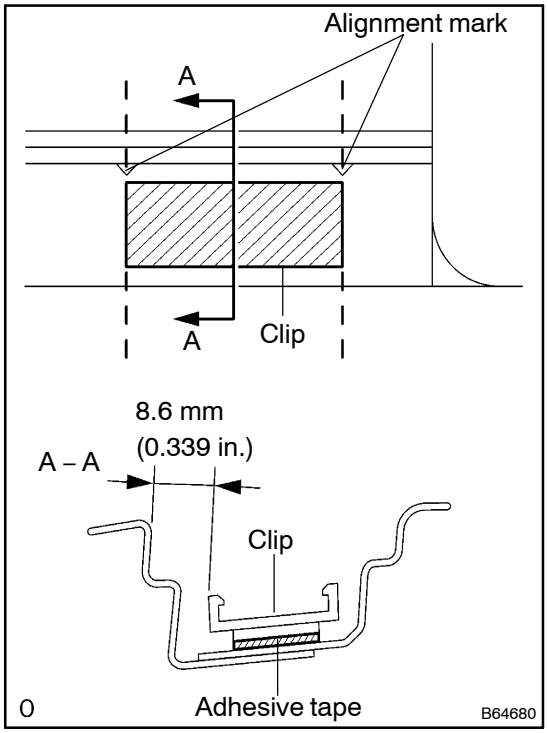


(b) Apply new adhesive tape to the clip, as shown in the illustration.
   (1) Attach the clip onto the protrusion on the vehicle body with adhesive tape.

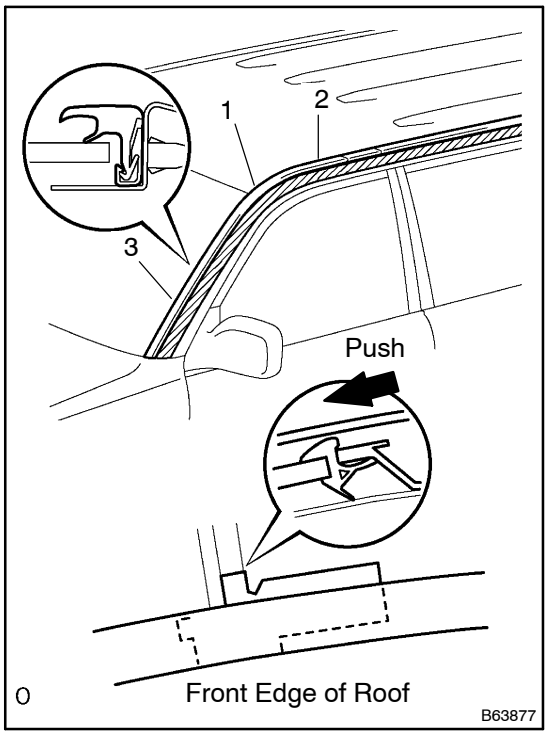


13. INSTALL WINDSHIELD MOULDING OUTSIDE LH

(a) Install the moulding, as shown in the illustration.
   (1) Install the middle of the moulding onto the front edge of the roof.
   (2) Install the rear end of the moulding along the side edge of the roof.
   (3) Install the front end of the moulding along the side edge of the windshield.

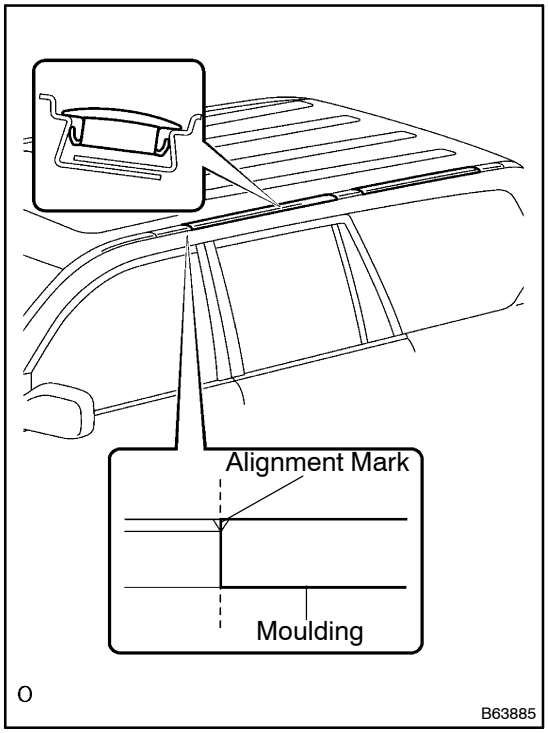

14. INSTALL ROOF DRIP SIDE FINISH MOULDING CENTER NO.2 LH

(a) Install the moulding, as shown in the illustration.
  (1) Aligning the front end of the moulding with the alignment mark on the body, install the moulding.

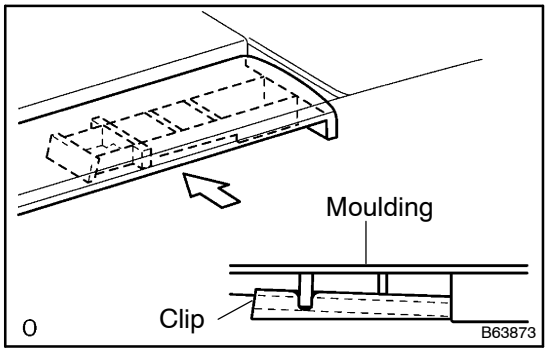

15. INSTALL ROOF DRIP SIDE FINISH MOULDING REAR LH

(a) Install the moulding, as shown in the illustration.

16. INSTALL ROOF DRIP SIDE FINISH MOULDING JOINT COVER LH