
760Q4–02

REPLACEMENT

HINT:


The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. REMOVE BACK DOOR TRIM PANEL ASSY (See page 75–37)

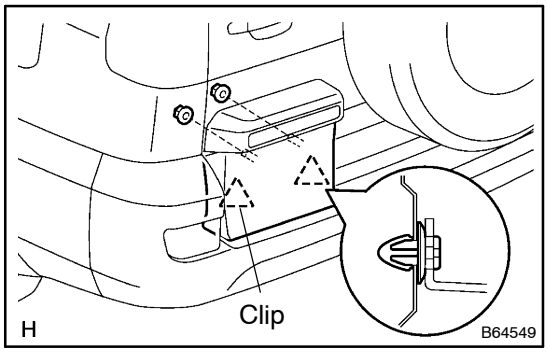


2. REMOVE REAR LICENSE PLATE BRACKET STAY LOWER (w/ SPARE TIRE)

(a) Remove the 2 nuts, 2 clips and bracket stay.

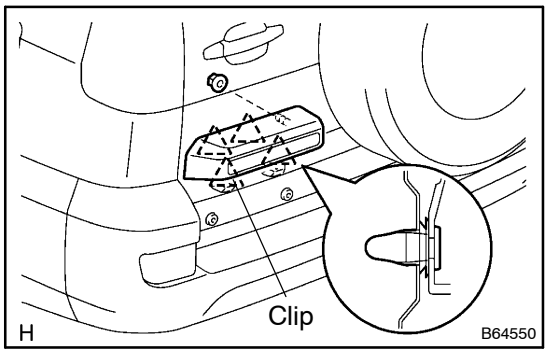


3. REMOVE LICENSE PLATE LAMP COVER LH (w/ SPARE TIRE)

(a) Remove the nut, 4 clips and lamp cover.

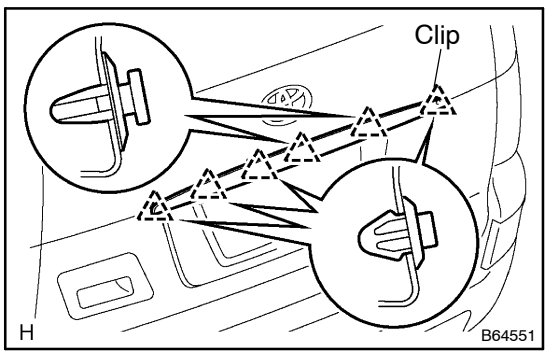

4. REMOVE LICENSE REAR LAMP COVER (w/o SPARE TIRE)

(a) Remove the 6 clips and lamp cover.

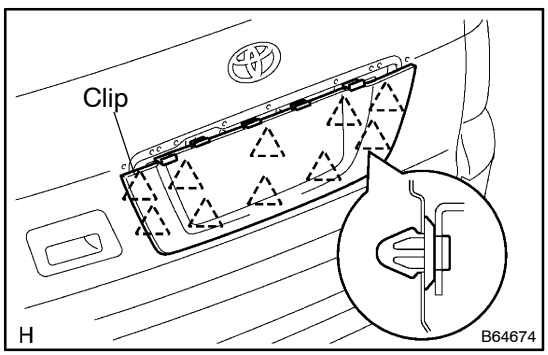

5. REMOVE BACK DOOR GARNISH SUB–ASSY OUTSIDE (w/o SPARE TIRE)

(a) Remove the 10 clips and garnish sub–assy.